

Aconatic

คู่มือการใช้งาน

LED TV

รุ่น 55RS542AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์


เก็บคู่มือนี้ไว้ใช้อ้างอิง

ข้อควรระวังเรื่องความปลอดภัย


คำแนะนำเรื่องความปลอดภัย

⚠️ ข้อควรระวัง


เพื่อป้องกันอันตรายจากการถูกไฟฟ้าช็อต อย่าเปิดฝาครอบเครื่อง
อย่าตรวจสอบเครื่องด้วยตัวเองเด็ดขาด เพราะอาจทำให้ได้รับ
อันตรายจากไฟฟ้าแรงสูงได้ หากเครื่องมีปัญหาควรเรียกช่าง
ผู้ชำนาญทำการตรวจสอบให้เท่านั้น

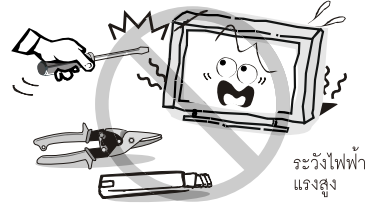

เพื่อป้องกันการเกิดไฟไหม้หรือถูกไฟฟ้าช็อต อย่าวางเครื่องทิ้งไว้ให้โดน
ฝนสาด หรือใช้งานเครื่องในบริเวณที่มีความชื้นสูง อย่างนำภาชนะที่บรรจุน้ำ
หรือของเหลวใด ๆ มาวางใกล้ตัวเครื่อง เช่น เขี่ยก้นน้ำ แจกันดอกไม้ อาจ
ทำให้น้ำหกใส่ตัวเครื่องได้

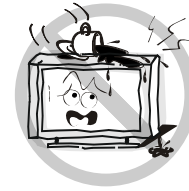


หากที่ตัวเครื่องมีควันขึ้น มีอาการแปลก ๆ หรือมีกลิ่นเหม็นไหม้ ให้ปิดเครื่อง
และถอดปลั๊กออกจากเต้ารับทันที จากนั้นควรเรียกช่างผู้ชำนาญ หรือติดต่อ
สอบถามกับศูนย์บริการฯ ใกล้บ้านเพื่อทำการแก้ไข อย่าพยายามตรวจสอบ
เครื่องด้วยตัวเองเด็ดขาด เพราะอาจทำให้ได้รับอันตรายได้

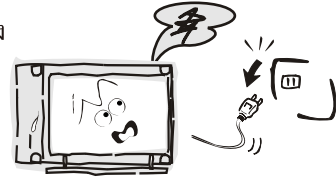


ระวังอย่าให้วัตถุใด ๆ หล่นเข้าไปในตัวเครื่อง เช่น คลิปหนีบกระดาษ
เพราะอาจทำให้วงจรไฟฟ้าภายในตัวเครื่องเกิดการลัดวงจรได้
อย่าปล่อยให้เด็กเล็กอายุต่ำกว่า 3 ขวบ เล่นตัวเครื่องหรือเล่นอยู่ใกล้
กับตัวเครื่อง



ในขณะที่ต่อเครื่องใช้งาน ควรจัดวางสายไฟของเครื่องให้เรียบร้อย
ไม่ให้บิดเบี้ยวหักงอ เพื่อช่วยให้อายุการใช้งานของเครื่องนานขึ้น
และป้องกันไม่ให้สายไฟชำรุด ควรใช้งานกับระบบไฟฟ้าที่ติดตั้ง
สายดินเท่านั้น อย่าต่อเครื่องใช้งานกับเต้ารับที่ชำรุดหรือปลั๊กพ่วง
ที่สายไฟชำรุด เพราะอาจทำให้ได้รับอันตรายจากกระแสไฟฟ้ารั่วได้

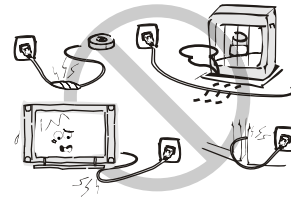


เพื่อป้องกันอันตรายจากการเกิดไฟไหม้ อย่างนำวัตถุที่มีเปลวไฟมาวาง
ใกล้กับตัวเครื่อง เช่น เปลวไฟจากเทียนไข เป็นต้น

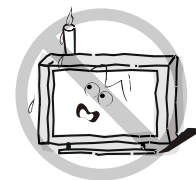


ข้อควรระวังเรื่องความปลอดภัย


คำแนะนำเรื่องความปลอดภัย

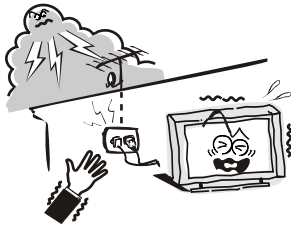

เสาดอากาศภายนอกที่ต่อใช้งานกับตัวเครื่อง ควรติดตั้งอยู่ห่างจากสายไฟฟ้าแรงสูงเสมอ ในขณะที่มีฝนตกหนักหรือฟ้าผ่า ให้ปิดเครื่อง ถอดปลั๊กและถอดสายอากาศออกเสมอ ไม่แนะนำให้ติดตั้งช่องเสียบสายอากาศกับเต้ารับไฟฟ้าภายในตู้ใกล้กันเกินไป เพราะอาจทำให้กระแสไฟฟ้าสปาร์กถึงช่องเสียบสายอากาศจนทำให้เครื่องเสียหายได้

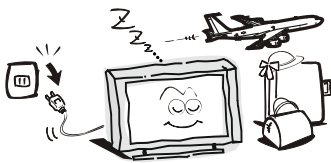

ปิดเครื่องและถอดปลั๊กออกเสมอเมื่อใช้งานเครื่องเสร็จแล้วหรือเมื่อไม่ได้ใช้งานเครื่องติดต่อกันเป็นเวลานาน ถอดปลั๊กออกทันทีเมื่อเกิดฝนตกหรือฟ้าผ่า อย่าจับที่สายอากาศในขณะที่ฟ้ากำลังผ่า

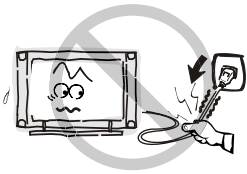


ขณะถอดปลั๊ก ให้จับที่ตัวปลั๊กแล้วดึงออก ไม่ควรดึงที่สายไฟ
ไม่ควรจับที่ปลั๊กไฟ ในขณะที่มือเปียก




การฟังเสียงจากหูฟังหรือ HEAD-PHONE ที่เสียงดังมากเกินไป อาจทำให้เป็นอันตรายกับระบบการได้ยินหรือแก้วหูได้

คำแนะนำในการติดตั้งเครื่อง

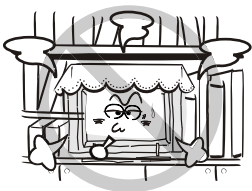


ควรติดตั้งและใช้งานเครื่องในบริเวณที่มีอากาศถ่ายเทได้สะดวก อย่างนำผ้า กระจาดหรือวัตถุใดๆ มาปิดหรือคลุมที่ตัวเครื่อง เช่น กระจาดหนังสือพิมพ์ ผ้าม่าน ผ้าคลุม เป็นต้น ในการติดตั้งเครื่อง ควรให้มีช่องว่างรอบๆ ตัวเครื่องอย่างน้อยด้านละ 10 ซม.

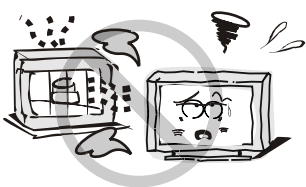


ควรติดตั้งและใช้งานเครื่องใกล้กับแหล่งกำเนิดความร้อน เช่น เครื่องกระจายความร้อนเตาอบ หรือเครื่องขยายเสียง เป็นต้น อย่าวางเครื่องทิ้งไว้ให้โดนแสงแดดส่องโดยตรง แนะนำให้ติดตั้งเครื่องในบริเวณที่มีแสงสว่างเพียงพอ เพราะการดูโทรทัศน์ในบริเวณที่มีแสงน้อยเกินไป อาจทำให้มีผลกระทบต่อการทำงานของดวงตาได้ ควรเก็บเครื่องหรือใช้งานให้ห่างจากบริเวณที่มีสนามแม่เหล็กเข้มข้น เช่น สนามแม่เหล็กจากตู้ลำโพง ซึ่งอาจทำให้จอภาพมีสีเพี้ยนได้

ข้อควรระวังเรื่องความปลอดภัย


คำแนะนำเรื่องความปลอดภัย

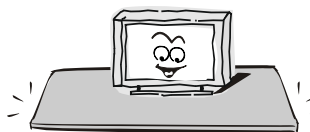


อย่าติดตั้งและใช้งานเครื่องในรถยนต์ โต๊ะ ชั้นวางหรือบริเวณใด ๆ ที่ไม่มั่นคง เพราะอาจเป็นสาเหตุทำให้เครื่องตกหล่นเสียหายได้ หากจะติดตั้งและใช้งานเครื่องในรถยนต์จะต้องติดตั้งให้แข็งแรงแน่นหนา โดยเฉพาะเมื่อติดตั้งเครื่องโดยใช้ขาตั้ง คุณต้องระมัดระวังเป็นพิเศษเมื่อรถออกตัวหรือเบรคกระทันหัน ซึ่งแรงกระทบกระเทือนดังกล่าวอาจทำให้โทรทัศน์ล้มคว่ำเสียหายได้

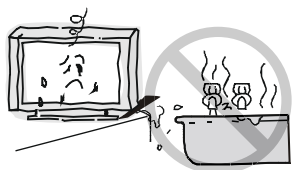

อย่าติดตั้งและใช้งานเครื่องใกล้กับแหล่งน้ำ เช่น บริเวณใกล้อ่างอาบน้ำ อ่างน้ำหรือซิงค์ล้างจาน ห้องซักรีด ในบริเวณที่พื้นเปียกชื้น หรือรอบๆ สระว่ายน้ำ เป็นต้น

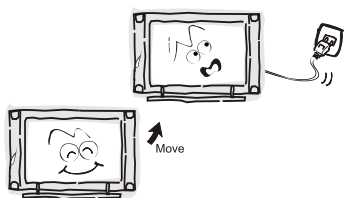


เมื่อย้ายเครื่องมาจากบริเวณที่มีอากาศเย็น ไปยังบริเวณที่มีอากาศร้อน ไม่ควรเปิดใช้งานเครื่องในที่ เพราะอาจมีความชื้นเกิดขึ้นภายในเครื่องได้ แนะนำให้วางเครื่องทิ้งไว้ระยะเวลาหนึ่ง เพื่อรอให้ความชื้นระเหยออกไปจนหมดก่อน จึงค่อยเปิดเครื่องใช้งานต่อไป

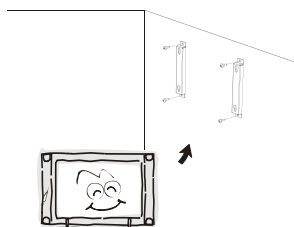

เพื่อเป็นการป้องกันความเสียหายที่อาจเกิดขึ้นจากการติดตั้งและใช้งานเครื่อง ไม่ว่าจะตั้งพื้นโดยใช้ขาตั้งหรือแขวนบนผนัง ควรติดตั้งเครื่องตามคำแนะนำในคู่มือการติดตั้งเครื่องเสมอ

การทำความสะอาด

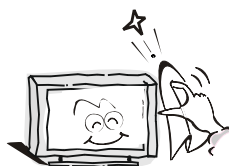

ปิดเครื่องและถอดปลั๊กออกก่อนที่จะทำความสะอาดเครื่องเสมอ
อย่าใช้น้ำยาทำความสะอาดที่เป็นของเหลวหรือสเปรย์มาทำความสะอาดเครื่อง
แนะนำให้ใช้เพียงผ้าสะอาดชุบน้ำเปียกหมาด ๆ เช็ดทำความสะอาดเครื่องเท่านั้น


สำหรับการป้องกันอันตรายที่ดีที่สุด คือ ควรอ่านคู่มือการใช้งานให้ละเอียดและทำความเข้าใจก่อนที่จะเริ่มต้นติดตั้งและใช้งานเครื่อง และควรเก็บรักษาคู่มือการใช้งานไว้เพื่อใช้อ้างอิงในอนาคต

เนื้อหา


ข้อควรระวัง.....	1
อุปกรณ์เครื่อง.....	5
การติดตั้งเครื่อง.....	6
ส่วนประกอบเครื่อง.....	7
การเชื่อมต่ออุปกรณ์.....	9
รีโมทคอนโทรล.....	11
การใช้งานเครื่องเบื้องต้น.....	14
การเล่นมัลติมีเดีย.....	22
การแก้ไขปัญหาเครื่องเบื้องต้น.....	24

อุปกรณ์ Accessories

โปรดตรวจสอบอุปกรณ์ที่มาพร้อมกับ LED TV ของคุณตามรายการ หากรายการใดขาดหายไป กรุณาติดต่อตัวแทนจำหน่ายของคุณ



LED TV

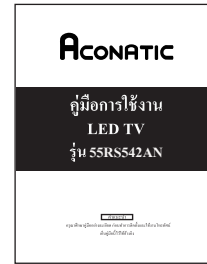

คู่มือการใช้งานเครื่อง



รีโมทคอนโทรล



บัตรรับประกัน






ถ่าน 2 ก้อน



COAX adaptor

การติดตั้งเครื่อง LED TV




การติดตั้งขาตั้งเครื่อง Installing the Stand

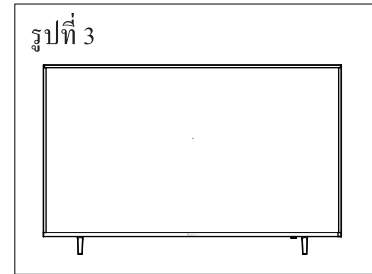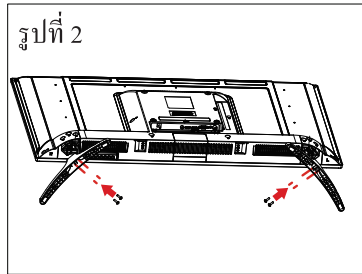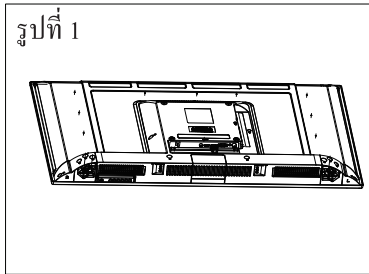

1. นำเครื่องวางบนพื้นที่ราบเรียบ ตามรูปที่ 1
2. นำขาตั้งใส่ให้สนิทและขันสกรู 4 ตัวให้แน่น ตามรูปที่ 2
3. ตั้งทีวีตามรูปที่ 3


การถอดขาตั้งเครื่อง Disconnecting the stand

1. นำเครื่องวางบนพื้นที่ราบเรียบ ตามรูปที่ 1
2. ถอดสกรู 4 ตัวและถอดขาตั้งออกจากเครื่อง ตามรูปที่ 2
3. ดึงขาตั้งเครื่องออกจากทีวี ตามรูปที่ 3

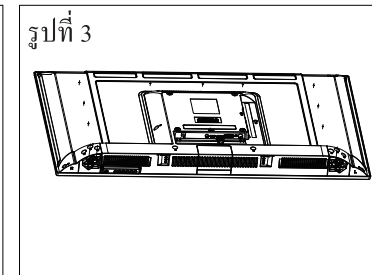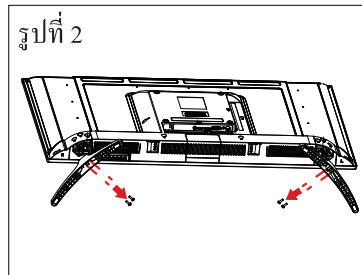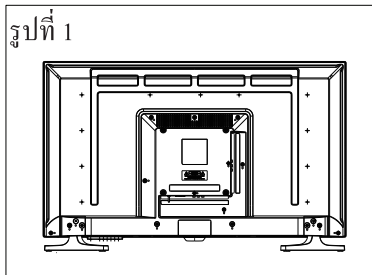


ส่วนประกอบเครื่อง

ด้านหน้าเครื่อง Front View

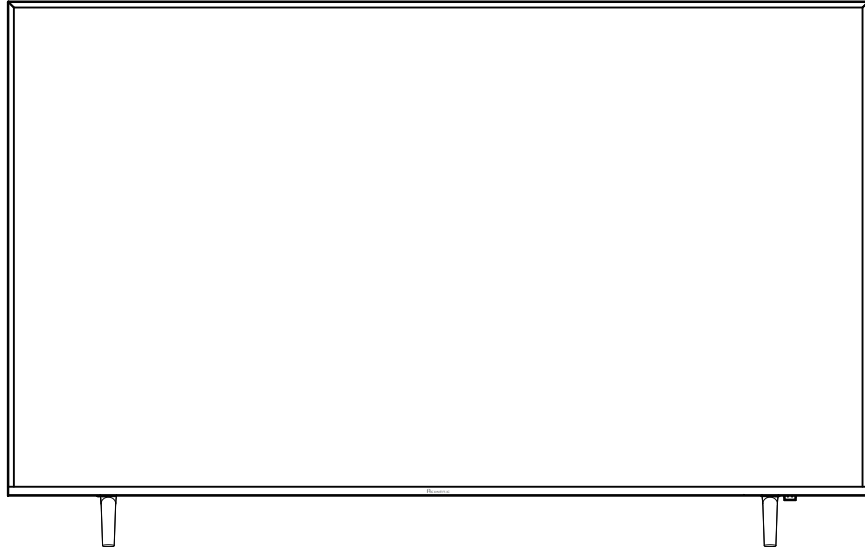

ส่วนประกอบเครื่อง

ด้านหลังเครื่อง Rear View

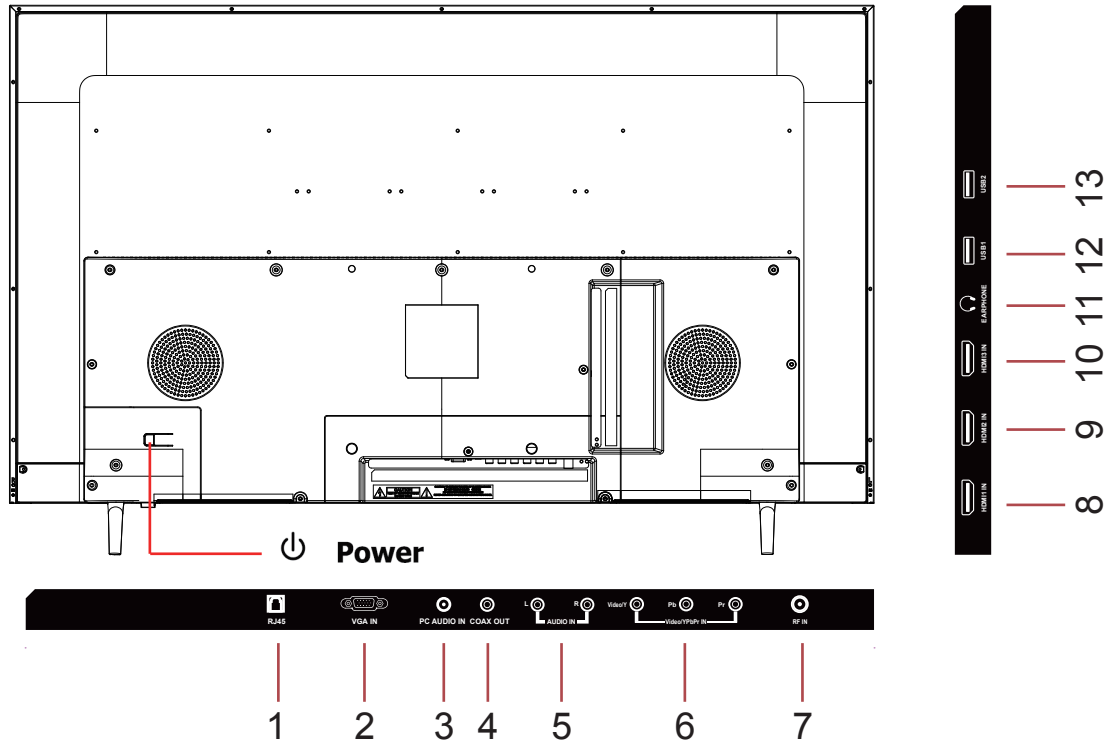

รายการ	การทำงาน
1	RJ45 ช่องเชื่อมต่อสายอินเทอร์เน็ต
2	VAG IN ช่องเชื่อมต่อสาย VGA
3	PC AUDIO IN ช่องเชื่อมต่อสายสัญญาณเสียงจาก คอมพิวเตอร์
4	COAX OUT ช่องเชื่อมต่อสัญญาณเสียงออกแบบดิจิตอล COAX
5	AV IN ช่องต่อสัญญาณภาพและสัญญาณเสียง
6	VIDEO IN ช่องต่อสัญญาณภาพ
7	RF IN ช่องต่อสายอากาศ VHF / UHF
8	HDMI1 ช่องเสียบสาย HDMI 1
9	HDMI2 ช่องเสียบสาย HDMI 2
10	HDMI3 ช่องเสียบสาย HDMI 3
11	EARPHONE ช่องเสียบต่อหูฟัง เมื่อเสียบแล้ว เสียงทีวีจะถูกตัด แต่เสียงจะออกที่หูฟัง
12	USB1 ช่องเสียบ USB 1
13	USB2 ช่องเสียบ USB 2

การเชื่อมต่ออุปกรณ์


การเชื่อมต่อสายอากาศ

ช่องเสียบสายอากาศติดตั้งในห้องในอาคาร โดยทั่วไปจะเป็นดังภาพด้านล่าง (โปรดใช้สายที่ถูกต้องตามชนิดของสายอากาศ) ขอแนะนำให้ใช้สายนำสัญญาณที่มีอิมพีแดนซ์ 75 โอห์ม เพื่อให้ได้รับสัญญาณที่มีคุณภาพดีที่สุด




การเชื่อมต่อสายสัญญาณโดยสาย HDMI


คุณสามารถเล่นภาพและเสียงที่มีความละเอียดคมชัดสูงจากเครื่องเล่นภายนอกหรือแหล่งที่มาอื่นๆ โดยเชื่อมต่อสัญญาณผ่านสาย HDMI เข้ากับทีวีของคุณได้ ตามภาพด้านล่าง (ช่อง HDMI 3 รองรับฟังก์ชัน MHL)

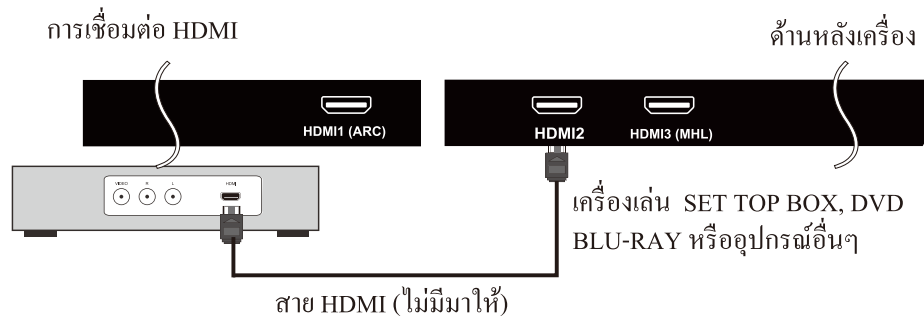

การเชื่อมต่อสัญญาณผ่านสาย Component(Y/Pb/Pr) + Audio L/R

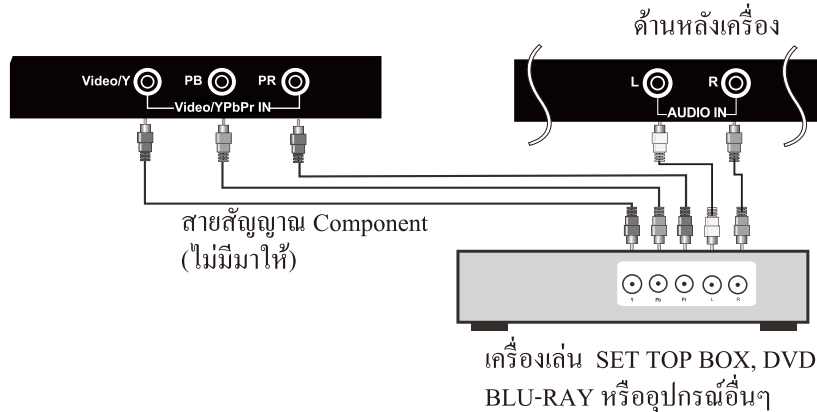

การเชื่อมต่อสายสัญญาณผ่านสาย Video + Audio L/R

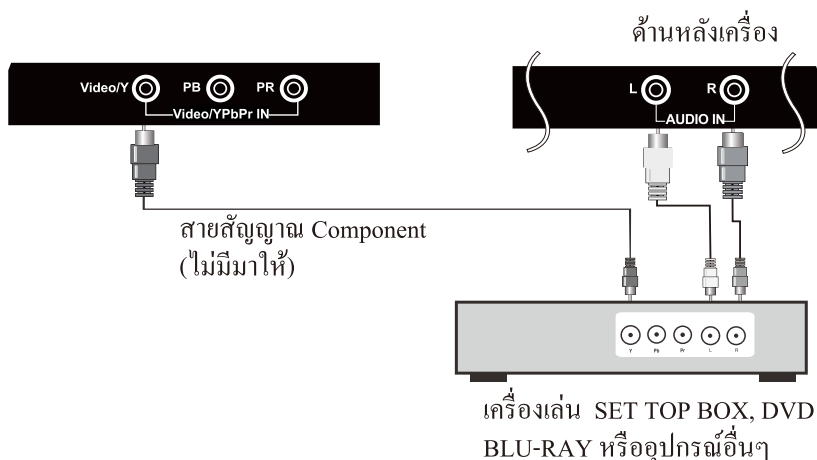

การเชื่อมต่ออุปกรณ์

การรองรับสัญญาณ

YPbPr	HDMI
480i	480i
576i	576i
480P	480P
576P	576P
720P / 50 Hz	720P / 50 Hz
720P / 60 Hz	720P / 60 Hz
1080i / 50 Hz	1080i / 50 Hz
1080i / 60 Hz	1080i / 60 Hz
1080P / 50 Hz	1080P / 50 Hz
1080P / 60 Hz	1080P / 60 Hz
	2160P/60Hz

การใช้งานรีโมทคอนโทรล

การใส่แบตเตอรี่รีโมทคอนโทรล

1. เปิดฝาแบตเตอรี่ออก
2. นำแบตเตอรี่ขนาด AAA 1.5 โวลต์ จำนวน 2 ก้อนใส่ให้ถูกต้องตามขั้ว
3. ปิดฝาแบตเตอรี่ให้เรียบร้อย




⚠️ ข้อควรระวัง

- * ควรใช้แบตเตอรี่ตามที่กำหนดเท่านั้น
- * ไม่ควรใช้แบตเตอรี่ก้อนเก่าและใหม่รวมกัน เพราะอาจเกิดการรั่วไหลของสารเคมีที่ทำให้เกิดไฟไหม้ได้
- * ใส่แบตเตอรี่ให้ถูกต้องตามเครื่องหมายขั้ว (+) ขั้ว (-)
- * ควรทิ้งแบตเตอรี่ที่ใช้แล้วในที่ที่กำหนด ไม่ควรรวมกับขยะทั่วไป
- * เก็บแบตเตอรี่ให้พ้นมือเด็กและสัตว์เลี้ยง
- * เมื่อไม่ได้ใช้งานรีโมทคอนโทรลเป็นเวลานาน ควรถอดแบตเตอรี่ออก


การใช้งานรีโมทคอนโทรล

1. หันทิศทางรีโมทคอนโทรลให้ตรงกับตัวรับสัญญาณที่ทีวี บริเวณมุมขวาล่างตามภาพ
2. ระยะการใช้งานของรีโมทคอนโทรลอยู่ที่ประมาณ 5 เมตร และมุมประมาณ 30 องศา
3. หลีกเลี่ยงสิ่งกีดขวางระหว่างทีวีกับรีโมทคอนโทรล

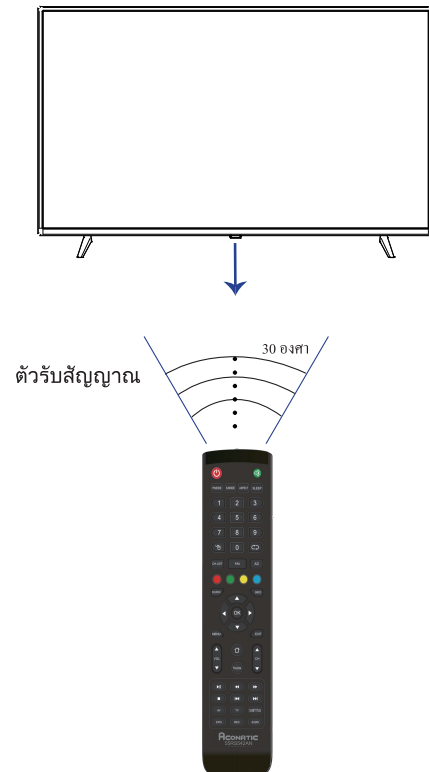

ปุ่มควบคุม รีโมทคอนโทรล

รีโมทคอนโทรล

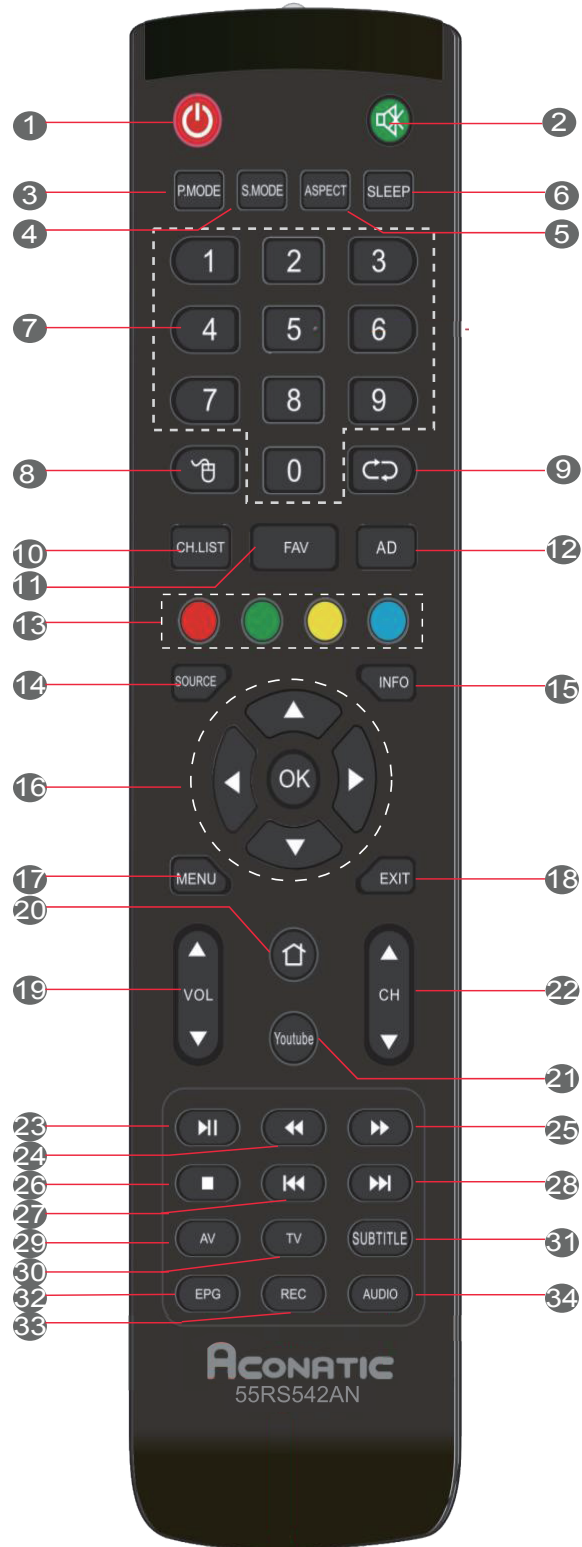

การใช้งานรีโมทคอนโทรล

ปุ่มควบคุมรีโมทคอนโทรล

1. POWER	ปุ่ม ปิด / เปิด เครื่อง
2. MUTE	ปุ่ม คัดเสียง
3.P.MODE	ปุ่ม เลือก โหมดภาพ
4.S.MODE	ปุ่ม เลือก โหมดเสียง
5.ASPECT	ปุ่ม ปรับ อัตราส่วนจอภาพ
6.SLEEP	ปุ่ม ตั้ง เวลาปิดเครื่อง
7.0-9	ปุ่ม ตัวเลข เลือกช่อง
8.MOUSE	ปุ่ม เมาส์
9.↶↷	ปุ่ม เลือก กลับ ไปที่ ช่องเดิม ก่อนหน้า นี้
10.CH.LIST	ปุ่ม เลือก รายการ ที่บันทึก
11.FAV	ปุ่ม เลือก ช่อง ที่ชื่นชอบ
12.AD	ปุ่ม เลือก ระบบเสียง AD (ผู้พิการทางสายตา)
13.Color	ปุ่ม สำหรับ ใช้งาน ในโหมด เทลเท็กซ์
14.SOURCE	ปุ่ม เลือก ช่องสัญญาณ
15.INFO	ปุ่ม แสดง รายละเอียด ของช่องรายการ
16.▲▼◀▶	ปุ่ม เลือก บน ล่าง ซ้าย ขวา
17.MENU	ปุ่ม เปิด / ปิด เมนูตั้งค่า
18.EXIT	ปุ่ม ออกจากเมนู
19.VOL(+/-)	ปุ่ม เพิ่ม / ลด เสียง
20.🏠	ปุ่ม เข้าหน้าโฮม
21.Youtube	ปุ่ม เข้า Youtube
22.CH(^/∨)	ปุ่ม เลือก เปลี่ยนช่อง เพิ่ม / ลด
23 ▶ 	ปุ่ม เล่น / หยุดเล่นชั่วคราว
24 ◀◀	ปุ่ม ถอยหลังแบบเร็ว
25 ▶▶	ปุ่ม เดินหน้าแบบเร็ว
26. ■	ปุ่ม หยุดเล่นโปรแกรม
27 ◀◀	ปุ่ม ถอยหลังแทร็ค / ไฟล์
28 ▶▶	ปุ่ม ข้ามแทร็ค / ไฟล์
29.AV	ปุ่ม เลือก ช่องสัญญาณ AV
30.TV	ปุ่ม เลือก ช่องสัญญาณ TV
31.SUBTITLE	ปุ่ม เปิด / ปิด คำบรรยายใต้ภาพ
32.EPG	ปุ่ม เลือก ข้อมูลผังรายการ (โหมด DTV)
33.REC	ปุ่ม บันทึกรายการ
34.AUDIO	ปุ่ม เลือก ระบบเสียง

การใช้งานเครื่องเบื้องต้น


การเปิดและการปิดเครื่อง

กดปุ่ม POWER ที่รีโมทคอนโทรล หรือที่แผงคอนโทรลด้านข้างเครื่องทีวี หากไม่มีสัญญาณใด ๆ ภายใน 15 นาที เครื่องจะปิดโดยอัตโนมัติ



การตั้งค่าเริ่มต้น(ครั้งแรก)


เชื่อมต่อสายอากาศ เข้ากับด้านหลังเครื่องที่ช่อง RF
กดปุ่ม OK เพื่อเริ่มการตั้งค่า

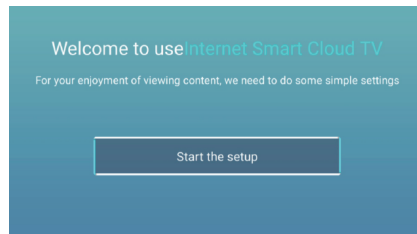

1. กด **【▼】 / 【▲】** เพื่อเลือกภาษา
2. กด **【▼】 / 【▲】** เพื่อเลือกประเทศ
3. กด **【▼】 / 【▲】** เพื่อเลือกเขตเวลา
4. กดปุ่ม OK เพื่อเชื่อมต่อ WIFI / อินเทอร์เน็ต
กด **【▶】** เพื่อเลือกแหล่งสัญญาณ




5. กด **【▼】 / 【▲】** เพื่อเลือกช่องสัญญาณ

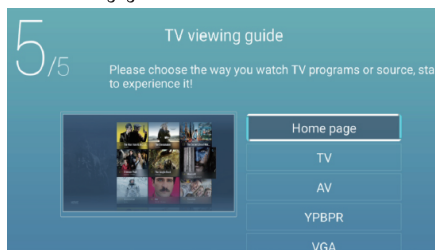

การเปลี่ยนช่อง

1. กดปุ่ม CH +/- ที่รีโมทคอนโทรลเพื่อเลือกเปลี่ยนช่องสถานีในรายการที่บันทึกไว้ได้ตามที่คุณต้องการ


*กดปุ่ม **【↺】** เพื่อย้อนกลับไปช่องสถานีก่อนหน้า

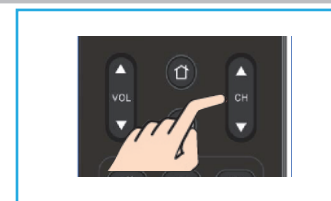

การใช้งานเครื่องเบื้องต้น

การปรับระดับเสียง


กดปุ่ม VOL +/- ที่รีโมทคอนโทรลหรือทีวี เพื่อปรับระดับเสียงตามต้องการ
กดปุ่ม MUTE เพื่อตัดเสียงชั่วคราว กดอีกครั้งหรือกดปุ่ม VOL+ เพื่อเปิดเสียงปกติ

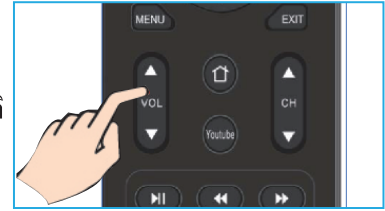

การเลือกสัญญาณ INPUT

การเลือกสัญญาณทีวีหรือแหล่งสัญญาณภายนอกอื่น ๆ


1. กดปุ่ม **INPUT** ที่รีโมทคอนโทรล
2. กดปุ่ม **▲▼** เลือกแหล่งสัญญาณที่คุณต้องการเล่น
ดังนี้ DTV, ATV, AV, HDMI1, HDMI2, HDMI3 หรือ MEDIA
3. กดปุ่ม **OK** ยืนยันการเลือก

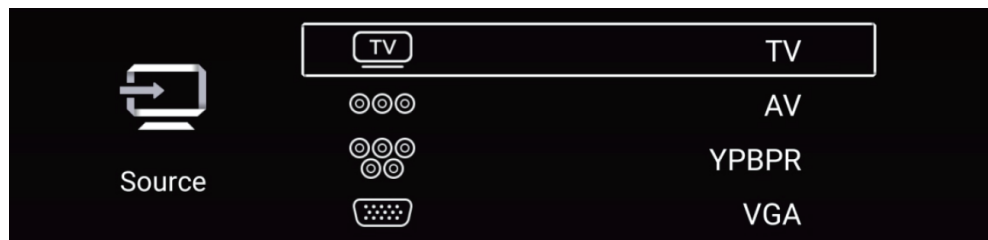


การใช้งานเครื่องเบื้องต้น

เมนูช่อง

กดปุ่ม MENU ที่รีโมทคอนโทรลเพื่อเปิดหน้าเมนูหลัก



1. กดปุ่ม ◀ / ▶ เพื่อเลือก CHANNEL ในหน้าเมนูหลัก แล้วกดปุ่ม OK/▼ เพื่อเข้าเมนูย่อย
2. กดปุ่ม ▼ / ▲ เพื่อเลือกตัวเลือกที่คุณต้องการปรับค่าในเมนู CHANNEL
3. กดปุ่ม OK /◀ / ▶ เพื่อปรับค่า
4. หลังจากที่คุณปรับค่าต่าง ๆ เรียบร้อยแล้ว กดปุ่ม MENU เพื่อกลับไปเมนูก่อนหน้า

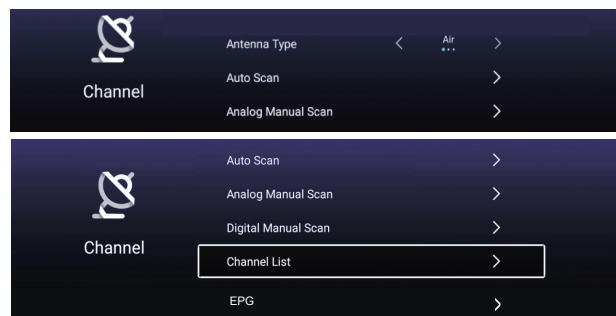

Antenna Type : สายสัญญาณ RF

เลือกสายเคเบิล / สายอากาศ

Auto Tuning : ค้นหาสถานีอัตโนมัติ

กดปุ่ม ▼ / ▲ เพื่อเลือก Auto Tuning แล้วกดปุ่ม OK / ▶ เพื่อเข้าทำรายการ

ATV Manual Tuning : ค้นหาสถานี ATV ด้วยตนเอง

กดปุ่ม ▼ / ▲ เพื่อเลือก ATV Manual Tuning แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

กดปุ่ม ◀ / ▶ เพื่อเลือก channel แล้วกดปุ่ม OK เพื่อเริ่มต้นค้นหาสถานี

DTV Manual Tuning : ค้นหาสถานี DTV ด้วยตนเอง

กดปุ่ม ▼ / ▲ เพื่อเลือก DTV Manual Tuning แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

กดปุ่ม ◀ / ▶ เพื่อเลือก channel แล้วกดปุ่ม OK เพื่อเริ่มต้นค้นหาสถานี

Channel List : ตารางรายการ

กดปุ่ม ▼ / ▲ เพื่อเลือก Channel List แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

ที่ส่งมาจากแหล่งสัญญาณ จากสถานีส่ง


EPG : ข้อมูลผังรายการ (โหมด DTV)

กดปุ่ม ▼ / ▲ เพื่อเลือก EPG แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

การใช้งานเครื่องเบื่องต้น

เมนูภาพ

กดปุ่ม ▼ / ▲ เพื่อเลือกตัวเลือกที่คุณต้องการปรับในเมนูภาพ

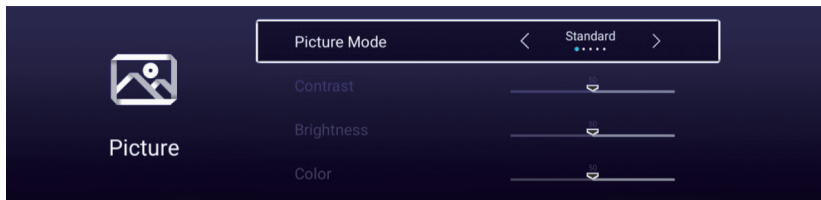

1. โหมดภาพ

กดปุ่ม ▼ / ▲ เพื่อเลือกโหมดภาพ, แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย คุณสามารถปรับค่า Contrast, Brightness, Color, Sharpness และ Tint เมื่อคุณอยู่ในโหมดกำหนดเอง

2. การปรับค่า Contrast / Brightness / Color / Tint / Sharpness

กดปุ่ม ▼ / ▲ เพื่อเลือกแล้วกดปุ่ม ◀ / ▶ เพื่อปรับค่า

Contrast ปรับค่าความเข้มของภาพแต่เงาของภาพจะคงที่

Brightness ปรับความสว่างทั้งหมดของภาพ

Color ปรับความอึมตัวของสี

Tint ปรับการชดเชยของสีให้เฉพาะกับทีวีระบบ NTSC เท่านั้น

3. Color Temp

กดปุ่ม ▼ / ▲ เพื่อเลือก Color Temperature แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

กดปุ่ม ▼ / ▲ เพื่อเลือกโหมดการใช้งาน คือ Cold, Normal, Warm

คุณสามารถปรับค่า สีแดง / สีเขียว / สีน้ำเงิน ได้เมื่อคุณเลือกโหมด User Mode

4. Noise Reduction

ปรับค่าการกรองและลดสัญญาณรบกวนภาพและคุณภาพของภาพ

กดปุ่ม ▼ / ▲ เพื่อเลือก Noise Reduction แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

5. Aspect Ratio

กดปุ่ม ▼ / ▲ เพื่อเลือกแล้วกดปุ่ม ◀ / ▶ เพื่อปรับค่า

ตัวเลือก : อัตโนมติ/16:9/4:3/ZOOM1/ZOOM2


6. More setting

กดปุ่ม ▼ / ▲ เพื่อเลือกปรับการตั้งค่าอื่นๆ


การใช้งานเครื่องเบื่องตน

เมนูเสียง

กดปุ่ม MENU ที่รีโมทคอนโทรลเพื่อเปิดเมนูหลัก



1. กดปุ่ม ◀ หรือ ▶ เพื่อเลือก SOUND
2. กดปุ่ม ▲ หรือ ▼ เพื่อเลือกรายการแล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

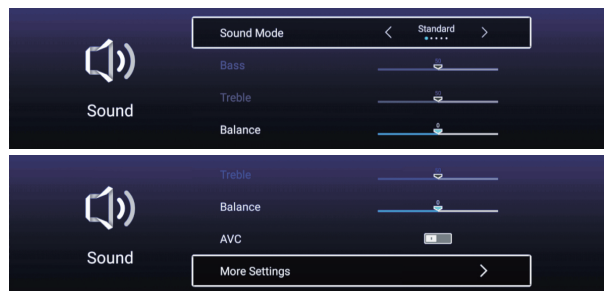

1. โหมดเสียง

กดปุ่ม ▼ / ▲ เพื่อเลือก ตั้งค่าเสียง แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
กดปุ่ม ▼ / ▲ เพื่อเลือก

หมายเหตุ คุณสามารถกดปุ่ม SMODE ที่รีโมทคอนโทรลเพื่อเปลี่ยนโหมดเสียงได้โดยตรง

- | | |
|----------|--|
| Standard | ให้เสียงมีสมดุลในทุก ๆ สภาพแวดล้อม |
| Music | ให้เสียงเหมือนเสียงต้นฉบับเหมาะกับเสียงเพลง |
| Movie | ให้เสียงแหลมและเสียงเบสที่เหมาะสมสำหรับการชมภาพยนตร์ |
| Sport | ช่วยเพิ่มเสียงคนบรรยายสำหรับคอกีฬา |
| Personal | เลือกปรับเสียงด้วยตนเอง |

2. Treble / Bass

กดปุ่ม ▼ / ▲ เพื่อเลือก แล้วกดปุ่ม ◀ / ▶ เพื่อปรับค่า
หมายเหตุ เสียงแหลมและเสียงเบสคุณสามารถปรับได้ในโหมดผู้ใช้

3. Balance

กดปุ่ม ▼ / ▲ เพื่อเลือก แล้วกดปุ่ม ◀ / ▶ เพื่อปรับค่า

4. Auto Volume level

กดปุ่ม ▼ / ▲ เพื่อเลือก Auto Volume level แล้วกดปุ่ม OK เพื่อเลือก On หรือ Off

5. AD Switch

กดปุ่ม ▼ / ▲ เพื่อเลือก Auto Volume level แล้วกดปุ่ม OK เพื่อเลือก On หรือ Off
เป็นฟังก์ชันที่รองรับสำหรับคนพิการทางสายตา ถ้าเลือก On จะมีเสียงบรรยายความเป็นไปของเหตุการณ์
ในหน้าจอทีวีในขณะนั้น ซึ่งเป็นสัญญาณเสียงพิเศษที่ส่งมาจากสถานี

6. Hearing Impaired (ผู้บกพร่องทางการได้ยิน)

กดปุ่ม OK เพื่อเลือก Hearing Impaired (ผู้บกพร่องทางการได้ยิน)


7. More setting

กดปุ่ม ▼ / ▲ เพื่อเลือกปรับการตั้งค่าอื่นๆ


การใช้งานเครื่องเบื้องต้น

เมนูเวลา

กดปุ่มMENUที่รีโมทคอนโทรล เพื่อเปิดหน้าเมนูหลัก

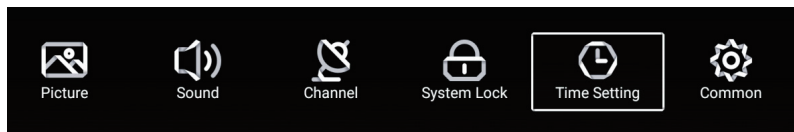


1. กดปุ่ม ◀ หรือ ▶ เพื่อเลือก TIME
2. กดปุ่ม ▲ หรือ ▼ เพื่อเลือกรายการแล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
3. กดปุ่ม ตกลง </> เพื่อปรับเปลี่ยนการตั้งค่า
4. หลังจากเสร็จสิ้นการตั้งค่า กดปุ่ม MENU เพื่อกลับไปรายการก่อนหน้า

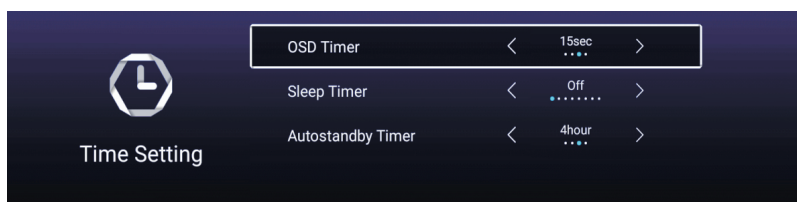


1. Clock
กดปุ่ม ▼ / ▲ เพื่อเลือก Clock แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
กดปุ่ม ▼ / ▲ / </> เพื่อเลือก
2. Time Zone
กดปุ่ม ▼ / ▲ เพื่อเลือก Time Zone แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
3. Sleep Timer
กดปุ่ม ▼ / ▲ เพื่อเลือก Sleep Timer แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
กดปุ่ม ▼ / ▲ เพื่อเลือกเปิดใช้งานเป็น Off, 15 นาที, 30 นาที, 45 นาที, 60 นาที, 90 นาที, 120 นาที, 240 นาที
4. Auto Standby
กดปุ่ม ▼ / ▲ เพื่อเลือก Auto Standby แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
กดปุ่ม ▼ / ▲ เพื่อเลือก
5. OSD Timer
กดปุ่ม ▼ / ▲ เพื่อเลือก OSD Timer แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

การใช้งานเครื่องเบื้องต้น

เมนูล๊อค

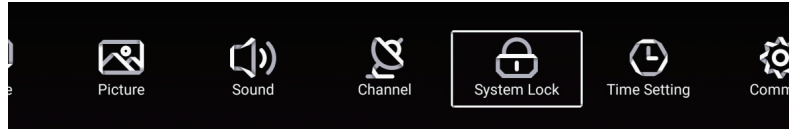

1. กดปุ่ม MENU เพื่อเข้าสู่หน้าเมนูหลัก
2. กดปุ่ม ◀ / ▶ เพื่อเลือก LOCK ที่เมนูหลัก แล้วกดปุ่ม OK / ▼ เพื่อเข้าสู่เมนูย่อย

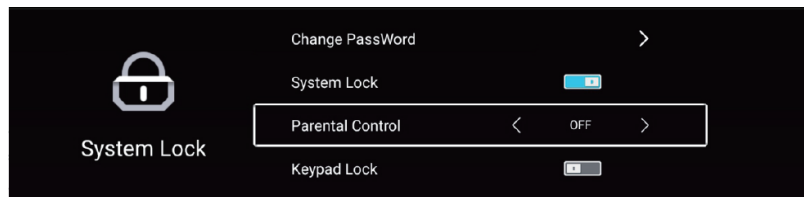


1. Lock System ล็อคระบบ
กดปุ่ม ▼ / ▲ เพื่อเลือก Lock System แล้วกดปุ่ม OK และใส่รหัสผ่าน รหัสผ่านเริ่มต้นคือ 0000
ถ้าคุณลืมรหัสผ่านที่คุณตั้งใหม่ กรุณาติดต่อผู้ให้บริการของคุณ
2. Set password ตั้งรหัสผ่าน
กดปุ่ม ▼ / ▲ เพื่อเลือก Set password แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย และตั้งรหัสผ่านใหม่
3. Channel Lock ล็อคช่อง
กดปุ่ม ▼ / ▲ เพื่อเลือก Channel Lock แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
กดปุ่มสีเขียว(Green) เพื่อล็อคหรือปลดล็อคช่อง
4. Parental Rating ระดับความเหมาะสมของรายการ
กดปุ่ม ▼ / ▲ เพื่อเลือก Parental Rating แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
5. Key Lock ล็อคปุ่มกด
กดปุ่ม ▼ / ▲ เพื่อเลือก Key Lock แล้วกดปุ่ม ◀ / ▶ เพื่อเลือก On หรือ Off
เมื่อคุณเลือกเป็น On ปุ่มกดจะไม่ทำงาน
6. Hotel Mode โหมดโรงแรม (การตั้งค่าจะถูกจำกัดตามเงื่อนไขที่เรากำหนด)
กดปุ่ม ▼ / ▲ เพื่อเลือก Hotel Mode แล้วกดปุ่ม OK เพื่อเลือก On หรือ Off


การใช้งานเครื่องเบื้องต้น

เมนูการตั้งค่า

กดปุ่ม MENU เพื่อเปิดหน้าเมนูหลัก

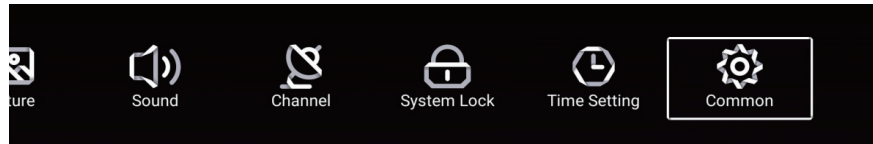

1. กดปุ่ม ◀ / ▶ เพื่อเลือก SETUP ในหน้าเมนูหลัก แล้วกดปุ่ม OK/▼ เพื่อเข้ารายการ
2. กดปุ่ม ▼ / ▲ เพื่อเลือกตัวเลือกที่คุณต้องการปรับในเมนู SETUP
3. กดปุ่ม OK/◀ / ▶ เพื่อปรับค่า
4. หลังจากที่คุณปรับเสร็จเรียบร้อยแล้ว กดปุ่ม MENU เพื่อบันทึกและกลับไปเมนูก่อนหน้านี้

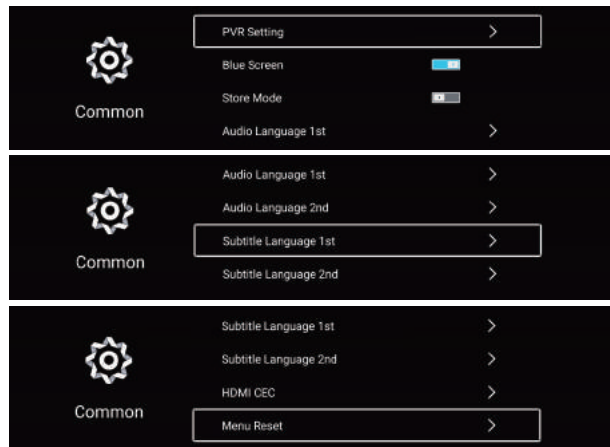

PVR File System ระบบไฟล์ PVR

- กดปุ่ม ▼ / ▲ เพื่อเลือก PVR File System แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย
- กดปุ่ม ▼ / ▲ เพื่อเลือก Check PVR File System แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูระบบเครื่องจะตรวจสอบและแสดงความเร็วของอุปกรณ์ USB

Blue Screen หน้าจอสีฟ้า

- กดปุ่ม ▼ / ▲ เพื่อเลือก Blue Screen แล้วกดปุ่ม OK เพื่อเลือกปรับเป็น On หรือ Off

Store mode โหมดร้านค้า

- กดปุ่ม OK เพื่อเลือก Store mode

Audio Languages เลือกภาษาของเสียง

- กดปุ่ม ▼ / ▲ เพื่อเลือกภาษาของเสียง แล้วกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

กดปุ่ม ◀ / ▶ เพื่อเลือกภาษาหลักของเสียง

กดปุ่ม ▼ / ▲ / ◀ / ▶ เพื่อเลือกภาษาของเสียง

HDMI CEC ระบบ HDMI CEC

- กดปุ่ม ▼ / ▲ เพื่อเลือก HDMI CEC และกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

Reset ตั้งค่าเริ่มต้นใหม่

- กดปุ่ม ▼ / ▲ เพื่อเลือก Reset และกดปุ่ม OK เพื่อเข้าสู่เมนูย่อย

การเล่นมัลติมีเดีย Multimedia

การใช้งาน Media Operation

หมายเหตุ : ควรเชื่อมต่ออุปกรณ์ USB ก่อนที่จะเข้าเมนู Media แล้วกดปุ่ม INPUT เลือกMedia กดปุ่ม ◀ ▶ เพื่อเลือกประเภทไฟล์ที่จะเล่นและกดปุ่ม ENTER



หลังจากที่ทีวีพบอุปกรณ์ USB แล้วกดปุ่ม ◀ ▶ เพื่อเลือกเล่นไฟล์ รูปภาพ/เพลง/ภาพยนตร์/ข้อความ และกดปุ่ม OK เพื่อเข้าสู่เมนูรายการเล่น

1. กดปุ่ม ◀ ▶ เพื่อเลือกโฟลเดอร์ย่อย และ กดปุ่ม OK เพื่อเข้าสู่โฟลเดอร์
กดปุ่ม OK เพื่อเริ่มเล่น กดปุ่ม EXIT เพื่อกลับ เลือก Up Folder และกดปุ่ม OK เพื่อเลือกกลับสู่โฟลเดอร์ก่อนหน้า
กดปุ่ม ◀ ▶ เพื่อเลือกเปลี่ยนหน้า
2. กดปุ่ม ▶▶ เพื่อเริ่มเล่นหรือกดอีกครั้งเพื่อหยุดเล่นชั่วคราว กดปุ่ม ■ เพื่อยกเลิกการเล่น
3. กดปุ่ม ◀◀ เพื่อกลับไปเล่นรายการก่อนหน้า กดปุ่ม ▶▶ เพื่อข้ามไปเล่นรายการถัดไป

การเล่นมัลติมีเดีย Multimedia

คำแนะนำเกี่ยวกับอุปกรณ์ USB






- * ไม่รองรับ MTP (media transfer protocol)
- * รองรับ HDD สูงสุด 500 GB
- * TV รองรับอุปกรณ์ USB ที่มี FORMAT FAT 32 เท่านั้น
- * อุปกรณ์เล่นภาพและเสียงหรือ USB HDD บางชนิดเครื่องอาจไม่รองรับ
- * TV ไม่รองรับอุปกรณ์ USB ที่มีหลายพาร์ติชัน
- * ควรเชื่อมต่ออุปกรณ์ USB โดยตรงกับเครื่อง ถ้าเชื่อมต่อผ่าน HUB อาจมีปัญหาได้
- * ก่อนเชื่อมต่ออุปกรณ์ USB กับเครื่องทีวี ควรทำการสำรองข้อมูล USB ไว้ก่อน เพราะอาจเกิดการเสียหายกับข้อมูลได้
- * รูปภาพที่มีความละเอียดสูง อาจใช้เวลาในการแสดงผลนานสักพักหนึ่ง
- * ความเร็วในการค้นหาอุปกรณ์ USB ขึ้นอยู่กับอุปกรณ์ตัวส่งและตัวรับข้อมูล
- * เครื่องจะแสดง (UNSUPPORTED) ในกรณีที่เครื่องไม่รู้จักไฟล์
- * ไฟล์ Mp3 ที่มี DRM ที่ดาวน์โหลดจากเว็บไซต์ที่ไม่ฟรี ทีวีจะไม่สามารถเล่นไฟล์นี้ได้ เนื่องจากการจัดการสิทธิดิจิทัล (DRM) เป็นเทคโนโลยีที่สนับสนุนการสร้างเนื้อหาการจดจำหน้าและการจัดเนื้อหาในลักษณะบูรณาการและครบวงจร รวมทั้งการคุ้มครองสิทธิและผลประโยชน์ของผู้ให้บริการเนื้อหา การป้องกันการกระทำที่ผิดกฎหมายเกี่ยวกับการคัดลอกเนื้อหา รวมถึงการจัดการเกี่ยวกับการเรียกเก็บและการชำระเงิน
- * เมื่อทำการถ่ายภาพ จะใช้เวลาในการโหลดภายในไม่กี่วินาที ซึ่งไอคอนโหลดจะแสดงขึ้นที่หน้าจอ
- * ถ้าอ่านไฟล์ผ่าน CARD READER เสียงอาจขาดหายไป
- * ถ้าเครื่องไม่อ่านอุปกรณ์ USB ให้ถอดอุปกรณ์ USB ออกและเชื่อมต่ออุปกรณ์ USB กับเครื่องใหม่อีกครั้ง


หน้า Home

สามารถเข้าหน้า Home ได้ 2 วิธี

1. กดที่ปุ่ม 

2. เลือก หน้า Home บนหน้าเมนู

กดปุ่ม  บนรีโมทคอนโทรล และกด  /  /  /  เพื่อเลือกแอปพลิเคชัน จากนั้นให้กด คดลง เพื่อเข้าสู่ แอปพลิเคชัน

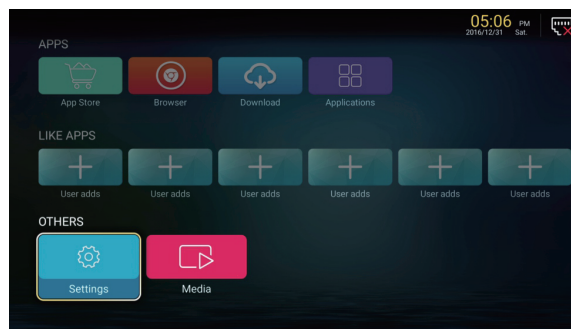






แอปพลิเคชัน APPS

กด  /  /  /  เลือก App Store เพื่อเพิ่ม แอปพลิเคชัน

แอปพลิเคชันที่ชื่นชอบ LIKE APPS

กด  /  /  /  เลือก LIKE APPS เพื่อเพิ่ม แอปพลิเคชัน


กด  /  /  /  เลือก แอปพลิเคชัน ที่ต้องการเพื่อเพิ่ม แอปพลิเคชันนั้นบนหน้า Home

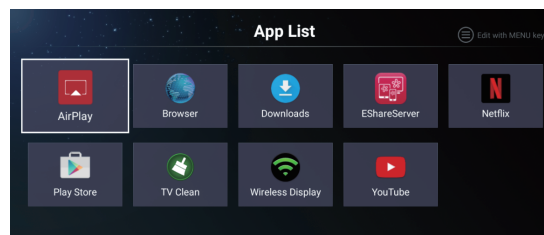

ตั้งค่าระบบ

เลือก ตั้งค่าระบบ บน หน้า Home



กด ▼ / ▲ / ◀ / ▶ เพื่อเลือกตั้งค่าระบบ จากนั้นกด ตกลง เพื่อ ตั้งค่าระบบ และ กด ออก เมื่อตั้งค่าเสร็จสิ้น หรือ ต้องการออกจากการทำงานตั้งค่า

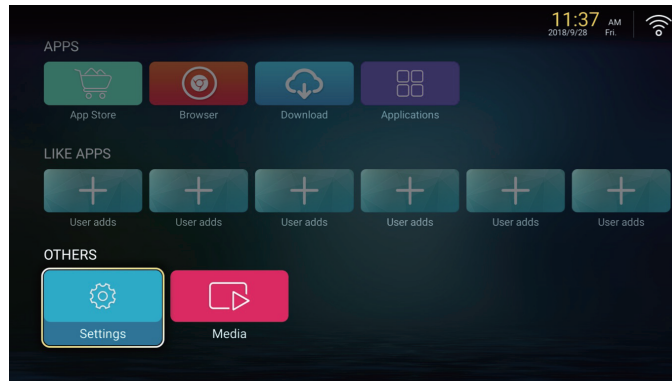

ตั้งค่า อินเทอร์เน็ต

สถานะเครือข่ายปัจจุบันสามารถดูได้ในเมนูนี้ กด ตกลง เพื่อตั้งค่า อินเทอร์เน็ต

กด ▼ / ▲ / ◀ / ▶ เพื่อเลือกเครือข่าย และกด ออก เมื่อตั้งค่า อินเทอร์เน็ตเสร็จสิ้น หรือ ต้องการออกจากการทำงานตั้งค่า

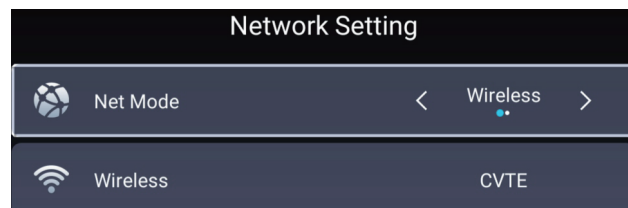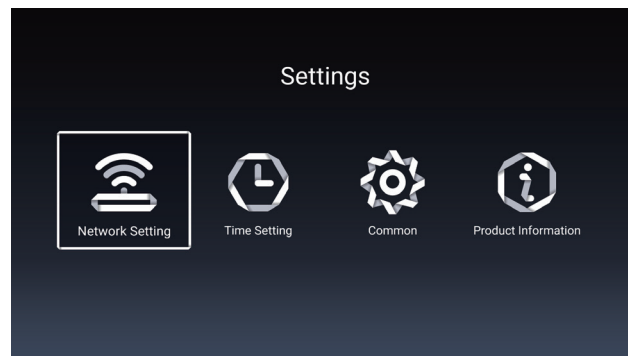

การแก้ไขปัญหาเบื้องต้น

ถ้าจอ LCD ของคุณมีปัญหาหรือมีอาการผิดปกติ แนะนำให้ทำการตรวจสอบเช็คเครื่องเบื้องต้นตามตารางด้านล่างนี้ก่อนที่จะเรียกช่างหรือส่งเครื่องไปซ่อม เพื่อเป็นการประหยัดเวลาและค่าใช้จ่ายโดยไม่จำเป็น อย่างไรก็ตามหากทำการตรวจสอบเช็คแล้วยังไม่สามารถแก้ไขปัญหาได้ และเครื่องยังมีอาการเหมือนเดิม ให้ปิดเครื่องและถอดปลั๊กทันที จากนั้นติดต่อสอบถามกับตัวแทนจำหน่ายหรือศูนย์บริการฯ ใกล้บ้านท่านเพื่อทำการแก้ไขต่อไป


อาการ	สาเหตุและวิธีการแก้ไข
ภาพและเสียงผิดปกติ	<ul style="list-style-type: none"> * ทดลองเปลี่ยนช่องรายการทีวีเป็นช่องอื่นๆ * ตรวจสอบเช็คหรือปรับสายอากาศทีวีใหม่ * ตรวจสอบเช็คการต่อสายสัญญาณต่างๆ ให้ถูกต้องอีกครั้ง
ไม่มีภาพหรือไม่มีเสียงขณะอยู่ในโหมด TV	<ul style="list-style-type: none"> * ทดลองเปลี่ยนช่องรายการทีวีเป็นช่องอื่นๆ * กดปุ่ม TV/AV เพราะเครื่องอาจอยู่ในโหมด AV หรือในโหมดอินพุตอื่นๆ * ตรวจสอบเช็คให้แน่ใจว่าเสียบปลั๊กเครื่องเข้ากับเต้ารับเรียบร้อยแล้ว * ตรวจสอบเช็คการต่อสายอากาศอีกครั้ง
ไม่มีเสียงหรือเสียงเบาเกินไปเมื่อเปิดระดับเสียงสูงสุดแล้ว	<ul style="list-style-type: none"> * อันดับแรก ตรวจสอบเช็คสายสัญญาณเสียงที่ต่อเข้ากับตัวเครื่องว่าถูกต้องหรือไม่ * ปรับ เพิ่ม-ลดระดับเสียงของเครื่องตามต้องการ * เครื่องอยู่ในโหมด MUTE ให้กดปุ่ม MUTE ซ้ำอีกครั้งเพื่อออกจากโหมดนี้
ไม่มีสีหรือสีของภาพผิดปกติ	<ul style="list-style-type: none"> * ตรวจสอบให้แน่ใจว่าสัญญาณที่ถูกส่งมานั้นมีสี หรือเลือกไปที่เมนู Picture จากนั้นปรับแต่งเฉดสีหรือโทนสีในเมนูย่อยตามต้องการ
ภาพเด่น/ภาพเลื่อนขึ้น-ลงตามแนวตั้ง	<ul style="list-style-type: none"> * ตรวจสอบการต่อสายสัญญาณต่างๆ ให้ถูกต้อง
ภาพไม่ชัด, จอภาพมีจุดสีขาว-ดำขึ้นเต็มหน้าจอ	<ul style="list-style-type: none"> * ตรวจสอบสายอากาศที่ต่อใช้งานกับเครื่องว่าชำรุดเสียหายหรือไม่ * อาจถูกคลื่นความถี่จากเครื่องใช้ไฟฟ้าอื่นๆ รบกวนมักพบปัญหาเมื่อใช้เสาอากาศแบบในอาคาร(แบบพกพา)
รีโมทไม่ทำงาน	<ul style="list-style-type: none"> * แบตเตอรี่รีโมทหมด ให้เปลี่ยนแบตเตอรี่ใหม่ทันที * ใส่แบตเตอรี่กลับขั้วหรือไม่ * อย่าให้ตัวเครื่องกับรีโมทอยู่ห่างกันเกินไป * อย่าให้มีสิ่งใดกีดขวางอยู่ระหว่างตัวเครื่องและรีโมทคอลโทรล * ตรวจสอบให้แน่ใจว่าเสียบปลั๊กเครื่องเข้ากับเต้ารับเรียบร้อยแล้ว
จอภาพไม่อยู่กลางจอ (ขณะอยู่ในโหมด PC)	<ul style="list-style-type: none"> * ปรับตำแหน่งจอภาพทางแนวนอน (Horizontal) และแนวตั้ง (Vertical) ตามต้องการ
การทำความสะอาดจอ LCD	<ul style="list-style-type: none"> * ควรปิดเครื่องและถอดปลั๊กออกก่อนที่จะทำความสะอาด จากนั้นใช้ผ้าแห้งที่นุ่มสะอาดเช็ดทำความสะอาดที่บริเวณหน้าจอและตัวเครื่อง แต่ถ้าจอ LCD สกปรกมาก ให้ใช้ผ้าชุบน้ำให้เปียกพอหมาดๆ เช็ดทำความสะอาดเท่านั้น อย่าใช้น้ำมันจำพวกปิโตรเลียม ทินเนอร์ หรือสารละลายใดที่คล้ายๆกันนี้มาทำความสะอาดเครื่องเด็ดขาด
ปรากฏจุดเม็ดสีขึ้นบนหน้าจอ	<ul style="list-style-type: none"> * หน้าจอของเครื่อง LCD/TV เครื่องนี้ สร้างขึ้นจากเทคโนโลยีที่มีความละเอียดสูง ในบางครั้งจะปรากฏเม็ดสีขึ้นบนหน้าจอในขณะที่เพิ่งเปิดเครื่อง ซึ่งเมื่อเปิดเครื่องไว้สักครู่จุดของเม็ดสีดังกล่าวจะหายไปเอง อาการดังกล่าวนี้ถือเป็นอาการปกติของสินค้าประเภท DOT MATRIX ทั่วไป เครื่องมิได้เสียหายแต่อย่างใด

1. Important Safety Information	
Warnings.....	3
Safety Precautions Instruction.....	4
2. Accessories.....	7
3. Installing the LED TV	
Installing the Stand.....	8
4. Overview of the TV set	
Front View.....	9
Rear View	10
5. Connect External Devices	
Connect to Antenna or Cable.....	11
Connect Device Via HDMI interface.....	11
Connect Device Via Component(Y/Pb/Pr) + Audio L/R Interface.....	11
Connect Device Via Video + Audio L/R Interface.....	11
Connect PC Via VGA/HDMI Interface.....	12
Supporting signals.....	12
6. Using the Remote Control	
Inserting Remote Control Batteries.....	13
Operating the Remote Control.....	13
Remote Control.....	14
Remote Control function buttons.....	15
7. Basic operation of the TV	
Turning the TV On and Off.....	16
First Time Setup.....	16
Auto Tuning Status	16
Changing Channels	16
Adjusting the Volume.....	17
Selecting the Input Source.....	17

8. Channel Menu	
Channel Menu	18
9. Picture Menu	
Picture Menu.....	19
10. Sound Menu	
Sound Menu.....	20
11. Time Menu	
Time Menu.....	21
12. System Lock menu	
System Lock Menu.....	22
13. Common Menu	
Common Menu.....	23
14. Multimedia	
USB OPERATION	24
15. Home main menu.....	26
16. System Settings	27
17. Troubleshooting.....	28

Warnings

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold paratus. When a cart is used, use caution when moving the cart/apparatus combination to from tip-over.
13. Unplug this apparatus during lighting storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus. the apparatus has been exposed to rain or moisture. does not operate normally, or has been dropped.
15. **WARNING:** To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. The mains plug or appliance coupler shall remain readily operable.
18. Use in outdoor: This TV is not designed for outdoors installation. Do not expose the TV to rain, as it may result in a fire or an electric shock. Also, do not expose the TV to direct sunlight, as it may heat up and become damaged.

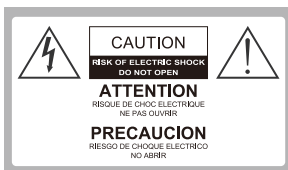

Safety:

TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER TO QUALIFIED PERSONNEL ONLY.



Dangerous Voltage: The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of dangerous voltage within the inside of the product that may be sufficient level to constitute a risk of electric shock to persons.



Instruction: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

1 Important Safety Information

Safety Precautions Instruction

Observing the simple precautions discussed in this booklet will provide you with many years of enjoyment and safe operation.

This product complies with all applicable US Federal safety requirements, and those of the Canadian Standards Association.

1. Read & Follow Instructions

All safety and operating instructions should be read and followed before the TV is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the TV and in the operating instructions should be adhered to.

4. Cleaning

Unplug the TV from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a soft and slightly damp cloth for cleaning.

5. Water and Moisture

Do not use this TV near water, for example, near a bathtub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.

6. Accessories Carts and Stands

Do not place this TV on a slippery or tilted surface, or on an unstable cart, stand, or table. The TV may slide or fall, causing serious injury to a child or adult, and serious damage to the TV.

7. Transporting the Television

A TV and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the TV and cart combination to overturn.

8. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the TV on a bed, sofa, rug, or other similar surface. The TV should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

9. Power Sources

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your electronics retailer or local power company.

10. Power-Cord Polarization

This TV is equipped with a three-wire grounding type plug, a plug with a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, the contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

11. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the TV.


12. Lightning

For added protection for the TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV from lightning and power-line surges.

13. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code (U.S.A.), ANSI / NFPA 70 provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connect on to grounding electrodes, and requirements for the grounding electrode.

Example of Grounding According to National Electrical Code Instructions

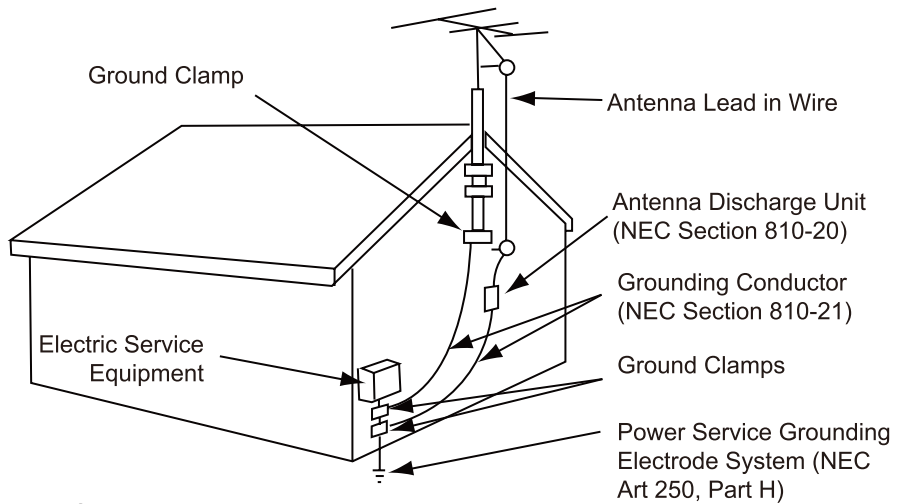

NEC - National Electrical Code

14. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall on to power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

1 | Important Safety Information

16. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on or inside the TV.

17. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. Damage Requiring Service

Unplug from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. If the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the TV has been exposed to rain or water.
- d. If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the TV has been dropped or the cabinet has been damaged.
- f. If the TV exhibits a distinct change in performance.

Please make sure the following items are included with your LED TV.
If any items are missing, please contact your dealer.



LED TV



Instruction Manual



Remote Control






2 batteries



warranty card

3 Installing the LED TV




Installing the Stand

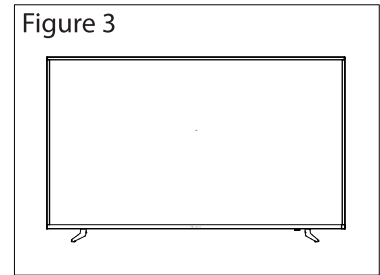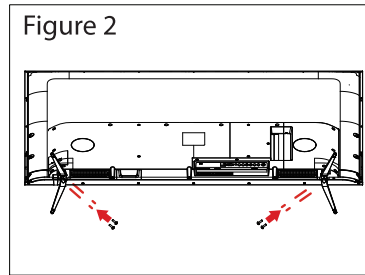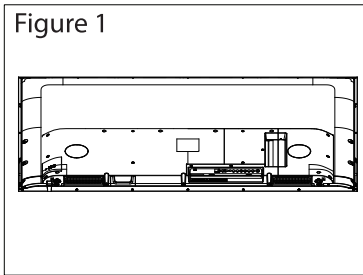


1. Place the TV set on soft cloth or cushion with face down. Place the base in position as shown. (see Figure 1).
2. Insert 4 screw (provided) into the screw holes, Use a screwdriver to lock. (see Figure 2)
3. Stand the TV up. (see Figure 3)

Disconnecting the Stand

1. Lay the TV flat on a table with the LED screen face down. To prevent the TV from being scratched, put a piece of soft cloth on the table on which the screen will be set. (see Figure 1)
2. Remove the 4 screw on the stand, then pull up the stand slowly. (see Figure 2)
3. Then you successfully removed the base. (see Figure 3)

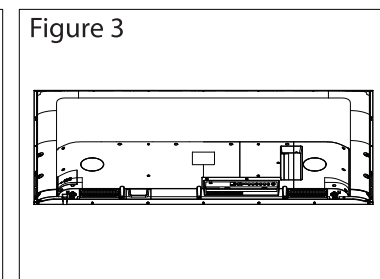
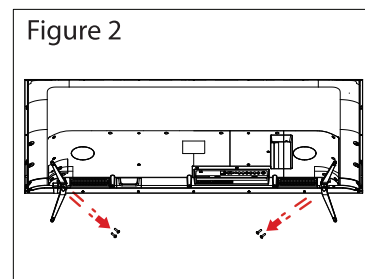
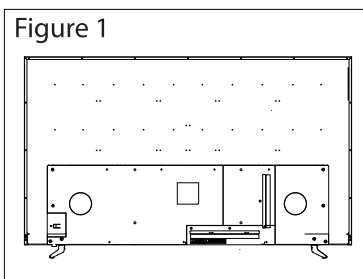


Front View

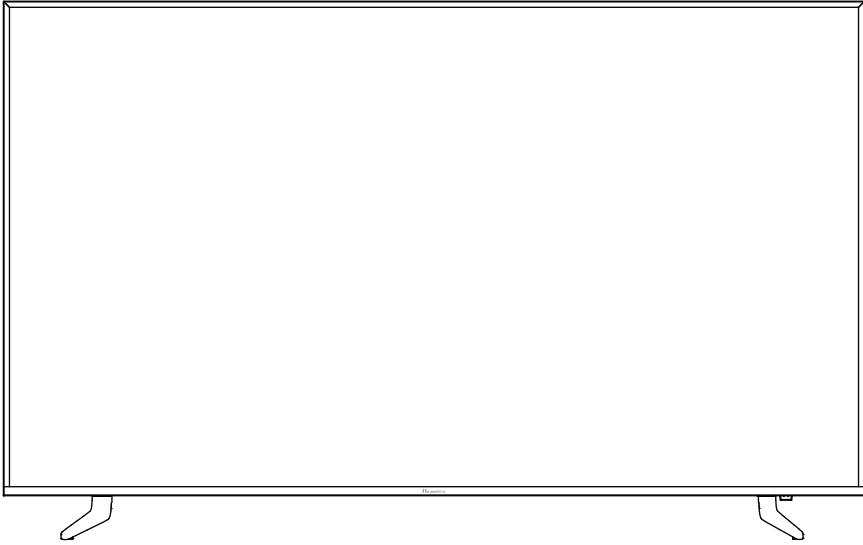

4 Overview of the TV set

Rear View

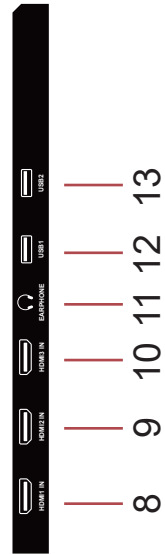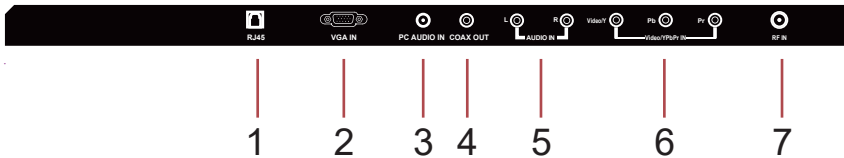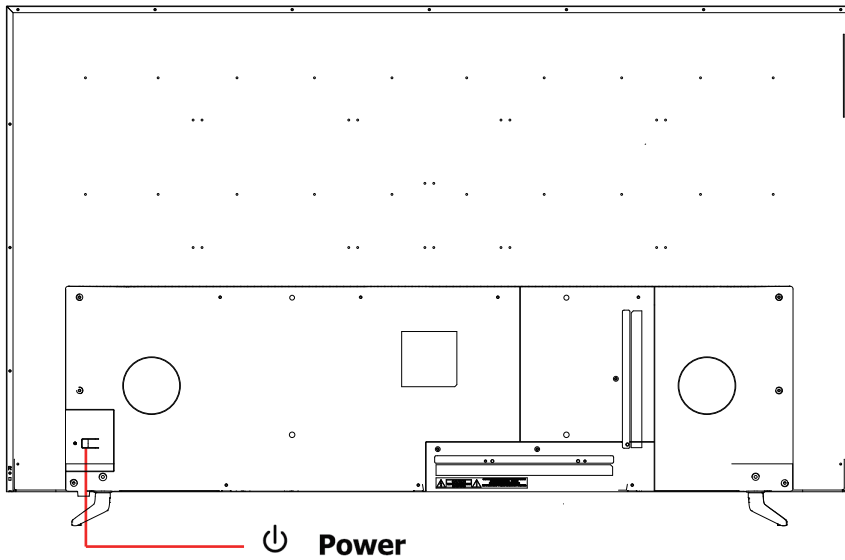


Item	Description	
1	RJ45	Connect Ethernet or other data links.
2	VAG IN	Connect a 15-pin D-sub RGB cable to the RGB output of your computer and the other end to the RGB input on the rear of the LED TV.
3	PC AUDIO IN	Connect the Audio Out on your computer to the Audio on the rear of the LED TV.
4	COAX OUT	Connect a coaxial audio cable from a sound bar, stereo system, receiver, etc.
5	AV IN	Connect a external device to the composite VIDEO(V) and AUDIO (L/R) out jacks on most video equipment. *L/R (Audio in) is sharing withYPbPr.
6	VIDEO IN	Connect this port to the YPbPr output of A/V device.
7	RF IN	Connect the antenna.
8	HDMI1	Terminal Connect this port to the HDMI1 output of A/V device.
9	HDMI2	Terminal Connect this port to the HDMI2 output of A/V device.
10	HDMI3	Terminal Connect this port to the HDMI3 output of A/V device.
11	EARPHONE	Connect to your earphones. By connecting the earphones, you can listen to the sound from the TV on headphones. *If you connect the earphones, the TV speakers will be muted.
12	USB1	Connect to your USB devices, such as USB flash drive.
13	USB2	Connect to your USB devices, such as USB flash drive.

Connect to Antenna or Cable


Typical wall antenna jack is used in apartment buildings, connect the antenna cable, as shown in below diagram (Please use the correct type of antenna cable). We strongly recommend that you connect the antenna/cable input using a 75-ohm coaxial cable (not supplied) to ensure the best picture quality.

Cable or VHF/UHF




Connect Device Via HDMI interface

An HDMI cable carries both video and audio. You do not need to use any audio cables. You can connect MHL devices, such as the Roku Streaming Stick and compatible mobile phones and tablets to the HDMI3 (MHL) port. A USB to HDMI cable is required to connect a mobile phone or tablet to the TV. Please check the documentation of your device.

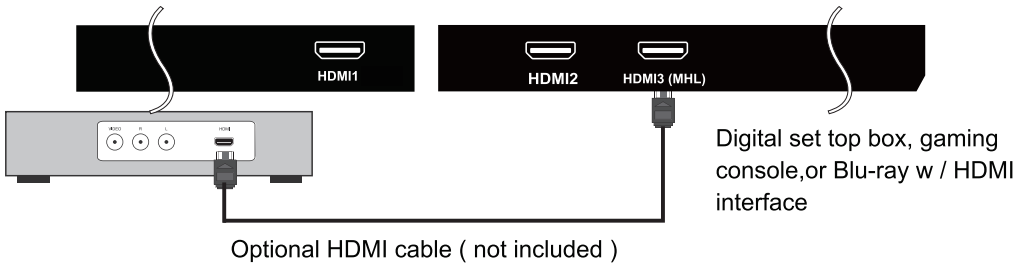

Connect Device Via Component(Y/Pb/Pr) + Audio L/R Interface

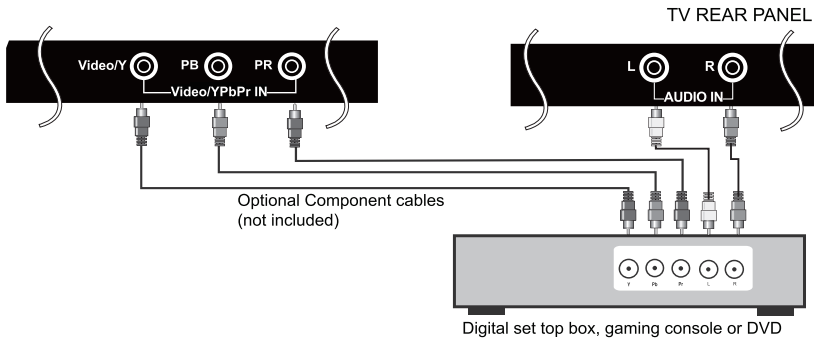

Supporting signals

YPbPr	HDMI
480i	480i
576i	576i
480P	480P
576P	576P
720P / 50 Hz	720P / 50 Hz
720P / 60 Hz	720P / 60 Hz
1080i / 50 Hz	1080i / 50 Hz
1080i / 60 Hz	1080i / 60 Hz
1080P / 50 Hz	1080P / 50 Hz
1080P / 60 Hz	1080P / 60 Hz
	2160P/60Hz

Inserting Remote Control Batteries

1. Remove the battery cover by pulling then lifting the knob on the cover.
2. Insert the batteries, corresponding to the (+) and (-) markings on the battery compartment.
3. Reattach the battery cover.




CAUTION

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in creaking or leakage, which may pose a risk of fire or lead to personal injury.
- Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in leakage, which may pose a risk of fire or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations.
- Keep the batteries away from children or pets.
- When the remote control will not to be used for an extended period, remove the batteries.


Operating the Remote Control

1. Aim Remote Control directly at the Remote Control Sensor on the down of the TV set.
2. Remote Control range is at approx. 16 feet with angles of approx. 30 degree.
3. Avoid obstructions between the Remote Control and the sensor.

- ☀ If you do not intent to use the remote control for a long time, remove the batteries.
- ☀ If the remote control does not operate correctly, or if the operating range . reduced, replace both batteries with new ones.

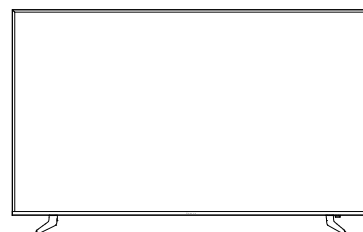

IR Receiver





Remote Control function buttons

1. POWER	Switches the TV between on and standby mode.
2. MUTE	Mutes and restores your TV sound.
3.P.MODE	Press to select the picture mode.
4.S.MODE	Press to change the audio mode.
5.ASPECT	Press audio to PAL-BG/Stereo or PAL-BG Momo(ATV)&Audio Languages.
6.SLEEP	This button enables the sleep function so the TV turns itself off after the designated time.
7.0-9	Press to change the channel of the TV in ATV / DTV mode.
8.MOUSE	Press to select the mouse or remote control input.
9.↶↷	Press to return to the channel last viewed.
10.CH.LIST	Display channel list. (ATV / DTV mode)
11.FAV	Press to enter favoritelist and Switching favourites channel.
12.AD	Press to enter the audio description.
13.Color	According to the OSD prompt operation.
14.SOURCE	Press to display and select the available video sources.
15.INFO	Press to display the information window.
16.▲▼◀▶	Press the direction buttons to select menu options or settings.
17.MENU	This button turns on the on screen display meun (OSD).
18.EXIT	Press to exit a displayed menu.
19.VOL(+/-)	Adjust the volume up (+) or the volume down (-).
20.🏠	Return to the home page for Android.
21.Youtube	Press to select the youtube app.
22.CH(^/~/)	Change the channel up or down.
23 ▶II	Press to play or pause the current program.
24 ◀◀	Press to scan in reverse.
25 ▶▶	Press to scan in forward.
26. ■	Press the botton to stop the current program.
27 ◀◀	To play the previous chapter,title or track.
28 ▶▶	To play the next chapter,title or track.
29.AV	Press to display and select the AV sources.
30.TV	Press to display and select the TV sources.
31.SUBTITLE	Open subtitle meun for subtitle selection.
32.EPG	Press to display electronic program guide menu.
33.REC	Press to start recording.
34.AUDIO	Press audio to PAL-BG/Stereo or PAL-BG Momo(ATV)&Audio Languages.

7 Basic Operation of the TV

Turning the TV On and Off


Press the **POWER** button on the remote control.
You can also use the Power button on the side of the panel.



*If there is no input signal within 15 minutes, TV will be turned off automatically.

First Time Setup


Connect an RF cable from the TV's input called "RF-In" and to your TV Aerial socket.
Press ENTER button to select the Start the setup.

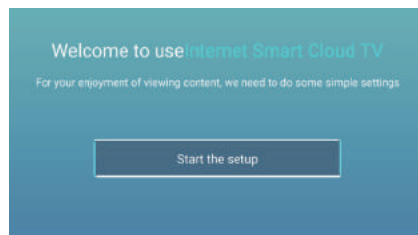

- 1、 Press **【▼】 / 【▲】** button to select the language.
- 2、 Press **【▼】 / 【▲】** button to select the country.
- 3、 Press **【▼】 / 【▲】** button to select the time zone.
- 4、 Press OK button to connect the WIFI/network.
Press **【▶】** button to select the input source.




- 5、 Press **【▼】 / 【▲】** button to select the input source.

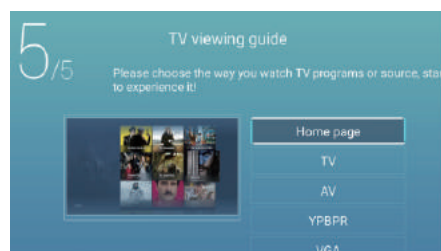

Changing Channels

1. Using Channel Buttons

Press **+CH-** button to change channels, and the TV changes channels in sequence. You will see all channels that have been memorized. Channels erased or not memorized will not be shown.

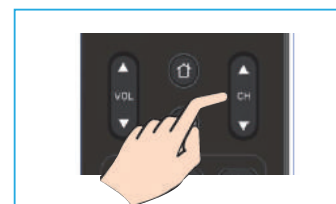

* Return to the previous channel, press **【↺】** button.

Adjusting the Volume

Press **VOL +/-** to adjust volume.
 To turn off the volume, press **MUTE**.
 To restore volume, press **MUTE** again.



Selecting the Input Source


To select the TV or other external input sources connected to the TV.

1. Press the SOURCE button on the remote control.
2. Press ▲ or ▼ to select the required input source between TV, AV, YPBPR, VGA, HDMI1, HDMI2.
3. To confirm the selection, press OK button to enter.




Channel Menu

Press MENU on the remote control to display the main Menu.



1. Press ◀ / ▶ button select CHANNEL in the main menu, then press **OK** to enter.
2. Press ▼ / ▲ button to select the option that you want to adjust in the CHANNEL menu.
3. Press **OK**/◀ / ▶ button to adjust.
4. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

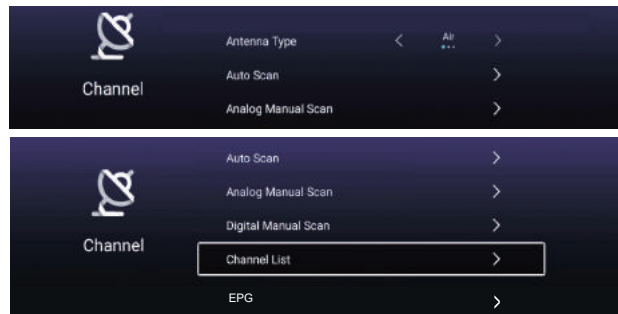

NOTE: Channel can be only selected under TV/RF condition, others can't be used.

Antenna Type

Select the Air/Cable to tune.

Auto Scan

Press ▼ / ▲ button to select Auto Scan, then press **OK** / ▶ button to enter the submenu.

Analog Manual Scan

Press ▼ / ▲ button to select Analog Manual Scan, then press **OK** / ▶ button to enter the submenu.

Digital Manual Scan

Press ▼ / ▲ button to select Digital Manual Scan, press **OK** / ▶ button to enter the submenu.

Channel List


Press ▼ / ▲ button to select Channel List to list, press MENU button edit the channel (Move / Skip / Delete / Fav / Rename / Lock).

EPG

Press ▼ / ▲ button to select EPG press **OK** / ▶ button to enter the submenu.

Picture Menu

Press **【▼】 / 【▲】** to select: Picture Mode / Contrast / Brightness / Color / Sharpness / Backlight / Noise Reduction / Aspect Ratio/ Color Temp / More Settings.

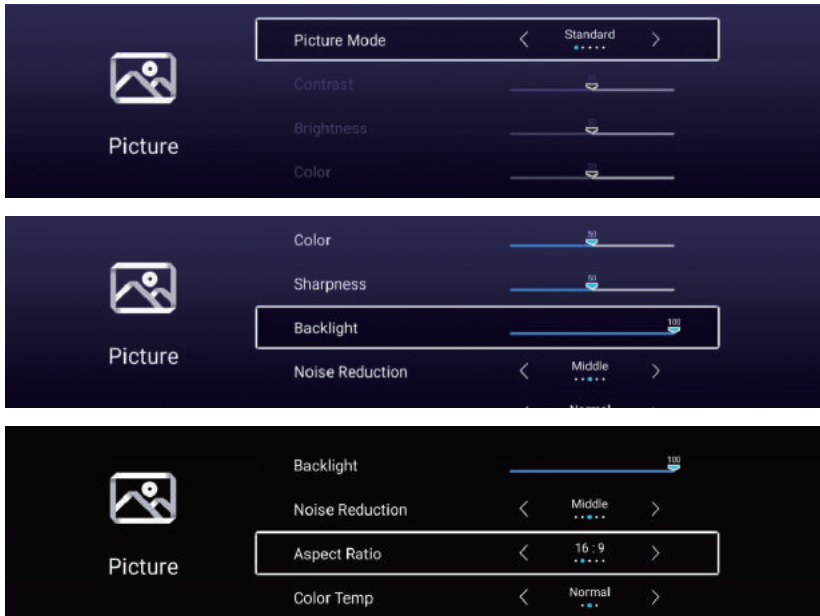

Picture Mode

Press **【▼】 / 【▲】** button to select Picture Mode, and then press **【◀】 / 【▶】** button to select.

(Option: Standard, Movie, Vivid, Energy Saving, User).

Contrast / Brightness / Color / Sharpness / Backlight

Press **【▼】 / 【▲】** to select, and press **【◀】 / 【▶】** to adjust

Noise Reduction

Setting the option to eliminate image noise intensity.

Press **【▼】 / 【▲】** to select Noise Reduction, and press **【◀】 / 【▶】** to select.

(Option: Off, Low, Middle, High, Auto).

Aspect Ratio

Adjust the screen display size.

Press **【▼】 / 【▲】** to select Aspect Ratio, and press **【◀】 / 【▶】** to select.

(Option: Auto/16:9/4:3/zoom1/zoom2/)

Color Temp

Adjust the overall color of the image.

Press **【▼】 / 【▲】** to select Colour Temperature. press **【◀】 / 【▶】** to select.


(Option: Cool, Normal, Warm).

More Settings


Press **▼ / ▲** to select More Settings, then press OK button to enter sub-menu.

Sound Menu

Press MENU on the remote control to display the main Menu.



Press **▼** / **▲** to select: Sound Mode/Bass/Treble/Balance/AVC/More settings.
 Press ENTER/ **◀** / **▶** to select or adjust.

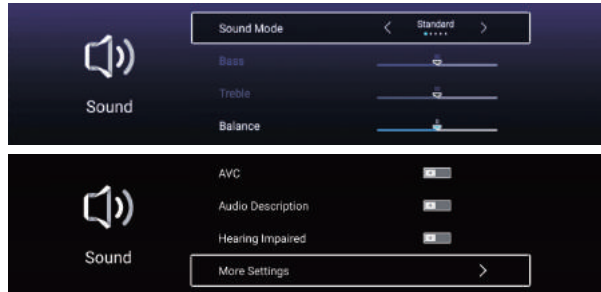

Sound Mode

Press **▼** / **▲** button to select Sound Mode, then press **◀** / **▶** button to select Standard/Music/Theater/News/User. You can adjust Bass/Treble in User mode.

TIPS: You can press SMODE button on the remote control to change the Sound Mode directly.

- Standard** Produces a balanced sound in all environments.
- Music** Preserves the original sound. Good for musical programs.
- Theater** Enhances treble and bass for a rich sound experience.
- News** Enhanced voice.
- User** Select to customize picture settings.

Bass

Adjust the low frequency sounds.

Treble

Adjust the high frequency sounds.

Balance

Adjust the left and right channel output balance.

Press **▼** / **▲** button to select Balance, Press **◀** / **▶** button to adjust.

AVC

Press **▼** / **▲** button to select AVC, press **OK** / **◀** / **▶** button to select On or Off.

After opening the AVC, Once the volume is set, regardless of any difference TV Version printed on each channel, it can make the speaker volume remained stable.

Audio Description

Press **OK** button to select audio description.

Hearing Impaired

Press **OK** button to select hearing impaired function.

More Settings

Press **▼** / **▲** button to select More Settings, press **OK** / **▶** button to enter the submenu.


Time Menu

Time Setting menu

Press MENU on the remote control to display the main Menu.



1. Press ◀ / ▶ button select Time Setting in the main menu, then press **OK** to enter.
2. Press ▼ / ▲ button to select the option that you want to adjust in the Time Setting menu.
3. Press **OK**/◀ / ▶ button to adjust.
4. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

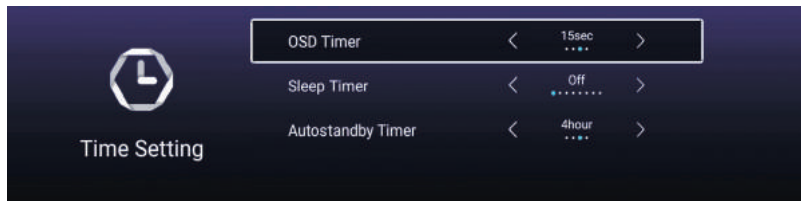

OSD Timer

Press ▼ / ▲ button to select OSD Timer, Press ◀ / ▶ to select off, 5sec, 15sec, 30sec.

Sleep Timer


Press ▼ / ▲ button to select Sleep Time, then press ◀ / ▶ button to adjust Off / 15min / 30min / 45min / 60min / 90min / 120min / 240min.

Autostandby Timer

Press ▼ / ▲ button to select Autostandby Timer, then press ◀ / ▶ to select Off / 3hour / 4hour / 5hour.

System Lock Menu


Press MENU button to display the main menu.

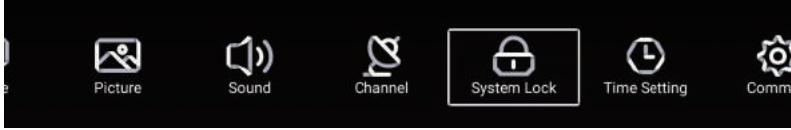

Press ◀ / ▶ button select System Lock in the main menu, then press **OK** to enter .

1. Default password is 4711.

2. Press ▼ / ▲ button to select Change Password/System Lock/Parental Control/Keypad Lock. Press **OK**◀ / ▶ to enter.

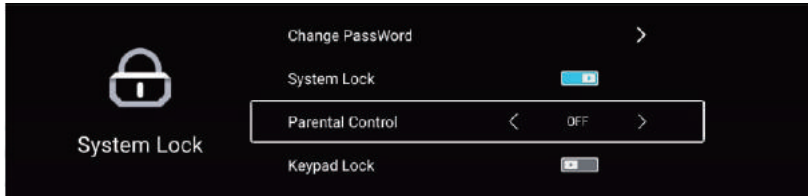

Change Password

Press **OK**/◀ / ▶ button to select Change Password.

System Lock

Press **OK**/◀ / ▶ button to select System Lock On/Off.

Parental Control

Some program may not be suitable for children, through Parental Control set-up, parents can shield unsuitable show automatically.

Press ▼ / ▲ button to select Parental Control.

Press ◀ / ▶ button to select Off/4/5/6/7...18.(Age of children)

This function only available when there is signal for TV.


Keypad Lock

Press **OK**/◀ / ▶ button to lock the keypad.


Note: This function is available when the System Lock is on.

Common menu

Press MENU button to display the main menu. Press ◀ / ▶ button to select Common in the main menu.



1. Press ◀ / ▶ button select Common in the main menu, then press **OK** to enter.
2. Press ▼ / ▲ button to select the option that you want to adjust in the Common menu.
3. Press **OK**/◀ / ▶ button to adjust.
4. After finishing your adjustment, Press **MENU** button to return back to the previous menu.

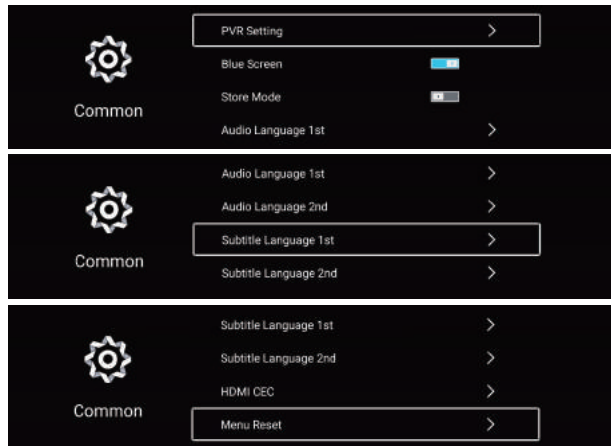

PVR Setting

Press ▼ / ▲ button to select PVR Setting, then press **OK** / ▶ to enter.
Press ▼ / ▲ to select Disk/Record List/Format/schedule List.
(Note: This option only available when there is signal for TV.)

Blue Screen

Set the background color to blue when there is no input signal.
Press ▼ / ▲ button to select Blue Screen.
Press ◀ / ▶ button to select On/Off.

Store Mode

Press **OK** button to select electronic POP.

Audio Language 1st /Audio Language 2nd/Subtitle Language 1st/Subtitle Language 2nd

Press **OK** / ▶ button to select your desired language.
(Note: Only available when there is signal for TV.)


HDMI CEC

Press ▼ / ▲ button to select HDMI CEC Setup.
Press **OK** button to enter the sub-menu.
Press ▼ / ▲ button to select HDMI CEC Switch / TV Auto Power On / Device Auto Power Off / HDMI ARC / Device List .(Note: Only available when the HDMI CEC select On.)

Menu Reset




Recall the default setting.
Press ▼ / ▲ button to select Menu Reset.
Press **OK** button to enter the sub-menu.

USB OPERATION

First press  into Home, then into multimedia channel, plug in Media Center storage device. After confirmed television to recognize USB storage devices, press ◀ or ▶ button to select Video/Music/Photo/Folder, and press **OK** button to enter.










Playing Video/Music/Photo/Folder

1. Press ▼ / ▲ button to select the folder that you want to view, then press **OK** button to select the sub folder. Press **OK** button to play, press the exit button to return back. Press **OK** button to select the up folder, and return to the previous level menu, press ▼ / ▲ buttons to turn pages.
2. Press  button to start playback or pause.
3. Press  button to play the last item. Press  button to play the next item.

Video/Music/Photo/Folder Screen Display

1. Follow the instruction below to enter the desired function.
2. Simply press ◀ / ▶ to move the light-bar cursor to the function, then press **OK** to start function. Press ■ to End or Exit.

-  Play before or next Video/Music/Photo.
-  Play or Pause Video/Music/Photo.
-  Play Video/Music Play video music with fast forward or retreat quickly.
-  Show the current file information.
-  Select Audio Track, Select Subtitle, Region Language, Play Mode, Aspect Ratio, HDR.
-  Rotating the Photo.
-  Press to select the Video/Music/Photo to play.

Precautions when using a USB device


- MTP (Media Transfer Protocol) is not supported.
- Max HDD capacity:500G.
- This unit supports only USB Flash Drive with FAT32 format. This TV is not guaranteed the USB Flash Drive with other formats (such as FAT16 or NTFS).
- Certain types of USB Digital camera and audio devices may not be compatible with this TV. Media only guarantees to support USB Flash Drive. Other devices such as flash card reader, USB HDD, USB Digital Camera and audio devices may not be compatible with this TV.
- If a USB device requires high power (more than 500mA or 5V), the USB device may not be supported.
- This TV is not supported the USB device with multiple partitions.
- Please connect directly to the USB port of your TV. If you are using a separate cable connection or through a USB hub, there may be a USB compatibility problem.
- Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. Any data file damage or data loss is at your own risk.
- The higher the resolution of the image, the longer it takes to display on the screen.
- How fast a USB device is detected differs from device to device.
- For unsupported or corrupted files, the "unsupported File" message is displayed.
- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation of content, the distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- When moving to a photo, loading may take a few seconds. At this point, the loading icon will appear at the screen.
- If USB card reader is connected, its volume may not be detected.
- If USB device does not function properly, please unplug and reconnect it.
- If verify whether the USB device is functioned properly with your PC.



Enter the home main menu

Two ways are allowed to enter the main menu interface:

- 1) Press the  key.
- 2) Select the Home in main menu, press **OK** to enter the Home main menu.

Home main menu

Press  button on the remote control to display the TV main interface, then press **▼ / ▲ / ◀ / ▶** button to select **APPS**, then press **OK** button to enter.

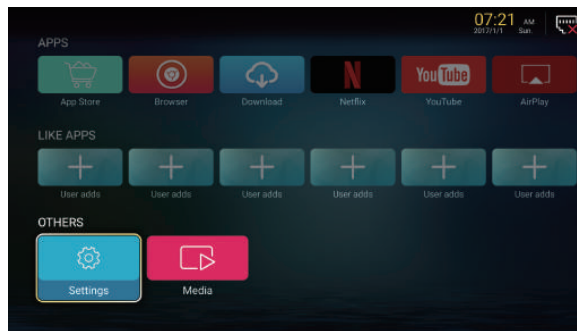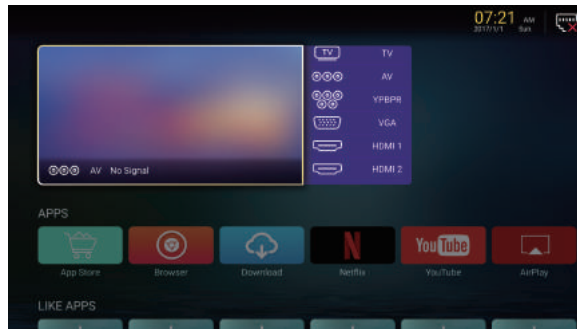


APPS

Press **▼** / **▲** / **◀** / **▶** button to select **App Store** under **APPS** to add app.

LIKE APPS

Press **▼** / **▲** / **◀** / **▶** button to select **LIKE APPS** and press **Enter** button to add app.


Press **▼** / **▲** / **◀** / **▶** to select your desired apps and press **ENTER** to add.

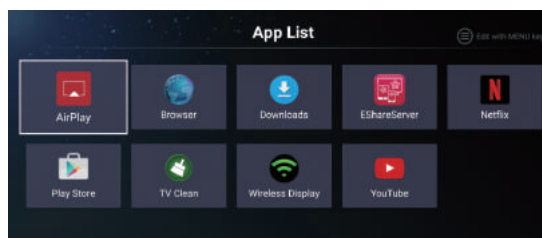

System Settings



Select the 'Settings' icon in the main page, then you can see as follows:

Press ▼ / ▲ / ◀ / ▶ button to select setting and **OK** key to operate. Press the **EXIT** key to exit.

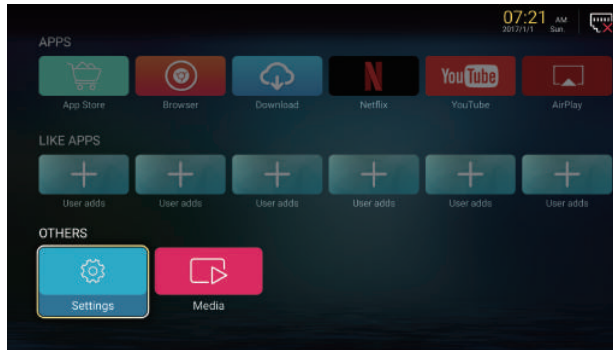

Network Settings

The current network status can be seen in this menu. Press **OK** to enter the submenu, press ▼ / ▲ / ◀ / ▶ to select the Network. Press **EXIT** to exit.

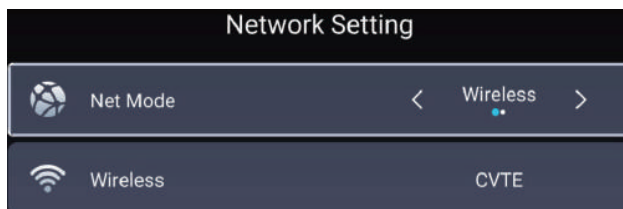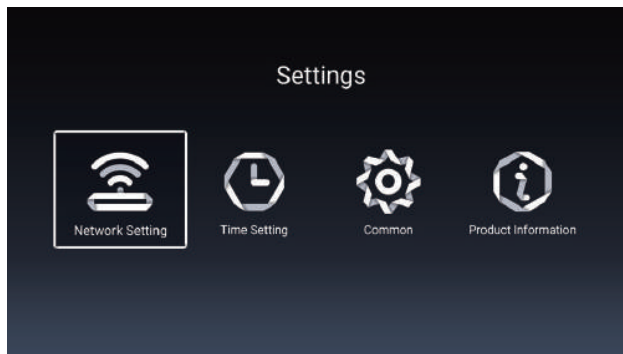


Problem	Possible Solution
No power	<ul style="list-style-type: none"> • Make sure the power cord is properly connected to the LED TV AC power socket. • Make sure the AC power cord is properly connected to the wall outlet. • Make sure the DC power button is ON (Blue LED). • Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage.
No picture	<ul style="list-style-type: none"> • The TV station may be experiencing problems. Try another channel. • The Cable TV signal may be scrambled or encoded. Please contact your local cable operator. • Make sure that connection to other components are correct referring to the user guide. • Make sure that setup has been done correctly after connections. • Make sure the correct input is selected and the input signal is compatible.
Strange color, light color, or color misalignment	<ul style="list-style-type: none"> • Ensure that the video cable is securely connected. • The picture may appear dim in a brightly lit room. • Adjust brightness, contrast, saturation (color), and tint referring to the user guide. • Check the input signal setting.
No sound	<ul style="list-style-type: none"> • Check your audio connections are properly connected referring to the user guide. • The MUTE button may have been pressed, try pressing this button again. • Check your audio settings, your TV audio may be set to minimum. • Press the Volume + (Up) button on the remote control.
Remote control unit does not operate	<ul style="list-style-type: none"> • Make sure the directions of batteries are inserted correctly referring to the user guide. • Batteries could be weak or dead. Replace with new batteries. • Is a fluorescent light illuminated near the remote control sensor? • The path of the remote control beam may be blocked. Make sure the path is clear and that the remote control is aimed at the remote control sensor on the TV. • Press the POWER button on the remote control to see if you can turn on the TV. • Press MENU button on the remote control to see if there is a MENU shown on the screen. • Press only one button at a time and it is the correct one for the operation you want to perform.

Problem	Possible Solution
Unit cannot be operated	<ul style="list-style-type: none"> • External influences such as lightning or static electricity may cause improper operation. In this case, operate the unit after first turning on the power of the LED TV and the AVC System, or unplug the AC cord for 1 to 2 minutes, then replug again.
Power is cut off suddenly	<ul style="list-style-type: none"> • Is the sleep timer set in advance? • Is there no signal in PC mode or HDMI mode? • The internal temperature of the unit has increased. Remove any objects blocking the vent or clean as necessary.
No CATV reception (or no reception above CH13)	<ul style="list-style-type: none"> • Is the AIR/CABLE option set correctly? Please set the AIR/CABLE option to CABLE referring to the user guide. • CATV is connected improperly or not connected; please check all the CATV connections. • The cable TV service is interrupted; please contact your cable operator.
Picture is cut off/with sidebar screen	<ul style="list-style-type: none"> • Is the image positioned correctly? • Are screen mode adjustments such as picture size set correctly? • Press WIDE button repeatedly on the remote control to see if you can get the picture you prefer.

ACONATIC

บริษัท ไฮไฟ โอเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161 -162 ซอยงามวงศ์วาน47(ชินเขต2) โทร. 0-2954-5281 , 0-2580-6955
แขวงทุ่งสองห้อง เขตหลักสี่ Core Line. 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

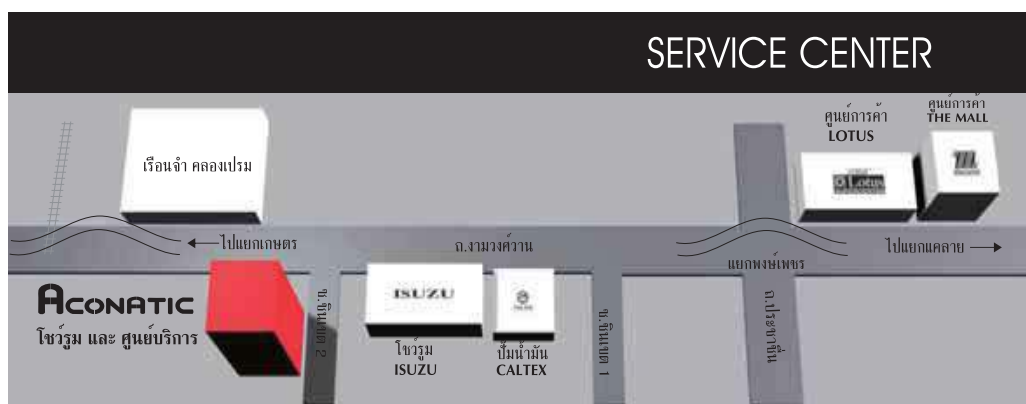

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของสมนาคุณและรายละเอียดสินค้าโดยมีต้องแจ้งให้ทราบล่วงหน้า