

# ACONATIC

คู่มือการใช้งานเบื้องต้น

เครื่องเล่น FM RADIO/USB Mp3

รุ่น AN-888





## การใช้งานเสาอากาศ

**FM** : ดึงเสาอากาศออกให้ยาวที่สุดและหมุนปรับทิศทางให้ได้รับสัญญาณเสียงที่ดีที่สุด


**AM** : เก็บเสาอากาศไว้ตามเดิม ตามภาพ จะสามารถรับสัญญาณคลื่นความถี่ของ AM ได้ดีที่สุด

**SW** : ดึงเสาอากาศออกให้สุดและ ตั้งเสาอากาศให้ตรงดังภาพประกอบจะรับสัญญาณได้ดีที่สุด



## ส่วนประกอบเครื่อง

1. เสาอากาศ
2. หูหิ้ว
3. หน้าจอบอกความถี่
4. ช่องต่อสาย AC 220V
5. ลำโพง
6. ช่องใส่ถ่าน
7. ช่องเสียบหูฟัง
8. ไฟแสดงการเปิด/ปิดเครื่อง
9. ช่องเสียบอุปกรณ์ USB
10. ปุ่มปรับ เพิ่ม/ลด ระดับเสียง
11. ช่องเสียบอุปกรณ์ SD CARD
12. ปุ่มเลือกโหมดการเล่น USB/ วิทยู / บลูทูธ
13. ปุ่มฟังก์ชัน โหมด Mp3
14. ปุ่มปรับคลื่นวิทยุ

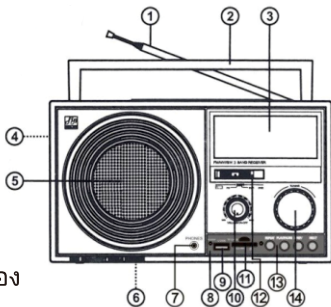

## แหล่งจ่ายไฟ

การใช้งานแบตเตอรี่

1. เปิดฝาใส่แบตเตอรี่
2. นำแบตเตอรี่ ใส่ในช่องใส่ให้ตรงตามขั้ว +/- โดยดูตามรูปสัญลักษณ์ที่บ่งบอกไว้
3. แบตเตอรี่แบบชาร์จไฟใหม่ได้ ใช้เวลาการชาร์จไฟ 6 ชั่วโมง
4. ใช้ไฟฟ้า AC 220 V 50/60Hz
5. มีช่องสำหรับเสียบแจ๊คชาร์จไฟ 6V ที่ด้านหลังเครื่อง


หมายเหตุ : ถ้าหากเสียงเบาลงหรือเสียงผิดเพี้ยน ควรเปลี่ยนแบตเตอรี่ใหม่(เปลี่ยนพร้อมกันทั้งหมดทุกก้อน)

## ข้อมูลทางเทคนิค Specifications


แหล่งจ่ายไฟ	AC 220 V 50/60Hz DC 6 V (UM-1) X 4
ย่านความถี่	FM 87-108MHz, AM 520-1710 KHz SW 5.9-18 MHz
Power Consumption	4.5 W
Power Output	2500 mW

\* หลีกเลี่ยงการใช้งานเครื่องในบริเวณที่มีน้ำหรือละอองน้ำ


\* หลีกเลี่ยงการวางเครื่องใกล้กับของเหลว, สารเคมีหรือแจกันใส่น้ำ



เครื่องหลายสายไฟในรูปสามเหลี่ยม เป็นสัญลักษณ์บอกและเตือนให้ระมัดระวังอันตรายจากไฟฟ้าแรงสูงของรึนสามเหลี่ยมมีฉนวนหุ้มที่อยู่ภายในตัวเครื่อง หากสัมผัสอาจจะเกิดอันตรายแรงได้



เครื่องหลายอุททานในรูปสามเหลี่ยม เป็นสัญลักษณ์บอกและเตือนให้ระมัดระวังในการใช้งานเครื่อง โดยจะต้องให้ความสำคัญและปฏิบัติตามคำแนะนำและคำเตือนในคู่มือเล่นนี้อย่างเคร่งครัด




**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

เพื่อเป็นการป้องกันอันตรายจากการเกิดไฟไหม้หรือถูกไฟฟ้ช้อต อย่าเปิดฝาคอร์บเครื่องหรืออย่าพยายามตรวจซ่อมเครื่องด้วยตัวเอง หากเครื่องมีอาการผิดปกติ ควรส่งเครื่องให้ช่างผู้ชำนาญทำการตรวจซ่อมให้เท่านั้น

ระวัง : เพื่อป้องกันเกิดการเกิดไฟไหม้หรือการถูกไฟฟ้ช้อต อย่าวางเครื่องทิ้งไว้ให้โดนฝนสาดหรือโดนละอองน้ำกระเด็นใส่เด็ดขาด

## การใช้งาน เครื่องเล่น Mp3

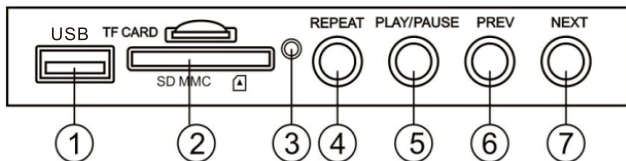

1. ช่องเสียบอุปกรณ์ USB
2. ช่องเสียบอุปกรณ์ SD CARD
3. ไฟ LED แสดงสถานะการเล่นเพลง Mp3
4. ปุ่มเล่นซ้ำเพลง กดหนึ่งครั้งเพื่อเล่นซ้ำเพลง กดอีกครั้งเพื่อยกเลิก
5. ปุ่ม PLAY/PAUSE หยุดเล่นเพลงชั่วคราวขณะกดอีกครั้งเพื่อเล่นเพลงปกติ
6. ปุ่ม PREV ถอยหลังกลับไปเล่นเพลงก่อนหน้านี
7. ปุ่ม NEXT ข้ามไปเล่นเพลงต่อไป

## การใช้งาน วิทยุ

1. หมุนปุ่ม ปรับระดับเสียงเพื่อเปิดและเพิ่มระดับเสียง
2. เลือกระบบที่คุณต้องการโดยเลือกปุ่มเลือก FM, AM, SW
3. หมุนปุ่มปรับคลื่นความถี่เพื่อเลือกคลื่นที่คุณต้องการ
4. ปรับ เสาอากาศ (ตามยานของเสาอากาศ)
5. การปิดเครื่อง, หมุนปุ่มปรับระดับเสียงไปทางทวนเข็มนาฬิกาจนกว่าจะดังคลิก

## ฟังก์ชันบลูทูธ

การเชื่อมต่อบลูทูธ : กดปุ่ม “MODE” เพื่อสลับไปยังฟังก์ชันบลูทูธ คุณจะได้ยินเสียง “Bluetooth” จากนั้นเปิดอุปกรณ์ที่ต้องการเชื่อมต่อบลูทูธ (เช่น โทรศัพท์ คอมพิวเตอร์ ฯลฯ ) จากนั้นค้นหาชื่อบลูทูธ “AN-888” เพื่อทำการเชื่อมต่อ คุณจะได้ยินเสียง “Connected” จากนั้นคุณสามารถเล่นเพลงหรือไฟล์เสียงต่างๆ จากอุปกรณ์ของคุณ  
หมายเหตุ ถ้าเชื่อมต่อบลูทูธไม่ได้ให้ทำการ เปิด/ปิด เครื่อง จากนั้นทำตามวิธีข้างต้น

## หมายเหตุ

เครื่องเล่นวิทยุเครื่องนี้ ออกแบบและผลิตขึ้นด้วยเทคโนโลยีที่ทันสมัย โปรดใช้งานและบำรุงรักษาเครื่อง ตามคำแนะนำดังนี้

1. ในการใช้งานการเล่นเพลงก่อนที่คุณจะเปิดเครื่องคุณต้องแน่ใจว่าได้เสียบอุปกรณ์ USB หรือ SD CARD ที่มีเพลง Mp3 อยู่ในอุปกรณ์อยู่แล้ว
2. ในขณะที่เล่นเพลงอยู่ กรุณาอย่าถอดอุปกรณ์ที่กำลังเล่นเพลงอยู่ควรปิดเครื่องก่อนที่จะทำการอื่นใด เพื่อมิให้เกิดความเสียหายกับอุปกรณ์
3. เครื่องอาจจะอ่านข้อมูลในอุปกรณ์ซ้ำถ้าหากอุปกรณ์นั้นเป็นไฟล์ที่มีขนาดใหญ่ ซึ่งเป็นเรื่องปกติ
4. กรุณา หลีกเลี่ยงการใช้งานเครื่องในสภาพที่เต็มไปด้วยฝุ่น, สกปรก เพราะอุปกรณ์ภายในเครื่องอาจเกิดความเสียหายได้
5. กรุณาหลีกเลี่ยงการใช้งานเครื่องในที่ที่มีความอุณหภูมิสูงมากเพราะอาจทำให้แบตเตอรี่, อุปกรณ์อิเล็กทรอนิกส์และพลาสติก เสียหายได้
6. กรุณาหลีกเลี่ยงการใช้งานเครื่องในที่ที่มีอุณหภูมิต่ำมาก อุปกรณ์ของเครื่องอาจเกิดความเสียหายได้
7. กรุณาอย่าถอดส่วนประกอบของเครื่องออกด้วยตนเอง เพราะเครื่องอาจเสียหายได้
8. กรุณาอย่า โยน, เคาะ, เขย่าเครื่อง เพราะอาจทำให้เครื่องเสียหายได้
9. กรุณาอย่าใช้สารเคมี, ฟองซักฟอก, หรือสารละลายต่างๆทำความสะอาดเครื่อง ควรใช้ผ้าขนหนูแห้งเช็ดทำความสะอาดเครื่องเบาๆ
10. ถ้าเครื่องเปียกหรือโดนน้ำให้รีบปิดเครื่องและนำเครื่องตากในสถานที่ที่มีลมพัดเป็นเวลาหนึ่งวันเพื่อให้แห้งสนิทก่อนเปิดเครื่องอีกครั้ง

# ACONATIC

Model No.: AN-888




FM/AM/SW 3 Band Radio

**With MP 3 Player**  
**USB/SD/TF Card/Blue-Connect**

## CONTROL LOCATIONS

1. Antenna
2. Handle Bar
3. Tuning Frequency Display Window
4. AC Socket (in the rear panel)
5. Speaker
6. Battery Box (in the rear panel)
7. Phones Jack
8. Power lamp
9. USB jack
10. Volume Control
11. SD Card/TFCard
12. BT USB/Radio Band switch
13. Mp3 Function Panel
14. Tuning Knob
15. DC 6V jack on the rear panel

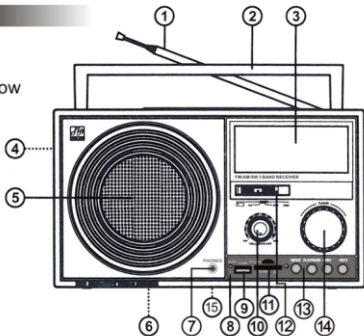

## POWER SOURCE

### BATTERY OPERATION

1. Open the Battery Cover..
2. Insert batteries into the Batter Compartment, making sure that the batteries are installed in the designated numerical order and that the Proper polarities (+ and -) are maintained.
3. Rechargeable battery: 1200mah, taking 6 hours to charge fully
4. AC power source: 220V

5. DC 6V jack

### Battery life

If the sound becomes low or distorted. replace all the Batteries with new ones.

## RADIO OPERATION

1. Rotate the Volume Knob clockwise to turn on the radio and adjust to desired sound level.
2. Select the preferred wave range by sliding the Band Selector.
3. Rotate the Tuning Knob to tune in desired Frequency.
4. Adjust the antenna (See ANTENNAS).
5. To turn off the radio, rotate the Volume Knob anti-clockwise till a "click" is heard.

## ANTENNA

**FM:** Pull out the Telescopic Antenna and adjust its length and angle for optimum reception.

**AM:** The sensitive ferrite core antenna inside the set will provide excellent MW reception in most areas for optimum reception, turn the set in the direction which gives the best results since the ferrite core antenna is directional.

**SW:** Extend the Telescopic Antenna fully, and keep it vertical.



## SPECIFICATIONS

Power Source: AC: 220-240V ~50Hz  
DC: 6V (UM-1) X 4

Frequency Range: FM 87~108 MHz, AM 520~1710KHz, SW 5.9~18 MHz

Power Consumption: 4.5W

Power Output: 2500mW

\* Don't make the set suffered water splash or dap.

\* Don't place any objects with liquid on the set like vase.



The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

### WARNING

RISK OF ELECTRIC SHOCK  
DO NOT OPEN

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.




The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

To reduce the risk of fire or electric shock do not expose this appliance to rain or moisture

## MP3 Player Operation Instructions

Brief introduction of each component,



1. USB Port: for inserting external memory interface.
2. SD card/TF card port: for inserting SD card/TF card interface
3. PROCESSING INDICATOR LIGHT: The indicator light begins to twinkle when the radio is under operating MP3 data.

4. REPEAT: MP3 repeat function (in the condition of playing MP3 to press REPEAT button, default catalogue circulation changes to single track circulation. To press this button again, the single track circulation changes to catalogue circulation.)
5. PLAY/PAUSE: to play music in MP3 format when you press the PLAY/PAUSE button and again to pause.
6. PREV: previous track.
7. NEXT: next track.

## BLUETOOTH FUNCTION

The Bluetooth connection: press the "MODE" button, switch to Bluetooth mode, you can hear a "Bluetooth" sound, Switching on bluetooth in compatible device (e.g. mobile phone and computer etc.), then search the "AN-888" product name by connecting the bluetooth, hear sound of "Connected", then playing audio files/songs from the device. If the connection failed, turn on/off the unit and repeat the above steps.

## NOTES

This radio is high-tech product of delicate design. Please use it carefully. For better usage and maintenance, pls follow below instructions.

1. In order to ensure the normal operation of playing music, before you switch on the Volume Knob, Please make sure the USB/Radio band switch is in the position of USB and the memory disk of SD card has been inserted.
2. During the operating process, please don't insert or pull off the external memory or SD card without switching off the Volume Knob. Otherwise it will cause unexpected crashes or damage.
3. It attributes normal phenomenon if the radio start a bit slowly when you use the external memory or SD card of big storage.
4. Please do not put or use the radio in the dusty or dirty environment. In this environment, the devices can probably be damaged.
5. Please do not put the radio in any high-temperature circumstance. High temperature will shorten the life of the electronic devices, damage the battery and make the plastic parts deformed or melt.
6. Please do not put the radio in any low-temperature circumstance. The internal components will likely absorb the moisture in the air. After the radio is moved to room temperature, the moisture will damage the circuit board.
7. Please do not try to take apart the radio. Improper operation from non-professionals may damage the devices.
8. Please do not throw, rap or shake the radio, Any abuse may damage the motherboard or accessories.
9. Please do not use harsh chemical, cleaning solvents or strong detergents to clean the radio. To clean it, please light polish with soft cloth and warm soapy water.
10. If the radio is wetted, it should be turned off and dried in draughty place. After 24 hours, make sure the radio gets dried before starting to use it.