


# ACONATIC

## คู่มือการใช้งาน เครื่องรับวิทยุรุ่น AN-777

รองรับย่านความถี่วิทยุ FM/AM/SW1/SW2 USB/TF CARD และ ไฟล์เพลง MP3

### ฟังก์ชันการใช้งาน

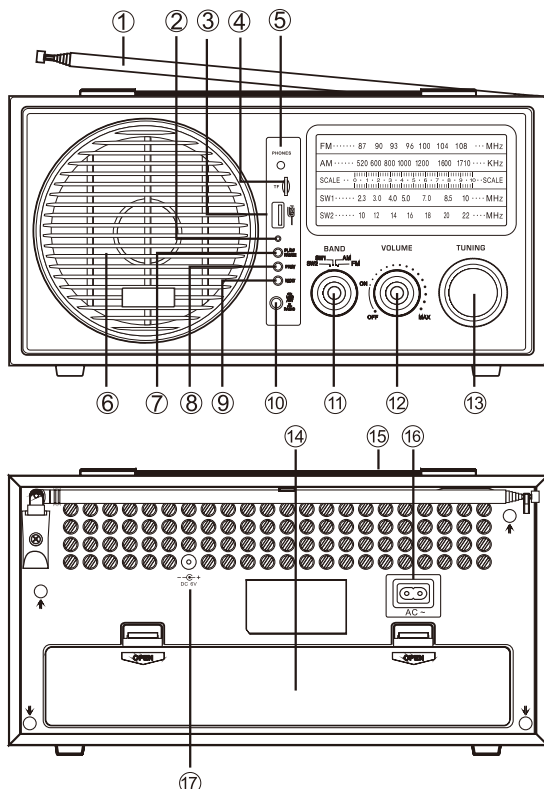

- ① เสาอากาศ
- ② ไฟแสดงสถานะโหมด USB
- ③ พอร์ต USB
- ④ พอร์ต TF CARD
- ⑤ พอร์ต Audio 3.5 มม.
- ⑥ ลำโพง
- ⑦ ปุ่ม เล่น/หยุดชั่วคราว
- ⑧ ปุ่ม เล่นเพลงก่อนหน้า
- ⑨ ปุ่ม เล่นเพลงถัดไป
- ⑩ ปุ่มเลือกวิทยุ (ขณะยังไม่กดปุ่ม) - เมื่อกดปุ่มจะเป็นโหมด USB/BT
- ⑪ ปุ่มหมุนปรับระดับเสียง
- ⑫ ปุ่มหมุนเลือกย่านความถี่วิทยุ
- ⑬ ปุ่มหมุนเลือกสถานี
- ⑭ ที่ใส่แบตเตอรี่
- ⑮ มือจับ
- ⑯ ซ็อกเก็ตปลั๊กไฟบ้าน
- ⑰ พอร์ตต่อแปดเตอร์

# การชาร์จไฟฟ้าเครื่องรับวิทยุ

## ไฟฟ้าตามบ้าน

คุณสามารถนำสายปลั๊กไฟเครื่องรับวิทยุมาเสียบต่อเข้ากับเต้าเสียบไฟบ้านดังภาพ เพื่อชาร์จเครื่องรับวิทยุได้ นอกจากนี้ควรตรวจสอบให้แน่ใจว่าแรงดันไฟฟ้าของปลั๊กไฟ และเครื่องรับวิทยุนั้นรองรับกันหรือไม่



ระวังอันตรายจากแรงดันไฟฟ้าภายในภายในเครื่อง

### คำเตือน

ไม่ควรเปิด อาจได้รับอันตรายจากไฟฟ้าช็อตได้

คำเตือน: เพื่อป้องกันการได้รับอันตรายจากไฟฟ้าช็อตไม่ควรเปิดฝาทัวเครื่องด้วยตนเอง หากตัวเครื่องมีปัญหาควรติดต่อศูนย์บริการลูกค้าที่ใกล้บ้านท่าน



เครื่องหมายคำเตือนประกอบกรรและนำผลิตภัณฑ์


**คำเตือน:** เพื่อป้องกันอันตรายจากไฟไหม้หรือไฟฟ้าช็อต ไม่ควรเปิดเครื่องขณะฝนตก หรือ นำไปอยู่ในที่มีความชื้นสูง

## ไฟฟ้าจากแบตเตอรี่(กรณีใช้ถ่าน)

ถอดฝาที่ใส่แบตเตอรี่ออกนำแบตเตอรี่ขนาด 1.5 V (D) จำนวน 4 ก้อน ใส่ลงไป เพื่อป้องกันอันตรายใส่แบตเตอรี่ตามที่ระบุข้างต้นและดังภาพ เมื่อไม่ใช้งานเครื่องรับวิทยุเป็นเวลานาน ให้นำแบตเตอรี่ออกจากเครื่องรับวิทยุ เพราะอาจทำให้เกิดความเสียหาย

### หมายเหตุ

เครื่องรับวิทยุมีแบตเตอรี่บรรจุอยู่ในอยู่แล้ว การใส่แบตเตอรี่จำนวน 4 ก้อนเข้าไปเป็นอีกทางเลือกหนึ่ง

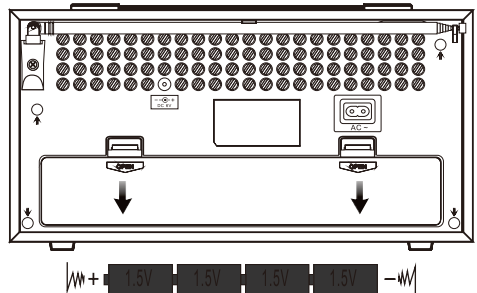

# ก่อนเริ่มใช้งาน

กรุณาศึกษาคู่มือก่อนการใช้งาน เครื่องรับวิทยุรุ่น AN-777

## การชาร์จแบตเตอรี่

มีแบตเตอรี่อยู่ภายในเครื่องรับวิทยุ เป็นแบตเตอรี่ชนิดลิเทียมพอลิเมอร์ที่มีความจุสูง สำหรับการชาร์จครั้งแรกนั้นควรชาร์จไว้เป็นเวลาอย่างน้อย 7-8 ชั่วโมง จากนั้นไปที่ปุ่ม On/Off เลื่อนมาที่ On เริ่มใช้งานเครื่องรับวิทยุได้เลย

## การติดตั้งแบตเตอรี่(กรณีใช้ถ่านก้อนขนาด 1.5V 4 ก้อน)

- 1 เปิดฝาครอบที่ใส่แบตเตอรี่
- 2 บรรจุแบตเตอรี่
- 3 ปิดฝาครอบ

## อายุการใช้งานของแบตเตอรี่(กรณีใช้ถ่านก้อน)

ใช้แบตเตอรี่ R20 ไซส์(D) SUM-1(NS) สามารถเล่นได้ประมาณ 20 ชั่วโมง

## การเปลี่ยนแบตเตอรี่(กรณีใช้ถ่านก้อน)

เมื่อเครื่องรับวิทยุเสียงเบาลงหรือผิดเพี้ยน ให้ทำการเปลี่ยนแบตเตอรี่ใหม่

### หมายเหตุ


เมื่อไม่ได้ใช้งานเครื่องรับวิทยุเป็นระยะเวลานาน ควรถอดแบตเตอรี่ออก ระวังไม่ให้แบตเตอรี่ได้รับความเสียหาย

## การเล่นไฟล์เพลง


นำUSB Flash drive หรือ TF CARD ที่มีไฟล์เพลง Mp3 เชื่อมต่อเข้าไปยังพอร์ตของอุปกรณ์ เครื่องรับวิทยุจะเล่นไฟล์เพลงโดยอัตโนมัติ โดยเล่นตามลำดับ สามารถกดปุ่ม prev/next เพื่อเลือกเล่นเพลงก่อนหน้าหรือเพลงถัดไปได้

## การใช้งานวิทยุ

- ๑ เริ่มจากการเปิดเครื่องโดยกา  
รหมุนลูกบิดตามเข็มนาฬิกา

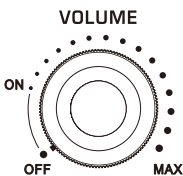


- 2 ตั้งค่าย่านความถี่ FM, AM, SW1 หรือ SW2

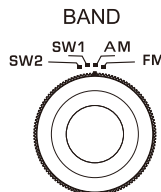

### 3 คันทาสถานีวิทยุ โดยใช้หมุน TUNING

#### TUNING

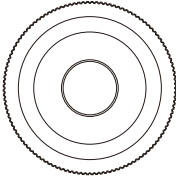


- ปรับปรุงการรับวิทยุ
- ปิดเครื่องโดยหมุนทวนเข็มนาฬิกาไปที่ OFF

FM: ปรับเสอาอากาศไปในระยะทางและมุมที่ดีที่สุดที่รองรับได้

AM: รับสัญญาณวิทยุที่ถูกส่งมาในแวนอนแนวเดียวกันกับเส้นขอบฟ้า

SW: ปรับเสอาอากาศไปในระยะทางที่ดีที่สุดที่รองรับได้

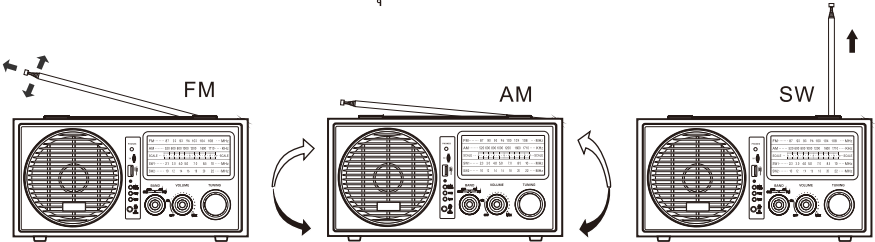

#### คุณลักษณะ

##### 1. ช่วงความถี่

FM: 87-108 MHz  
AM: 520-1710 KHz  
SW1: 2.3-10.0 MHz  
SW2: 10.0-22.0 MHz

##### 2. คุณลักษณะทั่วไป

แรงดันไฟฟ้า: AC 220-240V ~50 Hz  
DC: แบตเตอรี่ 6V(UM-1) หรือ1.5x4

หมายเหตุ!

เครื่องรับวิทยุรองรับไฟสูงสุดได้ที่ 6V  
เท่านั้น หากเกินกว่านี้อาจได้รับความ  
เสียหายได้

##### 3. กำลังเสียงออก 3 วัตต์

ดอกลำโพง 5 นิ้ว

## BLUETOOTH FUNCTION

การเชื่อมต่อบลูทูธ : กดปุ่ม "MODE" เพื่อสลับไปยังฟังก์ชันบลูทูธ คุณจะ

ได้ยินเสียง "Bluetooth" จากนั้นเปิดอุปกรณ์ที่ต้องการเชื่อมต่อบลูทูธ

(เช่น โทรศัพท์ คอมพิวเตอร์ ฯลฯ ) จากนั้นค้นหาชื่อบลูทูธ "AN-777"

เพื่อทำการเชื่อมต่อ คุณจะได้ยินเสียง "Connected" จากนั้นคุณสามารถ

เล่นเพลงหรือไฟล์เสียงต่างๆ จากอุปกรณ์ของคุณ


หมายเหตุ ถ้าเชื่อมต่อบลูทูธไม่ได้ให้ทำการ เปิด/ปิด เครื่อง จากนั้นทำตามวิธีข้างต้น

## FM/AM/SW1/SW2 4 BAND RADIO WITH USB/TF CARD/BLUE-CONNECT & MP3 PLAYER

### Operating Instruction

MADE IN CHINA

#### FUNCTION

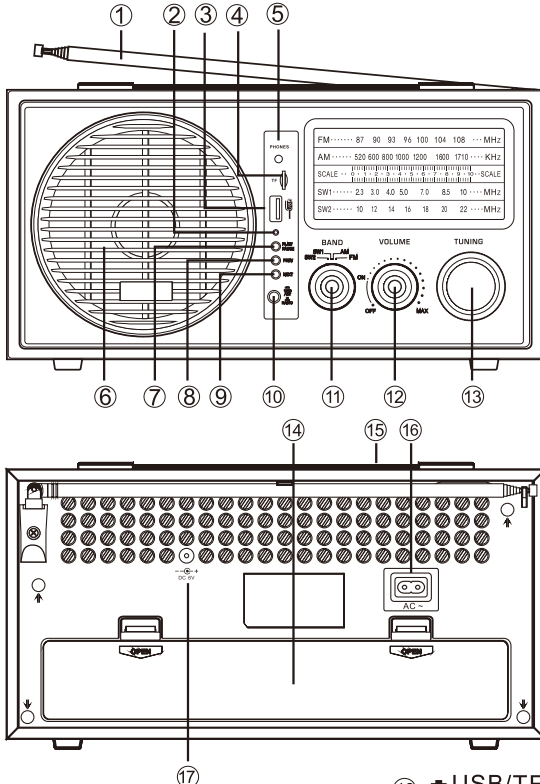


- ① Antenna
- ② Play indicator
- ③ USB interface
- ④ TF Card interface
- ⑤ 3.5mm Headphone jack
- ⑥ Speaker
- ⑦ Play/pause button
- ⑧ Prev button
- ⑨ Next button

- ⑩ USB/TF/BT reading system  
 Radio system
- ⑪ Band selection switch
- ⑫ Volume control
- ⑬ Tuning control
- ⑭ Battery compartment
- ⑮ Handle
- ⑯ AC socket
- ⑰ DC 6V Input

# POWER SOURCES

## AC POWER :

You can power your portable system by plugging the detachable AC power cord into the AC inlet on the back of the unit and into a wall AC power outlet. Check that the rated voltage of your unit matches your local voltage. Make sure that the AC power cord is fully inserted into the unit.

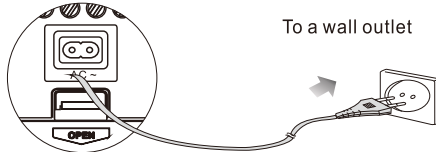

The lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.

## WARNING

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED PERSONNEL.




The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## DC POWER :

Open the battery cover, Insert 1.5V x 4 "D" size batteries into the battery compartment, ensure the batteries are inserted in designated order to avoid any damage cause to the unit. Always remove the batteries when the unit is not used for a long period of time, as this may cause leakage to the batteries and subsequently damage the unit.

**Note**  
that this product is also built-in with high capacity battery as additional operation option.

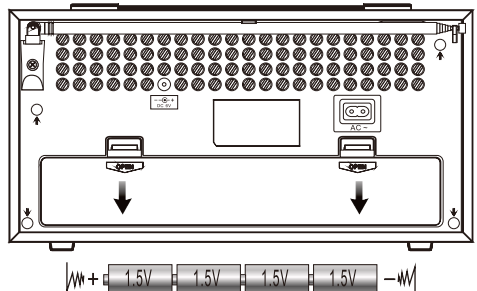

# Before You Begin

---

Thank you for choosing the AN-777 four band radio. This unit will give you hours of reliable service and listening pleasure. Before operating the Radio, please read these instructions thoroughly and retain them for future reference.

---

## Charging

This unit is built-in with high capacity lithium polymer battery. For first time usage, charge the unit with equipped charging cable for 7-8 hours. After charged, "turn On/Off" switch to On position to start unit operation.

---

## Installing the Batteries

- 1 Open the lid of the battery case.
  - 2 Insert the batteries with correct polarity.
  - 3 Close the lid.
- 

## Battery life

Using batteries R20 (size D) SUM-1(NS): FM\AM\SW1\SW2: Approx.20 hours.

---

## Replacing batteries

When the sound becomes weak or distorted, replace all the batteries with new ones.

### Note

When the unit is not to be used for a long period of time, remove the batteries to avoid damage caused by battery leakage and corrosion.

---



## Playing Music

Insert a U Disk or TF Card into the "U DISK or TF Card Slot" with audio file. It will automatically content as default priority, Press prev/next to select to play previous or next audio content.

---


## Operating the Radio

- 1 Turn the unit on by rotating the VOLUME knob clockwise.
- 2 Set BAND to FM, AM, SW1 or SW2

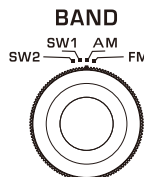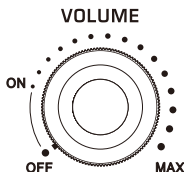

### 3 Tune in a station using TUNING.

#### TUNING

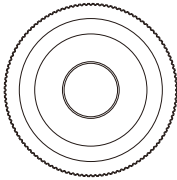


- To improve radio reception
- To turn off the radio, set **VOLUME** to "OFF".

**FM:** Extend the telescopic antenna and adjust the length and angle for the best reception.

**AM:** Since the reception is affected by the direction of the radio, rotate the radio horizontally for optimum reception.

**SW:** Extend the telescopic antenna and adjust the length for the best reception.

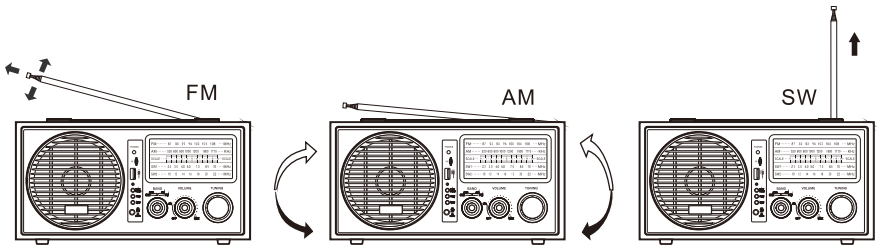

#### SPECIFICATON

##### 1. Frequency Range:

FM: 87-108 MHz  
AM: 520-1710 KHz  
SW1: 2.3-10.0 MHz  
SW2: 10.0-22.0 MHz

##### 2. General Specification

Voltage: AC 220-240V ~50 Hz  
DC: 6V Batteries (UM-1)1.5 X 4  
NOTE!

The product DC IN input voltage of 6V, Exceed 6V may cause damage to the product.

3. Output power: 3W

4. Speaker: 5 Inch

## BLUETOOTH FUNCTION

The Bluetooth connection: press the "" button, switch to Bluetooth mode, you can hear a "Bluetooth" sound, Switching on bluetooth in compatible device (e.g. mobile phone and computer etc.), then search the "AN-777" product name by connecting the bluetooth, hear sound of "Connected", then playing audio files/songs from the device. If the connection failed, turn on/off the unit and repeat the above steps.