


คู่มือการใช้งานผลิตภัณฑ์แอร์เคลื่อนที่

รุ่น


B1PAC07

โปรดอ่านคู่มือผู้ใช้นี้อย่างละเอียดเพื่อให้แน่ใจว่าการทำงานการบำรุงรักษาและการติดตั้งถูกต้อง

คำอธิบายแต่ละชิ้นส่วน

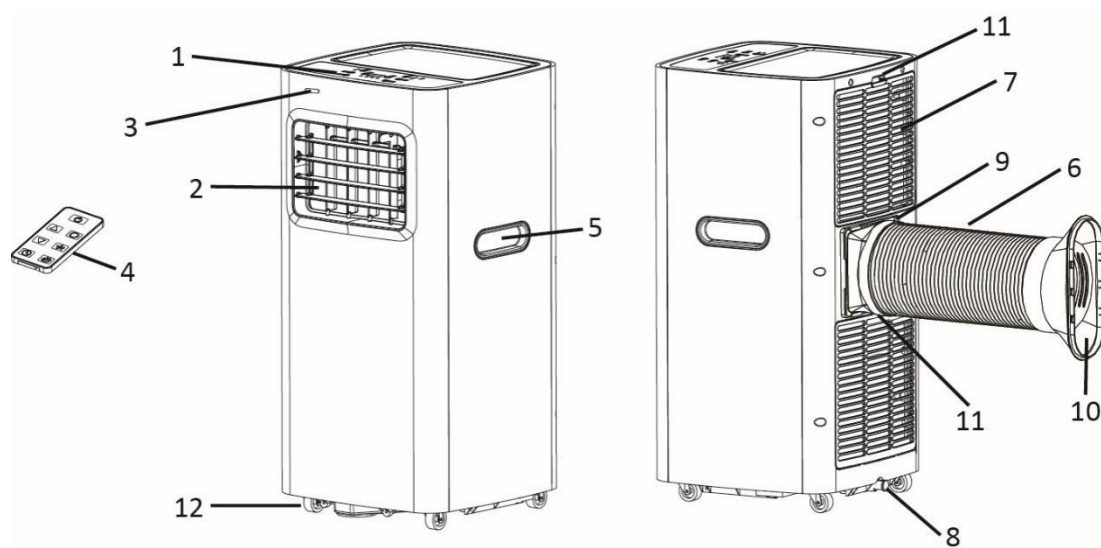

1. แผงควบคุม
2. แผงด้านหลัง
3. ตัวรับสัญญาณ
4. รีโมทควบคุม
5. ค้างจับ

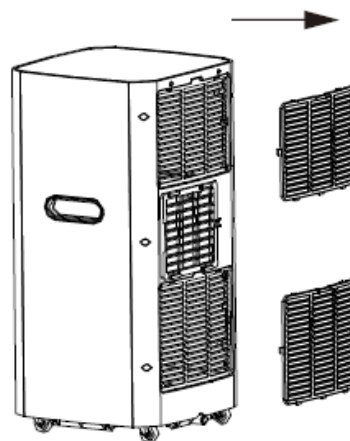

6. ท่อระบายอากาศ
7. ช่องระบายอากาศ
8. ช่องระบายน้ำ (เสียบด้วยจุก)
9. ขั้วต่อท่อ
10. ปลายท่อระบายอากาศ
11. ฝาครอบท่อระบายอากาศ
12. ล้อเลื่อน


รีโมทควบคุม

เครื่องนี้มีรีโมทคอนโทรล โดยจะมีแบตเตอรี่ CR2025 หนึ่งชิ้นติดมาให้พร้อมกับรีโมทคอนโทรล ก่อนเริ่มใช้งานรีโมทคอนโทรลให้ถอด

พลาสติกป้องกันออกจากแบตเตอรี่ หากต้องการเปลี่ยนแบตเตอรี่โปรดดูคำแนะนำหลังรีโมทคอนโทรล หากไม่ได้ใช้งานเป็น

เวลานานให้ทำการนำแบตเตอรี่ออกจากรีโมทคอนโทรล ซึ่งฟังก์ชันของปุ่มรีโมทคอนโทรลอยู่ด้านล่าง

1. ปุ่ม Power
2. เพิ่มอุณหภูมิ และเพิ่มเวลา Timer
3. ลดอุณหภูมิ และลดเวลา Timer
4. เปิด/ปิด โหมด Timer
5. โหมดการทำงาน
6. ปุ่มปรับความเร็วพัดลม
7. ปุ่มโหมด Sleep

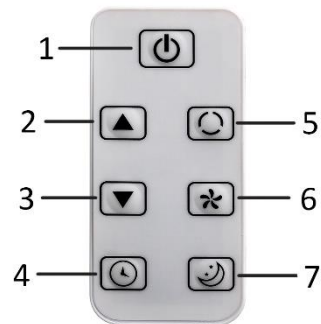

แผงควบคุม



▲ เพิ่มอุณหภูมิ และเพิ่มเวลา Timer

▼ ลดอุณหภูมิ และลดเวลา Timer

โหมดการทำงาน


โหมดทำความเย็น / โหมดพัดลม / โหมดทำความชื้น / โหมดอัตโนมัติ

🕒 ไฟแสดงสถานะ Timer

🌙 ไฟแสดงสถานะ Sleep

การติดตั้งแอร์เคลื่อนที่

- ต้องทำการติดตั้งเครื่องบนพื้นผิวเรียบโดยที่ช่องระบายอากาศจะไม่ถูกปิดกั้น และระยะห่างที่ต้องการรอบตัวเครื่องควรมีอย่างน้อย 30 ซม. (รูปที่ 1)

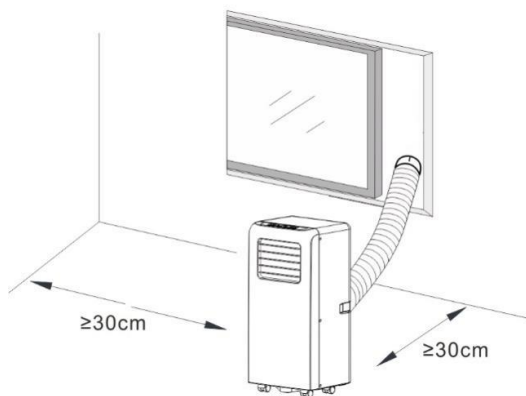


รูปที่ 1


- ห้ามติดตั้งเครื่องในห้องซักผ้า
- ขยายท่อระบายอากาศโดยดึงปลายทั้งสองด้านของท่อออก




- ขันท่อระบายอากาศเข้ากับขั้วต่อท่อ

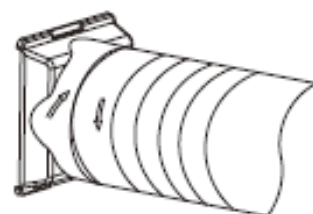

- ขันต่อระบายอากาศอีกด้านเข้ากับปลายท่อระบายอากาศ

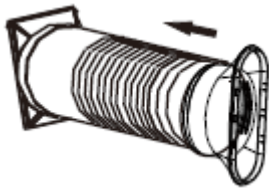

- ใส่ข้อต่อท่อเข้าในโครงยึดที่ด้านหลังของเครื่อง.

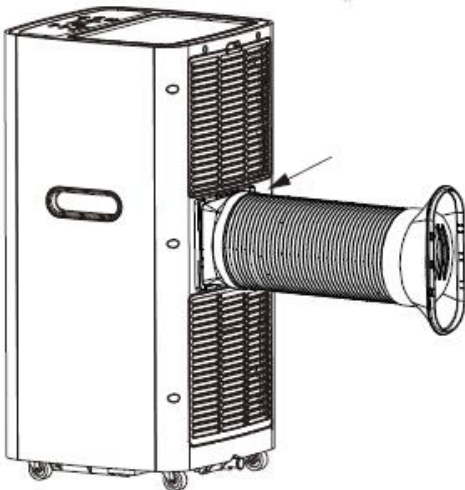

การดำเนินงาน

ควรปล่อยให้เครื่องพักอย่างน้อย 2 ชั่วโมงหลังจากทำการย้ายเครื่อง และก่อนใช้งานให้ตรวจสอบว่าได้ติดตั้งท่อระบายอากาศอย่างถูกต้องหรือไม่ จากนั้นเสียบปลั๊กเครื่อง

1. ปุ่ม Power

กดปุ่ม **Power** เพื่อเปิดเครื่อง และกดอีกครั้งเครื่องจะปิด

2. เพิ่มอุณหภูมิ และเพิ่มเวลา Timer & ลดอุณหภูมิ และลด

เวลา Timer

กดปุ่ม “▲”/“▼” เพื่อตั้งอุณหภูมิห้องที่คุณต้องการ

ตั้งแต่ 15°C - 31°C และปุ่มนี้ยังสามารถใช้สำหรับการ

ปรับตัวจับเวลาระหว่างการตั้งเวลา ค่าจะเพิ่มขึ้น / ลดลง 1

(°C/ ชั่วโมง) สำหรับการกดแต่ละครั้ง.

3. ปุ่มปรับความเร็วพัดลม

กดปุ่มปรับความเร็วพัดลมเพื่อเปลี่ยนความเร็วพัดลม

ระหว่างต่ำและสูง ไฟจะแสดงสถานะ “LOW” / “HIGH”

4. โหมดการทำงาน

กดปุ่มโหมดเพื่อเลือกโหมดการทำงานที่คุณต้องการระหว่าง

โหมดทำความเย็น โหมดลดความชื้น และโหมดพัดลม โดย

ไฟจะแสดงสถานะที่คุณเปิดขึ้นเมื่อคุณเลือกโหมดนั้น

• โหมดอัตโนมัติ

ในโหมดอัตโนมัติ เซ็นเซอร์อุณหภูมิจะทำงาน

โดยอัตโนมัติซึ่งเครื่องจะเปลี่ยนโหมดการทำงานตาม

อุณหภูมิห้อง เพื่อเลือกที่ตามต้องการ โดยเครื่องจะ

เลือกใช้ระบบระบายความร้อนหรือพัดลมและเมื่อ

อุณหภูมิห้องมากกว่า 24 °C เครื่องจะเลือกโหมดทำ

ความเย็นโดยอัตโนมัติ อีกทั้งเมื่อใดอุณหภูมิห้องน้อย

กว่า 24 °C เครื่องจะเลือกโหมดพัดลมโดยอัตโนมัติ

• โหมดลดความชื้น

พัดลมจะทำงานด้วยความเร็วต่ำ ไม่สามารถปรับ

ความเร็วพัดลมและอุณหภูมิได้โดยคอมเพรสเซอร์จะ

หยุดทำงานหลังจากทำงานไปแล้ว 8 นาทีจากนั้นจะ
ทำงานอีกครั้งหลังจาก 6 นาที

วินาที จากนั้นการตั้งค่าตัวจับเวลาจะได้รับการยืนยัน
และไฟแสดงตัวจับเวลาจะนิ่ง.

- โหมดทำความเย็น

เมื่ออุณหภูมิห้องสูงกว่าอุณหภูมิที่ตั้งไว้คอมเพรสเซอร์จะ

เริ่มทำงาน เมื่ออุณหภูมิห้องต่ำกว่าอุณหภูมิที่ตั้งไว้

คอมเพรสเซอร์จะหยุดทำงาน และพัดลมจะทำงานที่

ความเร็วเดิมที่ตั้งไว้

หมายเหตุ: เมื่อคอมเพรสเซอร์ทำงานเครื่องจะสั่นเล็กน้อย

ซึ่งเป็นเรื่องปกติและไม่เป็นอันตรายใดๆ

- โหมดพัดลม

เมื่อพัดลมทำงานตามความเร็วที่ตั้งไว้คอมเพรสเซอร์จะไม่

ทำงาน การปรับอุณหภูมิในโหมดพัดลมไม่สามารถปรับได้

5. โหมดตั้งเวลา

ตั้งค่าเปิดอัตโนมัติ

- เมื่อเครื่องเปิดอยู่ให้กดปุ่มตั้งเวลา ไฟแสดงสถานะตัวจับ
เวลาจะกะพริบ

- กดปุ่มเพิ่มหรือลดตัวจับเวลาเพื่อเลือกเวลาเปิดอัตโนมัติ
ที่คุณต้องการตั้งแต่ 1 ถึง 24 ชั่วโมง (เมื่อใช้การเชื่อมต่อ
WIFI และการตั้งค่าบนโทรศัพท์ของคุณช่วงนี้คือ 1 ถึง
23 ชั่วโมง) จะแสดงผลบนจอแสดงผลดิจิทัล

ไฟแสดงสถานะตัวจับเวลาจะกะพริบเป็นเวลาหลาย

- เครื่องจะเปิดโดยอัตโนมัติเมื่อตามเวลาที่ถูกละเลือก

ตั้งค่าปิดอัตโนมัติ

- เมื่อเครื่องเปิดอยู่ให้กดปุ่มตั้งเวลาไฟแสดงเวลาจะ
กะพริบ

- กดปุ่มเพิ่มหรือลดตัวจับเวลาเพื่อเลือกเวลาปิดอัตโนมัติ
ที่ต้องการตั้งแต่ 1 ถึง 24 ชั่วโมง (เมื่อใช้การเชื่อมต่อ
WIFI และการตั้งค่าบนโทรศัพท์ของคุณช่วงนี้คือ 1 ถึง

23 ชั่วโมง) จะแสดงผลบนจอแสดงผลดิจิทัลและไฟ

แสดงสถานะตัวจับเวลาจะกะพริบเป็นเวลาหลายวินาที

จากนั้นการตั้งค่าตัวจับเวลาจะได้รับการยืนยันและไฟ

แสดงสถานะตัวจับเวลาจะนิ่ง

- เครื่องจะปิดโดยอัตโนมัติเมื่อตามเวลาที่ถูกละเลือกหาก

ต้องการยกเลิกการจับเวลาให้ตั้งเวลาเป็น 0 ชั่วโมงหรือ

กดเพื่อตั้งเวลา และเมื่อจอแสดงผลดิจิทัลกะพริบให้กด

ปุ่มตั้งเวลาอีกครั้ง จากนั้นไฟแสดงสถานะตัวจับเวลาจะ

ดับลง

6. โหมด Sleep (ใช้งานในโหมดทำความเย็นเท่านั้น)

กดปุ่มสลับเพื่อเปิดใช้งานโหมด Sleep ไฟแสดงสถานะ โหมด Sleep จะสว่างขึ้นในโหมด Sleep พัดลมจะเปลี่ยนเป็น ความเร็วต่ำโดยอัตโนมัติ อุณหภูมิที่ตั้งไว้จะเพิ่มขึ้น 1°C หลังจากผ่านไปหนึ่งชั่วโมง และจะเพิ่มขึ้น 2°C หลังจากผ่านไปสองชั่วโมง จากนั้นหลังจากหกชั่วโมงเครื่องจะหยุดทำงานโดยอัตโนมัติ

หมายเหตุ:

- เครื่องสามารถจดจำการตั้งค่าที่คุณตั้งไว้ได้ยกเว้นการตั้งเวลา
- อุปกรณ์ป้องกันอาจหลุดและหยุดเครื่องได้ตามเงื่อนไขที่ระบุด้านล่าง

โหมดทำความเย็น	อุณหภูมิห้องเกิน 43°C
	อุณหภูมิห้องต่ำกว่า 15°C
โหมดลดความชื้น	อุณหภูมิห้องต่ำกว่า 15°C

- หากเครื่องทำงานในโหมดทำความเย็นหรือโหมดลดความชื้นโดยเปิดประตูหรือหน้าต่างเป็นเวลานานเมื่อความชื้นสัมพัทธ์สูงกว่า 80% น้ำค้างอาจหยดลงมาจากช่องระบายอากาศ

การระบายน้ำ

- 1) **คำเตือน:** มีการรั่วไหลของน้ำกลั่นที่ซ่อนอยู่ในเครื่องนี้ น้ำกลั่นจะถูกเก็บไว้ที่ไซเคิลบางส่วนระหว่างคอนเดนเซอร์และแผ่นน้ำ เมื่อระดับน้ำสูงขึ้นถึงระดับบนช่วงของน้ำเต็ม“ E4” จะแสดงบนจอแสดงผลดิจิทัลเพื่อเตือนว่าจะมีการระบายน้ำ
- 2) โปรดถอดปลั๊กไฟออกและย้ายเครื่องไปยังสถานที่ที่เหมาะสมดังถูกในช่องระบายน้ำออกเพื่อระบายน้ำออกให้หมด จากนั้นคุณสามารถต่อท่อระบายน้ำเข้ากับพอร์ตระบายน้ำเพื่อระบายน้ำออก
- 3) หลังจากระบายน้ำแล้วให้ใส่จุกปิดกลับเข้าดังเดิมที่ช่องระบายน้ำ มิฉะนั้นเครื่องอาจน้ำรั่วและทำให้ห้องของคุณเปียกได้

การทำความสะอาดและการบำรุงรักษา

- ก่อนทำความสะอาดตรวจสอบให้แน่ใจว่าได้ถอดปลั๊กเครื่องใช้ไฟฟ้าออกจากเต้ารับไฟฟ้าหรือไม่
- อย่าใช้น้ำมันเบนซินหรือสารเคมีอื่น ๆ ในการทำความสะอาดเครื่อง
- ห้ามล้างเครื่องโดยตรง
- หากเครื่องได้รับความเสียหายโปรดติดต่อตัวแทนจำหน่าย

หรือร้านซ่อม

แผ่นกรองอากาศ

หากแผ่นกรองอากาศอุดตันด้วยฝุ่น หรือ สิ่งสกปรกควรทำความสะอาด

สะอาดแผ่นกรองอากาศทุกๆสองสัปดาห์

- ดึงแผ่นกรองอากาศออกจากตะแกรงช่องอากาศโดยใช้

แถบดึง

- ทำความสะอาดแผ่นกรองอากาศด้วยผงซักฟอกที่เป็นกลาง

ในน้ำอุ่น ($<40^{\circ}\text{C}$) และเช็ดให้แห้งในที่ร่ม

- ติดตั้งแผ่นกรองอากาศใหม่

ทำความสะอาดพื้นผิว

ขั้นแรกให้ทำความสะอาดพื้นผิวด้วยผงซักฟอกที่เป็นกลางและ

ผ้าเปียกจากนั้นเช็ดด้วยผ้าแห้ง

การแก้ไขปัญหา

ปัญหา	สาเหตุที่เป็นไปได้
พัดลมไม่เย็น	ประตูหรือหน้าต่างไม่ถูกปิด
	มีแหล่งทำความร้อนภายในห้อง
	ท่อระบายอากาศร้อนไม่ได้เชื่อมต่อหรือไม่ได้ปิด
	ตั้งค่าอุณหภูมิสูงเกินไป
	ช่องระบายอากาศถูกปิด
พัดลมมีเสียงดัง	พื้นที่ติดตั้งเครื่องไม่ได้ระดับหรือไม่เรียบพอ
	เสียงมาจากการไหลของสารทำความเย็นภายในเครื่อง
รหัส “E2” ขึ้นบนจอแสดงผลดิจิทัล	เซ็นเซอร์อุณหภูมิห้องล้มเหลว
รหัส “E3” ขึ้นบนจอแสดงผลดิจิทัล	เซ็นเซอร์อุณหภูมิเครื่องระเหยล้มเหลว
รหัส “E4” ขึ้นบนจอแสดงผลดิจิทัล	เติมน้ำเต็ม ต้องระบายออก

ข้อมูลทางเทคนิค

ข้อมูลด้านล่างสำหรับการอ้างอิงของเครื่องแอร์เคลื่อนที่

รุ่น	BIPAC07
แรงดันไฟฟ้า	220V
ความถี่	50Hz
กำลังไฟฟ้าด้านเข้า	750W
กระแส	3.4A
ความสามารถในการทำความเย็น	7000BTU/ 2000W
การกำจัดความชื้น (L/H)	0.6
การไหลของอากาศ	250m ³ /h


Portable Air-conditioner User's Manual

Model

B1PAC07

Please read this user's manual carefully to ensure proper use, maintenance and
installation

PARTS DESCRIPTION

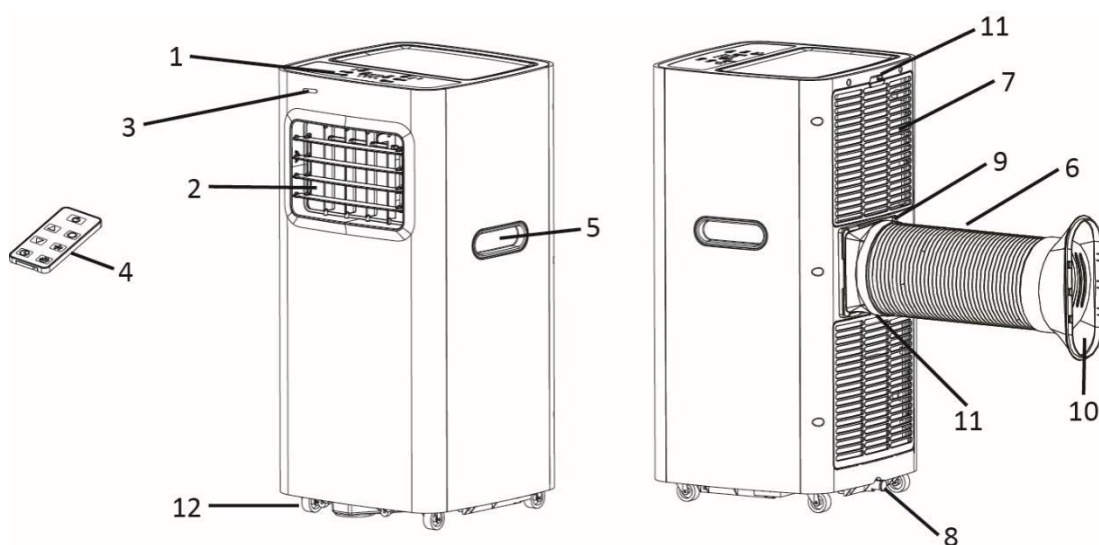

1. Control panel

2. Air outlet

3. Signal receptor

4. Remote control

5. Handle

6. Air exhaust hose

7. Air inlet


8. Drain port (inserted by a stopper)

9. Hose connector

10. Window adaptor

11. Pull tab of the air filter

12. Castor

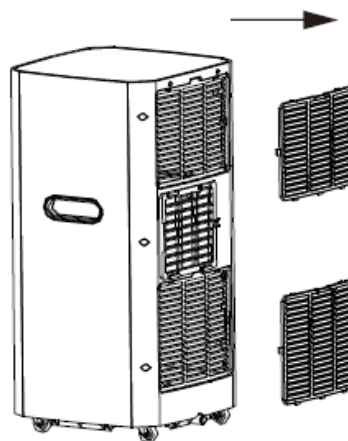

Remote control

This unit has a remote control. One piece of CR2025 battery will be provided with the remote control. Before starting to use the remote control, remove the plastic protection from the battery. If you want to change the battery, please refer to the instruction behind the remote control. If it is not in use for a long time, please take the battery out of the remote control. The functions of the remote control buttons are listed below.

1. Power button

2. Temperature/timer increasing button


3. Temperature/timer decreasing button

4. Timer on/off button

5. Mode button

6. Wind speed button

7. Sleep button

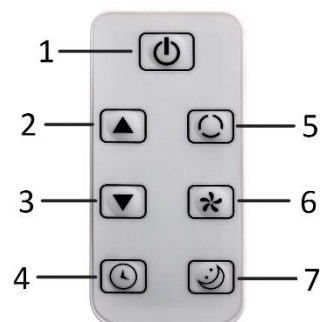

Control panel



▲ Temperature/timer increasing button

▼ Temperature/timer decreasing button

More button


COOL /Fan /Dehumidift /AUTO

⌚ Timer indicator light

🌙 Sleep indicator light

INSTALLATION


- The unit shall be installed on a flat surface where the air outlet would not be blocked. The required distance around the unit should be at least 30cm. **(Fig.1)**

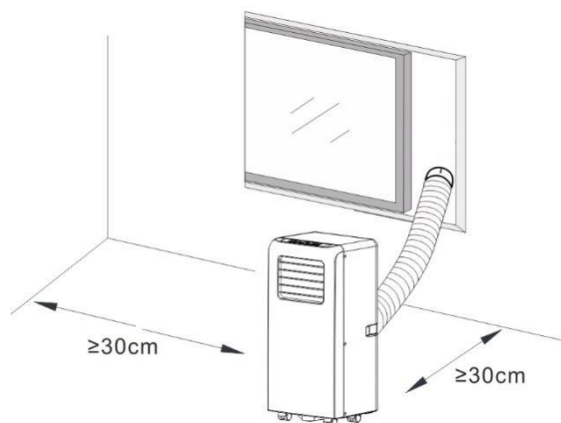


- The unit shall not be installed in a laundry room.
- Extend the air exhaust hose by drawing out the two ends of the hose.




- Screw the air exhaust hose into the hose connector.

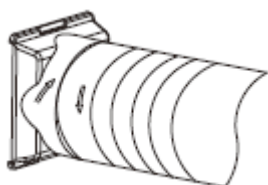

- Screw the other end of air exhaust hose into the window adaptor.

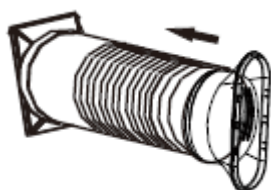

- Insert the hose connector into the bracket on the back of the unit.

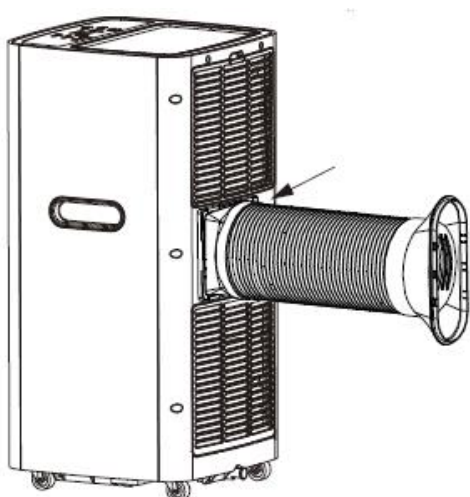

*

OPERATION

*Always let the appliance rest for at least 2 hours after moving it from one location to another.

Before use, check up whether the exhaust hose has been mounted properly. Plug in the appliance.

1. Power button

Press the power button to turn on the appliance. Press the button again, the appliance will be turned off.

2. Temperature/timer increasing button & temperature/timer decreasing button

Press the button “ $\blacktriangle$ ”/“ $\blacktriangledown$ ” to set your desired room temperature from 15°C to 31°C. The buttons can also be used for timer adjustment during timer setting. The value will be increased/decreased by 1 (°C/hour) for each press.

3. Fan speed button

Press the fan speed button to switch the fan speed between low and high. The corresponding indicator light “LOW”/”HIGH” will illuminate.

4. Mode button

Press the mode button to choose your desired working mode among cooling, drying and fan. The corresponding indicator light will turn on when the specific mode is selected.

- Auto mode

In AUTO mode, the indoor temperature sensor operates automatically to select the desired operation with cooling or fan: when the room temperature is no less than 24 °C, the unit automatically selects cooling mode, and when the room temperature is less than 24 °C, the unit automatically selects fan mode.

- Drying mode

The centrifugal fan runs at a low speed. The fan speed and temperature cannot be adjusted.

The compressor will stop after 8 minutes of running and then run again after 6 minutes.

- Cooling mode

When the room temperature is higher than the set temperature, the compressor starts to run.

When the room temperature is lower than the set temperature, the compressor stops and the fan operates at the original set speed.

Note: When the compressor is working, the unit will vibrate slightly. This is normal and harmless.

- Fan mode

When the fan runs at the set speed, the compressor does not

run.

The adjustment of temperature in

Fan mode is not effective.

5. Timer button

Auto-ON setting

- When the appliance is OFF, press the timer button, the timer indicator light will flash.
- Press the timer increasing or decreasing button to select a desired auto-ON time from 1 to 24 hours. (When using WIFI connection and setting on your phone, this range is 1 to 23 hours.) The digital display and timer indicator light will flash for several seconds, then the timer setting is confirmed and the timer indicator light will illuminate still.
- The appliance will automatically

turn on once the select time passed.

Auto-OFF setting

- When the appliance is ON, press the timer button, the timer indicator light will flash.
- Press the timer increasing or decreasing button to select a desired auto-OFF time from 1 to 24 hours. (When using WIFI connection and setting on your phone, this range is 1 to 23 hours.) The digital display and timer indicator light will flash for several seconds, then the timer setting is confirmed and the timer indicator light will illuminate still.
- The appliance will automatically turn off once the select time has passed.

To cancel the timer, set the time to 0 hour, or press into the timer setting, and when the digital display flashes, press the timer button again. The timer indicator light will then turn off.

6. Sleep button (only active in cooling mode)

Press the sleep button to activate the sleep mode. The sleep indicator light turns on.

In sleep mode, the fan turns to low speed automatically. The set temperature will increase 1 °C after one hour, and increase 2 °C after two hours. After six hours, the appliance stops running automatically.

NOTE:

- The appliance can memorize the settings you have made except for

the timer setting.

- The protective device may trip and stop the appliance in the conditions listed below.

Cooling	Room temperature is over 43°C.
	Room temperature is below 15°C.
Drying	Room temperature is below 15°C.

- If the appliance runs in cooling or drying mode with door or window opened for a long time when relative humidity is above 80%, dew may drip down from the air outlet.

Drain water

- 1) Special reminder: There is condensing water recycling hidden in this appliance. The condensing water is partly kept recycling between the condenser and the water plate. When the water level

rises to the upper level, the water-full code “E4” will be shown on the digital display to remind of draining water.

- 2) Please cut off the power supply, move the appliance to a suitable place, pull out the stopper in the drain port to drain the water completely. If conditions permitted, you can also connect the drain hose to the drain port for the water draining.
- 3) After the draining, insert back the stopper to the drain port, otherwise the appliance may leak and make your room wet.

CLEANING AND MAINTENANCE

- Before cleaning, be sure to disconnect the appliance from any electric supply outlet.
- Do not use gasoline or other

chemicals to clean the appliance.

- Do not wash the appliance directly.
- If the appliance is damaged, please contact the dealer or repair shop.

Air Filter

If the air filter becomes clogged with dust/dirt, the air filter should be cleaned once every two weeks.

- Pull out the air filter from the air inlet grille by the pull tab.
- Clean the air filter with neutral detergent in lukewarm water (< 40°C) and dry it up in the shade.
- Reinstall the air filter.

Clean the Surface

First clean the surface with a neutral detergent and wet cloth, and then wipe it with a dry cloth.

TROUBLESHOOTING

Troubles	Possible Causes
Not cool enough	The doors or windows are not closed.
	There are heat sources inside the room.
	The hot air exhaust hose is not connected or blocked.
	Temperature setting is too high.
	Air inlet is blocked.
Noisy	The ground is not level or not flat enough.
	The sound comes from the flowing of the refrigerant inside the appliance.
Code “E2” on the digital display	Room temperature sensor failed.
Code “E3” on the digital display	Evaporator temperature sensor failed.
Code “E4” on the digital display	Water-full warning

TECHNICAL DATA

**Below data for your operating
reference**

Model	B1PAC07
Rated voltage	220V
Rated frequency	50Hz
Rated input	750W
Rated current	3.4A
Cooling capacity	7000BTU/ 2000W
Moisture removal (L/H)	0.6
Air flow	250m ³ /h