

REV.01

Aconatic

คู่มือการใช้งาน
LED TV
รุ่น 50US534AN

คำแนะนำ

กรุณารอทีก่อนคุณต้องอ่านและเข้าใจ ก่อนทำการติดตั้งและใช้งาน โทรทัศน์
เก็บคู่มือไว้ใช้อ้างอิง

สารบัญ

ข้อควรระวังเรื่องความปลอดภัย.....	1
การติดตั้งโทรศัพท์และการเชื่อมต่อ.....	3
อุปกรณ์เสริม.....	3
การติดตั้งโทรศัพท์.....	3
การเชื่อมต่อสัญญาณตามๆ.....	4
ปุ่มโทรศัพท์.....	5
รีโมทคอนโทรล.....	6
การใช้งานเบื้องต้น.....	7
เปิดเครื่อง / สแตนด์บайต์.....	7
การเลือกแหล่งจ่ายไฟ.....	7
การใช้งานหน้าจอ.....	8
คำแนะนำสำหรับปั๊มน้ำ.....	8
การตั้งค่าภาษา.....	8
การตั้งค่าของรายการ.....	8
การตั้งค่า Time-Shift.....	8
แนะนำลิสต์ชื่อ.....	8
การตั้งค่าเครื่องข้อมูล.....	9
WOW	9
มัดจำมีเดีย.....	9
การแก้ไขปัญหาเบื้องต้น.....	10

ข้อควรระวังเรื่องความปลอดภัย

คำแนะนำเรื่องความปลอดภัย



 **ข้อควรระวัง**
เพื่อป้องกันอันตรายจากการถูกไฟฟ้าช็อต
อย่าเปิดฝาระบบเครื่อง อย่าตัววิ่งช่องมีดเครื่อง
ด้วยด้านนอกเด็ดขาด เพราะอาจทำให้ได้รับอันตราย
จากไฟฟ้าแรงสูงได้ หากเครื่องมีปัญหาควรเรียกช่างซ่อมทันทีทำการตรวจสอบ
ซึ่งในที่เท่านั้น

เพื่อป้องกันภัยการเกิดไฟไหม้หรืออุบัติเหตุที่อาจทำให้ไฟฟ้าขึ้นอย่างรวดเร็ว
ทั้งนี้ให้ได้ในระดับ หรือให้ทำงานเครื่องในเบรเวลท์มีชีวิต
ความซึ้งสูง อย่างน้ำใจของท่านที่บรรยายน้ำรักของเหลวใด ๆ
สวยงามให้ด้วยความรื่นเริง เช่น เบญจอน้ำ แกนกนกอไม้ อาจทำให้น้ำหายได้ด้วย
เครื่องอัด

หากที่ตัวเรื่องมีเว็บไซต์ มีการแปลงภาษา ฯ หรือมีกลิ่น
เหมือนไม้ไผ่ ให้ปัดเครื่องและกดคอมพิวเตอร์จากทางเดินรับ
ทันที จากนั้นควรเรียกซ้ำๆชื่อภาษา ญี่ปุ่น หรือติดต่อสอบถาม
ถ้าเป็นญี่ปุ่นจริงๆ ก็ให้ล้างหน้าเพื่อทำความสะอาด แต่ถ้า
ต้องดูดูแลจนเหลือชาด้วยความทุกข์ทรมานแล้วรึเปล่า

ระหว่างที่ว่างๆ ให้เวลาอุ่นๆ ฯ หล่นเข้าไปในตันตีเครื่อง เช่น คลิปหนึ่งกระดะ เนร่าอาจหาทัวร์งี้ไปฟื้นภัยในตันตีเครื่องเกิดการลัดวงจรได้อีกปั๊บอยู่ได้ เด็กเล็กอาจจะทำได้ 3 ชั่วโมง เล่นตันตีเครื่องหรือเล่นอยู่ใกล้กับตันตีเครื่อง



ในขณะเดียวกัน ควรจัดวางภาพโฆษณาให้ของเครื่อง
ให้เรียบง่าย ในไปดีปัลบี้หังกัง เพื่อช่วยให้ขายการ
ใช้งานของเครื่องงานนั้นและป้องกันไม่ให้สายไฟชำรุด
ควรใช้งานกับระบบไฟฟ้าที่ติดตั้งอย่างดีเท่านั้น อีกต่อหนึ่งใช้งานกับ
เตารีบบ์ที่ร้อนด้วยแก้วก็พิเศษที่สุดแล้ว เพราะอาจทำให้เตารีบบ์บันดราย
จากกระแสไฟฟ้าได้

เพื่อป้องกันอันตรายจากการเกิดไฟไหม้ อย่างรวดเร็วที่มี
เพลิงไหม้วางไว้กับตัวเครื่อง เช่น เพลิงจากเทียนไข
เป็นต้น



คำแนะนำเรื่องความปลอดภัย

เสาอากาศภายนอกที่ต้องใช้เงินกับห้องเครื่อง ควรติดตั้งอยู่ห่างจากสีไฟฟ้าแรงสูงเสมอ ในขณะที่มีผู้คนเดินทางเข้าหรือฟื้นฟ้า ให้ปิดเครื่อง ถอดปลั๊กและถอดสายอากาศออกเสมอ ไม่แนะนำให้ติดตั้งช่องเสียบสายอากาศกับเด็กไว้บนอนุญาติถังกันเงินใน เพราะอาจทำให้ห้องแสงไฟฟ้าส่องสว่างซึ่งอาจเสียบสายอากาศจนทำให้เครื่องเสียหายได้



 ปิดเครื่องและนอนเล็กอ่อนเมื่อได้ใช้เงินเดือนที่ได้จากการคิริ่งเสร็จแล้วหรือเมื่อได้ใช้เงินเดือนครึ่งเดือนต่อหันเป็นเวลานาน ออกเพล็อกออกหันที่เมื่อเกิดไปตกหรือพ้าหัว อ่าจ้างที่สายอากาศในขณะที่พ้ำก้าสีผ่า



 ขบวนรถดอลล์กี้ ให้จับที่ตัวบล็อกแล้วเดียงออก ไม่ควรเดึงที่สายไฟไม่ควรรับที่บล็อกไฟ ในขณะที่มือเปิดก



 การฟันเสียงจากหูฟังหรือ HEAD-PHONE ที่เสียงพั่งมาหากันไป อาจทำให้เป็นอันตรายกับระบบการได้ยินหรือแก้วหัวที่



คำแนะนำในการติดตั้งเครื่อง



ควรติดตั้งและใช้งานเครื่องในบริเวณที่มีอากาศถ่ายเทให้สอดคล้องอย่างน้ำผึ้ง กระดาษหรือวัสดุใด ๆ มาปิดหรือคลุมที่ตัวเครื่อง เช่น กระดาษหนังสือพิมพ์ ผ้ากันผ้าคลุม เป็นต้น ในการติดตั้งเครื่อง ควรให้มีห้องว่างรอบ ๆ ห้องเครื่องอย่างน้อยห้องละ 10 ซม.

คำแนะนำในการติดตั้งและใช้งานเครื่องในลักษณะหลังบ้านนิดความร้อน



ควรติดตั้งและใช้งานเครื่องในลักษณะหลังบ้านนิดความร้อน เช่น เครื่องกระ化ความร้อน เตาอบ หรือเครื่องขยายเสียง เป็นต้น อย่างไรก็ตามที่ต้องระวังคือ การติดตั้งและใช้งานเครื่องในบริเวณที่มีแสงสว่างเพียงพอ เพราะการไฟฟ้าที่ต้องใช้ในบริเวณที่แสงสว่างเกินไปอาจทำให้มีผลกระทบต่อการมองเห็นของดวงตาได้ ควรเก็บเครื่องไว้ในห้องที่ห้องจากบริเวณที่มีลม南 แม่เหล็กเข็นเข้น เช่น ถนนแม่เหล็กจากศูนย์กลางส่องสว่างที่อาจทำให้จอกลมเสียหายได้

คำแนะนำเรื่องความปลอดภัย




อย่าติดตั้งและใช้งานเครื่องในระยะห่าง ด้วย ห้องว่างหรือบริเวณใด ๆ ที่ไม่มีบันจุพาราชาเนื่องจากหากติดตั้งและใช้งานเครื่องในระยะห่างดังกล่าวจะส่งผลให้เกิดไฟฟ้าสถิตที่สูงมาก ทำให้ติดตั้งและใช้งานเครื่องในบริเวณที่ห้องว่างและหน้าโดยเฉลี่ย เมื่อติดตั้งเครื่องโดยใช้ขาตั้ง คุณต้องรับมาระยะห่างเป็นพิเศษ เมื่อรับอุตสาหกรรมเครื่องใช้ไฟฟ้าที่หันซ้ายและขวา กระเทือนดังกล่าวอาจทำให้ไฟฟ้าพุ่งสูงขึ้น เสียหายได้

อย่าติดตั้งและใช้งานเครื่องในลักษณะหลังห้อง เช่น บริเวณ



ใกล้อ่างอาบน้ำ อ่างน้ำห้องน้ำชั้นล่างงาน ห้องน้ำ กีดในบริเวณที่หันเปียกเชื้อ หรือรอบ ๆ ระหว่างน้ำ เป็นต้น

เมื่อขยับเครื่องจากบริเวณที่มีอากาศเย็น ไปยัง

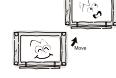

บริเวณที่มีอากาศร้อน ไม่ควรเปิดใช้งานเครื่องในห้องที่เพราะอากาศมีความร้อนเกินเดือนภายในเครื่องได้ แนะนำให้ห้องเครื่องที่ใช้ระยะเวลาหนึ่ง เพื่อรอให้ความชื้นระเหยออกในจนหมดก่อน จึงดอยเปิดเครื่องใช้งานต่อไป

เพื่อเป็นการป้องกันความเสียหายที่อาจเกิดขึ้น



จากการติดตั้งและใช้งานเครื่อง ไม่ว่าจะด้วยพื้นโดยใช้ขาตั้งหรือแขวนบนผนัง ควรติดตั้งเครื่องด้วยความเหมาะสมในคุณภาพการติดตั้งเครื่องเสมอ

การทำความสะอาด



ปิดเครื่องและดูดฝุ่นเล็กๆ กอนที่จะทำความสะอาด เครื่องจะมีอยู่ในห้องที่เป็นของเหลวหรือสเปรย์มาทำความสะอาดเครื่องแนะนำให้ใช้เพียงผ้าสะอาดชุบน้ำเปียกมาก ๆ เพื่อทำความสะอาดเครื่อง เท่านั้น

สำหรับการรีบากันอันตรายที่ติดตั้ง คือ ควรรีบันดูมีการใช้งานให้ลับเลี้ยด และทำความสะอาดเจ้าใจก่อนที่จะรีบันดูติดตั้งและใช้งานเครื่อง และควรเก็บรักษาดูแลการใช้งานให้เพื่อใช้งานอิงในอนาคต

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

HDMI(High-Definition Multimedia Interface) และโลโก้ HDMI เป็นเครื่องหมายการค้าหรือเครื่องหมายการค้าที่ลงทะเบียนของ HDMI Licensing Administrator, Inc. ในประเทศไทยและประเทศอื่นๆ

การติดตั้งโทรทัศน์และการเชื่อมต่อ


อุปกรณ์เสริม

1. โทรทัศน์
2. คู่มือการใช้งาน
3. รีโมทคอนโทรล
4. สายไฟ (ต่อ กับ ชุด โทรทัศน์)

การติดตั้งโทรทัศน์

ข้อแนะนำในการติดตั้ง

- ควรติดตั้งโทรทัศน์ใกล้กับแหล่งจ่ายไฟ เพื่อให้ง่ายต่อการเสียบและถอดปลั๊ก
- เพื่อความปลอดภัยโปรดเลือกผนังหรือฐานที่เหมาะสมในการติดตั้ง
- เพื่อหลีกเลี่ยงความเสียหายควรวางโทรทัศน์ไว้บนโต๊ะหรือชั้นที่แข็งแรง
- ควรให้พนักงานหรือผู้ช่วยจากผู้ติดตั้งโทรทัศน์บันบัด
- ห้ามวางโทรทัศน์ไว้บนตัวดูที่ไว้ต่อการสั่นสะเทือน
- ห้ามวางโทรทัศน์ในสถานที่ ที่แมลงอาจเข้าไปในวัสดุหรือได้
- ห้ามติดตั้งโทรทัศน์ใกล้กับเครื่องปรับอากาศมิฉะนั้นแผงหน้าจออาจเกิดความชื้นและทำให้สีจอดเสื่อมได้
- ไม่ควรติดตั้งโทรทัศน์ใกล้ส่วนน้ำมัน เช่น โคมไฟ ไฟฟ้า ฯลฯ
- ห้ามติดตั้งโทรทัศน์ในห้องที่มีควันบุหรี่ เนื่องจากควันบุหรี่จะทำลายจอภาพ

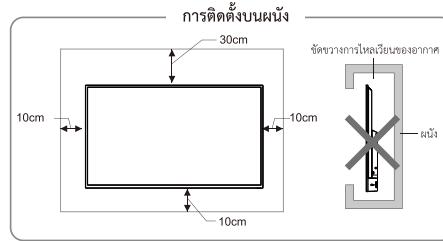

การระบายอากาศ

- ควรเว้นพื้นที่รอบๆ โทรทัศน์เพื่อระบายอากาศ และคงในรูป
- ห้ามปิดช่องระบายอากาศหรือสีตัดถูกๆ ๆ ที่ไม่ใช่โทรทัศน์
- ห้ามวางอุปกรณ์ใกล้กับโทรทัศน์ เช่น ถุงหูหิ้ว สือ ถุงสีลีค้า นอกจากโทรทัศน์ต้องการระบายอากาศอย่างเหมาะสม




ข้อควรระวัง

ห้ามวางโทรทัศน์ไว้ในพื้นที่ที่ไม่มีระบายอากาศ เพราะอาจทำให้โทรทัศน์ระเหดหัก กับพื้นหรือเกิดการบาดเจ็บได้โดยเฉพาะกับเด็กซึ่งสามารถหลีกเลี่ยงได้ดังนี้


- การใช้ตัวสำหรับวางโทรทัศน์หรือชั้นวางที่แนะนำโดยผู้ผลิตโทรทัศน์
- ใช้เฟอร์นิเจอร์ที่สามารถรองรับโทรทัศน์ได้อย่างปลอดภัย
- ทำการตรวจสอบว่าโทรทัศน์ไม่ยื่นออกมากจากขอบเฟอร์นิเจอร์
- ไม่วางโทรทัศน์ไว้บนเฟอร์นิเจอร์สูง เช่น ตู้ที่สีสือ เป็นต้น โดยที่ไม่มีวัสดุที่แข็งแรงรองรับ เช่น กระเบื้องหินธรรมชาติ
- ห้ามวางโทรทัศน์ไว้บนพื้นหินหรือวัสดุที่อยู่ระหว่างโทรทัศน์และเฟอร์นิเจอร์
- ให้ความรู้สึกเดี๊ยะ ด้วยวัสดุอันตรายของการเป็นขี้นไปบนเฟอร์นิเจอร์ เพื่อเข้าสัมผัสกับโทรทัศน์

หากโทรทัศน์ของคุณกำลังถูกเก็บไว้เป็นระยะเวลานานและย้ายที่ตั้งใหม่ ควรพิจารณาตามที่กล่าวไว้ข้างต้น

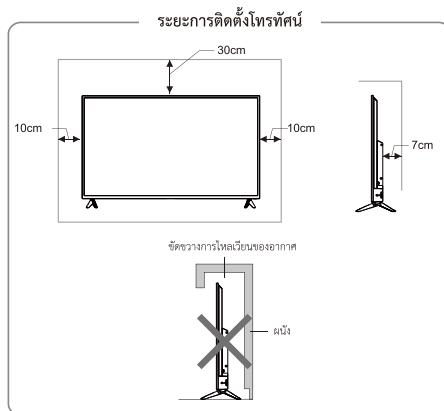

การเชื่อมต่อสัญญาณต่างๆ


1. เมื่อคุณต้องการเชื่อมต่ออุปกรณ์ที่รองรับฟังก์ชัน ARC ให้เลือกช่อง HDMI-1
2. ซึ่งจะต่อสัญญาณ HDMI สามารถรับฟังก์ชันการเชื่อมต่อ DVI ด้วยสายต่อสัญญาณ HDMI / DVI จากภายนอก
3. อุปกรณ์ต่อพ่วงและสายเคเบิลที่อธิบายไว้ในข้อเมื่อนี้ควรซื้อแยกต่างหาก

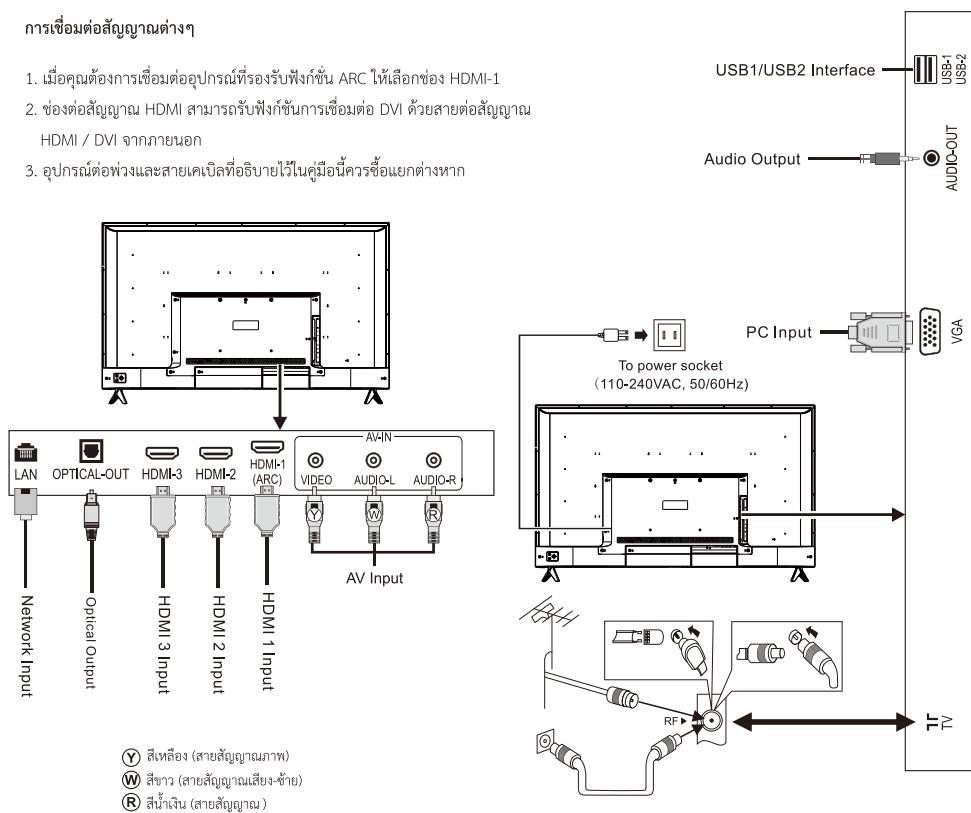

ข้อควรระวัง

เมื่อเชื่อมต่อเส้าอากาศภายนอกเข้ากับช่องสัญญาณโทรศัพท์
ให้เลือกบล็อกโทรศัพท์ที่ค้นก่อนและไม่ควรให้เส้าอากาศใกล้กับเสาไฟแรงสูง
เพื่อหลีกเลี่ยงไฟฟ้าช็อต

ចុះពូនីទឹក

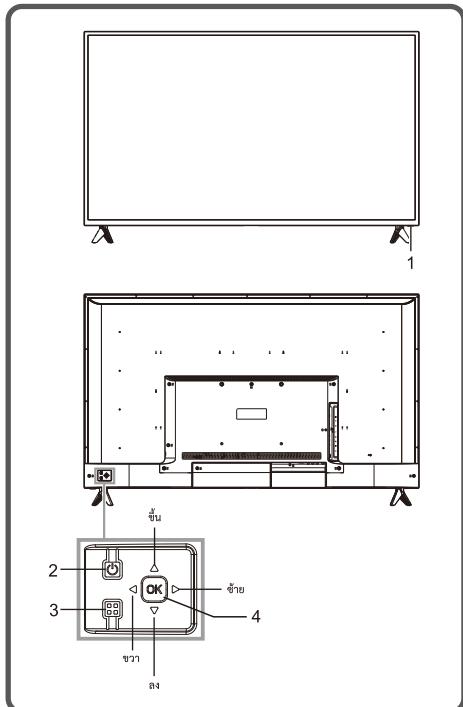

1) ឲ្យ LED សាច់ស្ថាននិងការរួចរាល់សិរីយាល័យពីរគុល

2) ចុះចុះ ដែលត្រូវបាយក្រុម បើបាយក្រុម ឬបើបាយក្រុមទៅក្នុងបុណ្ណោះបាយក្រុមទៅក្នុងបុណ្ណោះបាយក្រុម

3) ចុះមេដ្ឋាន: កចប្បាំដើម្បីដើរខ្សោយឱ្យបាយក្រុម ឬបាយក្រុមទៅក្នុងបុណ្ណោះបាយក្រុម [MENU] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុមទៅក្នុងបុណ្ណោះបាយក្រុម

4) ចុះសិរីយាល័យ

កចប្បាំដើម្បីក្រុម

①. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [SOURCE] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

②. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [OK] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

ឲ្យការកចប្បាំដើម្បីក្រុម

①. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [SOURCE] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

កចប្បាំដើម្បីក្រុម [CH ▲] / [CH ▼] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

②. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [▲] / [▼]

បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

ឲ្យការកចប្បាំដើម្បីក្រុម

①. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [OK] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

កចប្បាំដើម្បីក្រុម [VOL +] / [VOL -] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម


②. ឲ្យការធ្វើការមួយដែលមិនមែនមេដ្ឋាន ឬយកចុះបាយក្រុម [◀] / [▶] បន្ទីនៅក្នុងបុណ្ណោះបាយក្រុម

ធម្មាយទៅ:

①. តាក់សម្រាប់ការក្រុមដែលត្រូវបាយក្រុម ឬបាយក្រុមទៅក្នុងបុណ្ណោះបាយក្រុម

②. ឲ្យការកចប្បាំដើម្បីក្រុម

รีโมทคอนโทรล

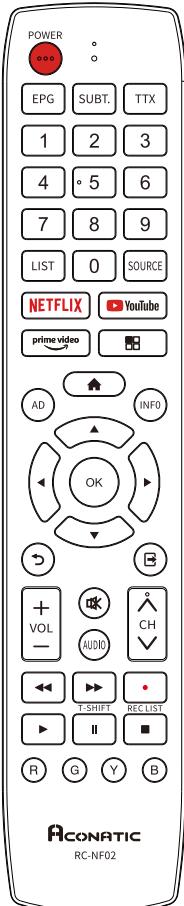

ปุ่มรีโมทคอนโทรล

หมายเหตุ: ลักษณะของรีโมทคอนโทรลอาจแตกต่างจากรูปนี้ กรุณารอๆจาก ของจริงเพื่อเป็นมาตรฐานสำหรับการอ้างอิง

ปุ่ม	ฟังชันการใช้งาน
Power (...)	เปิด / ปิดเครื่อง
Mute (🔇)	เปิด / ปิดเสียง
Number keys	ปุ่มหมายเลขหรือเลือกช่อง
LIST	ปุ่มแสดงรายการ
AD	ปุ่มเบิด/ปิด AD
prime video	ปุ่มเบิดแอปพลิเคชัน prime video
YouTube	ปุ่ม YouTube
SOURCE	ปุ่มเลือกช่องสัญญาณ
NETFLIX	ปุ่ม NETFLIX
Home (🏡)	แสดงหน้าจอของโทรศัพท์
Menu (תפריט)	ปุ่มเปิด/ปิด เมนูการตั้งค่า
◀▶, ▲▼	ปุ่มเลือก บน ลง ซ้าย ขวา
OK	ปุ่มเลือก ตกลง
Return (↶)	ปุ่มกลับไปยังรายการก่อนหน้านี้
Exit (✖)	ปุ่มกลับไปยังรายการก่อนหน้านี้
Red key	ปุ่มฟังก์ชันพิเศษ
Green key	ปุ่มฟังก์ชันพิเศษ
Yellow key	ปุ่มฟังก์ชันพิเศษ
Blue key	ปุ่มฟังก์ชันพิเศษ
INFO	ปุ่มแสดงรายละเอียด
VOL+/-	ปุ่มเพิ่ม/ลด ระดับเสียง
CH+/- (↑ CH ↓)	ปุ่มเปลี่ยนช่องรายการ
EPG	ปุ่มแสดงแผ่นพื้นที่ของรายการ
AUDIO	ปุ่มตั้งค่าเสียง
SUBT.	(แสดงภาษาคำบรรยาย)
TTX	ปุ่มแสดงข้อความ
◀◀	ปุ่มเล่นไฟล์ก่อนหน้านี้
▶▶	ปุ่มเล่นไฟล์ถัดไป
Record (●)	ปุ่มบันทึกของรายการ
▶ (play)	ปุ่มเล่นในใหม่ก่อนล็อกอิน
T-SHIFT (II)	ปุ่มหยุดเล่นเข้าครัววนไปใหม่คัมภีร์เดียว
REC LIST (■)	ปุ่มหยุดเล่นในใหม่คัมภีร์เดียว

วิธีการติดตั้งรีโมทคอนโทรล

แบตเตอรี่

จอดใส่ถ่านอย่างสับเปลี่ยนได้โดยรีโมทคอนโทรล
ตรวจสอบว่าของแบบเดียวกันเป็นไปตามเครื่องหมายขี้
" + " และ " - " ในช่องสับเปลี่ยนเดียวกันของรีโมทคอนโทรล

ข้อควรระวังในการใช้รีโมทคอนโทรล

- ควรยื่นรีโมทคอนโทรลไปที่ชิ้นเซ็นเซอร์ที่ติดตั้งบนหน้าจอโทรทัศน์ในระยะห่าง การพิจารณาไม่ควรมีวัสดุที่วางไว้ระหว่างรีโมทคอนโทรลกับชิ้นเซ็นเซอร์ เพราะอาจขัดขวางการทำงานของระบบ
- ไม่ควรใช้มือการกดหรือกระแทกบ่อยๆ นอกรากนี้โปรดอย่าให้รีโมทคอนโทรลโดยเด็ดขาดครองเนื่องจาก อาจส่งผลให้การเสียบปลั๊กของรีโมทคอนโทรล
- รีโมทคอนโทรลอาจใช้งานไม่ได้ เมื่อตัวเซ็นเซอร์ได้รับแสงแดดโดยตรง ควรเปลี่ยนมุมให้หันหรืออี๊จันรีโมทคอนโทรลให้ลักษณะตัวเซ็นเซอร์ ไม่ได้เสียบแบบเดียวอีกเมื่อ ทางไม่ได้ใช้งานรีโมทคอนโทรล เป็นเวลานาน ควรถอดแบตเตอรี่ออก
- อย่าใช้แบตเตอรี่ที่ต่างประเภท ไม่ควรใช้แบตเตอรี่ที่ไม่เหมือนเดิมด้วยกัน ควรเปลี่ยนแบตเตอรี่เป็นคู่
- อย่าทิ้งแบตเตอรี่ในกองไฟ กรุณากำจัดแบตเตอรี่ตามกฎระเบียบ ที่เกี่ยวข้องเกี่ยวกับการคุ้มครองสิ่งแวดล้อม

การใช้งานเบื้องต้น

1. การใช้งานปุ่มกดบนโทรทัศน์ สามารถกดได้ทั้งคำอธิบายปุ่มบนโทรทัศน์
2. ปุ่ม [►] หมายถึงปุ่มทิศทาง และปุ่ม [►](play) หมายถึงปุ่มฟังก์ชันเล่น
3. คำแนะนำสำหรับการใช้งานเมนูในตู้เย็นนี้ อธิบายตามโหมดโทรทัศน์ และการทำงานในโหมดอื่นๆ
4. ก่อนเปิดเครื่องจากฐานตรวจสอบแหล่งจ่ายไฟ

เปิดเครื่อง / สแตนบายด์

ตรวจสอบแหล่งจ่ายไฟ ก่อนทำการเปิดเครื่อง
เสียงไฟฟ้าหักและลงมาไฟ กดปุ่ม [①] (หากไม่มีปุ่ม คุณไม่จำเป็นต้องทำงานทึ้ง ตอนนี้) จากนั้นกดปุ่ม [POWER] เพื่อเปิดให้หัวหน้าจอจะแสดง “อินติวิ่งรับ” จากนั้น กดปุ่ม [▲]/[▼] เพื่อเลือกภาษาที่คุณต้องการจากนั้นกด [►] เพื่อไปรังสรรค์ตอนต่อไป การแจ้งเตือนการรับรวมช่องสัญญาณและการอัพเดตพิร์มแวร์จะปรากฏบนหน้าจอ คุณสามารถเลือกตั้งค่า ประเทศ ตั้งค่าเวลาและโหมดโทรทัศน์ คุณต้องทำการเลือกที่จะเข้ามันขึ้นมา กรณีต้องตั้งค่าต่อไป กดปุ่ม [▷] หากคุณต้องการกลับไปยังก่อนหน้านี้

เมื่อเปิดเครื่องให้กดปุ่ม [POWER] เพื่อเปลี่ยนไปโหมดสแตนบาย
หมายเหตุ: อุปกรณ์นี้ใช้เทคโนโลยีการประมวลผลล่วงงาน หากไม่มีสัญญาณ เครื่องจะเข้าสู่สถานะสแตนบายโดยอัตโนมัติ

การเลือกแหล่งสัญญาณ
คุณสามารถเลือกต่ออุปกรณ์ต่อ ฯ กับโทรทัศน์หากมีสายสัญญาณภาพ HDMI, AV และอื่นๆ คุณสามารถเลือกต่อ กับช่องสัญญาณที่ต้องการ ของโทรทัศน์ หลังจากเสร็จสิ้นต่อแล้วให้กดอุปกรณ์และกดปุ่ม [SOURCE] จากนั้นเมื่อของแท้สัญญาณจะปรากฏบนหน้าจอ กดปุ่ม [◀]/[▶] เพื่อเลือกสัญญาณที่เข้าและกดปุ่ม [OK] เพื่อยืนยัน

การใช้งานหน้าเมนู

กดปุ่ม [■] เพื่อแสดงเมนูหลักบนหน้าจอ:
1. กดปุ่ม [▲]/[▼] เพื่อเลือกเมนูการทั้งทั่วไป เช่น, ภาพ , เสียง, เครื่องข่าย,
การตั้งค่าระบบ, สื่อค, เวลา, การซ่อมแซมเพื่อตั้งค่า
2. จากนั้นกดปุ่ม [OK]/[▶] เพื่อเข้าสู่เมนูที่เลือก
3. กดปุ่ม [▲]/[▼] เพื่อเลือกรายการในเมนู
4. กดปุ่ม [OK] เพื่อเมนูย่อย
5. กดปุ่ม [◀]/[▶] หรือ [▲]/[▼] เพื่อบรับค่าหรือตั้งค่า
6. เมื่อเมนูหลักแสดงบนหน้าจอ
กดปุ่ม [▷] / [■] เพื่อกลับไปบังคับหน้าเมนูเมื่อโทรศัพท์สมาร์ทโฟนแสดงเมนูย่อย
7. ระหว่างการใช้งาน เมนูที่ไม่ได้เลือกจะเปลี่ยนเป็นสีเทา
หมายเหตุ: รหัสผ่านเริ่มต้นสำหรับระบบล็อกคือ 0000

ค่าเมนูสำหรับฟังก์ชันสมาร์ท

กดปุ่ม [▲] เพื่อแสดงหน้าโน้ม
1. กดปุ่ม [◀]/[▶] เพื่อเลือกและตั้งค่า
2. กดปุ่ม [OK] เพื่อเล่นแบบพลิกคืบ
3. กดปุ่ม [▷] เพื่อกลับไปรายการก่อนหน้ากัน
4. กดปุ่ม [●] เพื่อออกจากโหมดสมาร์ท

หมายเหตุ: ก่อนที่จะใช้งานอินเทอร์เน็ตโปรดเชื่อมต่ออินเทอร์เน็ตเข้ากับโทรศัพท์ โดยไปที่ “การตั้งค่าเครือข่าย”

การตั้งค่าภาษา

กดปุ่ม [■] เลือก การตั้งค่าระบบ> ภาษาและกดปุ่ม [OK] เพื่อเข้าสู่
รายการ กดปุ่ม [▲]/[▼] เพื่อเลือกภาษาที่ต้องการแล้วกดปุ่ม [OK]

การค้นหาของรายการ

บริการตั้งค่าค้นหาอ่อนรับข้อมูลรายการสำหรับครั้งแรก
ก่อนที่จะสามารถไปตรวจสอบให้แน่ใจว่าซื้อต่อมาจากห้องต้อง

การค้นหาแบบอัตโนมัติ

กดปุ่ม [■] เลือกของรายการ > การค้นหาอัตโนมัติ กดปุ่ม [OK]
จากนั้นเลือกประเภทการค้นหาและประเภทความต้องการ
เลือกค้นหาและกดปุ่ม [OK] จากนั้นเลือก ตกลง ในหน้าต่างป้อนอักษรและกด [OK]
เพื่อเข้ามาการค้นหา กดปุ่ม [●] จากนั้นเลือก ตกลง ในหน้าต่างป้อนอักษร
และกดปุ่ม [OK] เพื่อออกจากค้นหา หากเลือก ยกเลิก และกดปุ่ม [OK] โทรศัพท์จะทำการค้นหาของรายการต่อไป

ค้นหาสัญญาณ DTV ด้วยตนเอง

กดปุ่ม [■] เลือกของรายการ > ค้นหาสัญญาณ DTV ด้วยตนเอง
กดปุ่ม [OK] เพื่อเข้าสู่เมนูการค้นหาสัญญาณ DTV ด้วยตนเอง
กดปุ่ม [◀]/[▶] เพื่อเลือกของสัญญาณจากนั้นกด [▲]/[▼] เพื่อเลือกค้นหา
และกดปุ่ม [OK] เพื่อยืนยัน

ค้นหาสัญญาณ ATV ด้วยตนเอง

กดปุ่ม [■] เลือก ของรายการ > ค้นหาสัญญาณ ATV ด้วยตนเอง
กดปุ่ม [OK] เพื่อเมนูการค้นหาสัญญาณ ATV ด้วยตนเอง
กดปุ่ม [▲]/[▼] เพื่อเลือก ของปัจจุบันและจากนั้นกดปุ่ม [◀]/[▶] เพื่อ

เลือกความเร็วของสัญญาณ จากนั้นกดปุ่ม [◀]/[▶] เพื่อค้นหาสัญญาณ

การบันทึกของรายการ

ในโหมด DTV กดปุ่ม Record [●] จากนั้นระบบจะเริ่มบันทึก กดปุ่ม [■] เพื่อ
หยุดและออกจากการบันทึก กดปุ่ม [REC LIST] เพื่อดูผลบันทึกและเลื่อนรายการ
ที่บันทึก กดปุ่ม [◀]/[▶]/[●](play)/[■]/[■] เพื่อดูเนินการเล่นไฟล์
หมายเหตุ: ฟังก์ชันการบันทึกสามารถรองรับระบบไฟล์ FAT32 เท่านั้นระบบไฟล์อื่น
จำเป็นต้องทำการฟอร์แมต ก่อนฟอร์แมตแนะนำให้ล้างร่องข้อมูลที่เป็นประโยชน์
กดตัวท่านเอง

การตั้งค่า Time shift

เมื่อผู้ใช้ออกจากไปrogramในช่วงเวลาสั้น ๆ ฟังก์ชัน
สามารถหยุดรายการได้ชั่วคราว และบันทึกรายการไว้ยังที่เก็บข้อมูล
เมื่อผู้ใช้เล่นรายการต่อ สามารถเล่นต่อได้ในโหมด DTV
กดปุ่ม [T-SHIFT] แนะนำเลือกการเลื่อนเวลาจะแสดงบนหน้าจอ
และรายการจะถูกบันทึกในสถานะหยุดทำงาน กดปุ่ม [●](เล่น) เพื่อเล่นรายการต่อ
กดปุ่ม [●] [หยุด] เพื่อหยุดและออกจาก T-SHIFT
ขณะเล่นให้กด [◀]/[▶]/[●](play)/[■]/[■] เพื่อตั้งค่า

แอปพลิเคชัน

กดปุ่ม [●] จากนั้นกดปุ่ม [◀]/[▶] เพื่อเลือกและตั้งค่าและกด
[OK] เพื่อเข้าใช้งานสำหรับ Youtube, Prime Video หรือ Netflix
สามารถกดปุ่ม [Youtube], [Prime Video] หรือ [Netflix] เพื่อใช้งาน
ในส่วนนี้โดยอัตโนมัติ คุณสามารถเปิดเครื่องและใช้งาน Netflix
โดยการกดปุ่ม [Netflix] บนรีโมทคอนโทรล

การตั้งค่าเครือข่าย

■ Wi-Fi

- กดปุ่ม [■□] จากนั้นเลือกเครือข่าย > ประเภทการเชื่อมต่อ > WiFi และกดปุ่ม [OK] จากนั้นสัญญาณเครือข่ายจะหายไป จึงค้นหาได้อีกต่อไปเมื่อต้องการใช้งาน แต่จะต้องรีเซ็ตเครือข่ายให้หายไปก่อน กดปุ่ม [OK] ระหว่างค้นหาได้ไม่มีโหมดเครือข่าย เนื่องจากต้องต่ออีกครั้ง
- เลือกเครือข่ายที่คุณต้องการเชื่อมต่อในรายการเครือข่ายและกดปุ่ม [OK]
- พิมพ์รหัสผ่านการเชื่อมต่อเครือข่ายในกล่องข้อความและออกจากแป้นพิมพ์จากนั้นเลือกเพื่อตั้งค่า [OK] เพื่อตั้งค่ารหัสผ่าน

■ อินเทอร์เน็ต(LAN)

- กดปุ่ม [■□] จากนั้นเลือกเครือข่าย > ประเภทการเชื่อมต่อ > สาย และตรวจสอบของคุณจะเชื่อมต่ออีกต่อไปเมื่อต้องการตั้งค่า
- คุณสามารถตั้งค่า IPv4 ให้ด้วยตนเองจากนั้นกด [▲]/[▼] เพื่อเลือกตัวค่า IP, Subnet mask, Gateway, DNS จากนั้นเลือกเพื่อตั้งค่าและกดปุ่ม [OK]

WOW

wow จะช่วยให้สามารถ เปิดไฟหรือทึบไฟตามจังหวะได้ เมื่อเชื่อมต่อ WiFi กดปุ่ม [■□] จากนั้นเลือกตั้งค่าระบบ > wow และ กดปุ่ม [OK] เพื่อเข้าสู่ระบบ จากนั้นกดปุ่ม [▲]/[▼] เพื่อ เปิด/ปิด และ กดปุ่ม [OK] เพื่อยืนยัน

มัลติมีเดีย

กดปุ่ม [▲] จากนั้นกดปุ่ม [◀]/[▶] เพื่อเลือก Media และกดปุ่ม [OK] เพื่อเข้าสู่รายการเลือกประเภทไฟล์จากวิดีโอ, ภาพถ่าย, เพลง, ไฟล์

■ การเล่นไฟล์ในอุปกรณ์ดิสก์ภายใน: ก่อนเล่นไฟล์ในดิสก์ภายในเครื่อง แนะนำให้ใส่ USB ด้านหลังเครื่องก่อน

จากนั้นเลือกตัวค่าภายในเครื่องแล้วกด [OK] เพื่อเข้าสู่รายการตั้งค่าเสียงและกดปุ่ม [OK] จากนั้นกดปุ่ม [▲]/[▼]/[◀]/[▶] เพื่อเลือกรายการ จากนั้นกดปุ่ม [▶](play) รายการ หรือ กดปุ่ม [▷] หากต้องการกลับไปยังรายการก่อนหน้า

คำแนะนำ:

- ไม่ควรใช้ USB ที่ไม่ได้มาตรฐาน
- ระบบมัลติมีเดียอาจมีข้อจำกัดในรูปแบบไฟล์
- ไม่ควรจัดเก็บUSB ขณะกำลังจัดเก็บในระบบหรืออุปกรณ์อื่นๆ เช่นหากกำลังจัดเก็บในUSB โปรดปิดแหล่งจ่ายไฟของเครื่อง
- ระบบรองรับมาตรฐาน USB1.1 และอุปกรณ์ USB2.0
- กระแสไฟของช่อง USB ต้อง 500mA
- ขณะกำลังอ่านหรือเขียนไฟล์ หากบันทึกตั้งหรือบางพื้นที่ขึ้นมาไม่ได้ ให้ปิดเครื่องแล้วปิดเครื่องใหม่อีกครั้ง

กดปุ่ม [INFO] เพื่อแสดงรายละเอียดของรายการ
กดปุ่ม [OK] เพื่อเข้าสู่ คุณสามารถกดปุ่ม [▷] เพื่อออกจากการเล่นหรือ กดปุ่ม [◀]/[▶]/[▶](play)/[II]/[■] บนรีโมทคอนโทรลเพื่อใช้งาน

การแก้ไขปัญหาเบื้องต้น

- **มีจุดดาวกิดขึ้นในหน้าจอโทรศัพท์และเสียงรบกวน**
 1. ตรวจสอบการต่อสายอากาศหรือสายเดเบล อีกครั้ง
 2. ตรวจสอบประបบทของสายอากาศ (VHF / UHF)
 3. ปรับทิศทางและตำแหน่งของสายอากาศ
 4. ลองใช้หัวเพิ่มสัญญาณ
- **ไม่มีการแสดงภาพหรือเสียงบนหน้าจอหรือไฟแสดงสถานะไม่ติด**
ตรวจสอบว่าสายไฟเรียบต่ออยู่หรือไม่
- **มีแผลเล็กขึ้นในหน้าจอโทรศัพท์**
อย่าใช้อุปกรณ์ไฟฟ้าข้างโทรศัพท์และปรับทิศทางสายอากาศเพื่อลดสัญญาณรบกวน
- **ภาพข้อนกิดขึ้นบนหน้าจอทีวี**
 1. ใช้สายอากาศที่บันสัญญาณได้ดี
 2. ปรับทิศทางของสายอากาศ
- **ภาพไม่มีสี**
ทำการตั้งค่า "รูปภาพ" เพื่อเพิ่มความอิ่มตัวของสี
- **โทรศัพท์ไม่มีเสียง**
 1. ปรับระดับเสียงให้อยู่ในระดับที่เหมาะสม
 2. กดปุ่ม [OK] บนรีโมทคอนโทรลเพื่อยกเลิกใหม่ค่าเดิมเสียง
- **ไม่มีสัญญาณภาษาหรือไฟแสดงสถานะจะพริบ**
 1. ตรวจสอบสายที่เชื่อมต่อสัญญาณจากนั้นลองเชื่อมต่อใหม่
 2. เหวี่องอาจอยู่ในไฟ模แสดงตนต์บายหรือวีบูตอยู่
- **ระยะรีโมทคอนโทรลสั้นเกินไป**
 1. นำตัวถูกออกจากระยะการใช้งานรีโมทคอนโทรล
 2. เปลี่ยนแบตเตอรี่
- **การเล่นวิดีโอออนไลน์ช้ามาก**
 1. โปรดอัปเกรดแบบมือถือที่เครื่องขยายของคุณให้สูงขึ้น
 2. โปรดลองเปลี่ยนเครื่องที่ที่ดีกว่า
- **เครื่องทำงานช้า ระบบขัดข้องไม่สามารถใช้งานได้**
ตัดการเชื่อมต่อแหล่งจ่ายไฟก่อนและเชื่อมต่อหลังจากนั้นประมาณ 1-2 นาที ให้เปิดโทรศัพท์อีกครั้ง

Contents

Important Safety Instructions and Maintenance.....	1
Mounting and Connecting.....	3
Packing list.....	3
Mounting the TV set.....	3
Connecting peripheral equipment.....	4
Panel Control Keys.....	5
Remote Control.....	6
Basic Operations.....	7
Turning on/Standby.....	7
Signal source selection.....	7
Menu operation description.....	8
Smart TV.....	8
OSD Language setting.....	8
Program scanning.....	8
REC option.....	8
Time shift option.....	8
App.....	8
Network settings.....	9
WOW.....	9
Multimedia player.....	9
Troubleshooting.....	10

Important Safety Instructions and Maintenance

Important Safety Instructions

CAUTION

Risk of electronic shock,
do not open. Do not attempt
to service this product yourself as opening
or removing covers may expose you to
dangerous voltage or other hazards.
Refer all servicing to qualified service personnel.



If the following problems occur:

Turn off the TV set and unplug the AC power
cord immediately if any of the following
problems occur. Ask your dealer or service
centre to have it checked by qualified
service personnel



When:

- AC power cord is damaged.
- Poor fitting of AC power outlet.
- TV set is damaged by being dropped, hit or having something
thrown at it.
- Any liquid or solid object falls through openings in the cabinet.

To reduce the risk of fire or electric shock, do not
expose this product to rain or moisture.
The apparatus shall not be exposed to dripping
or splashing and no objects filled with liquids,
such as vases, shall be placed on the apparatus.



The screen and cabinet get warm when the TV
is in use. This is not a malfunction. In case
of smoke, strange noise or strange smell
from the unit:

- Turn off the power switch immediately;
- Disconnect the power plug from the power outlet;
- Contact your dealer or service centre. Never attempt to make
repairs
yourself because this could be dangerous.



Never push objects of any kind into the set
through the cabinet slots as they may touch
dangerous voltage points or short-circuit
parts that could result in a fire or electric shock.
Never spill liquid of any kind on the set. Use special caution in
households where children are present. The apparatus is not
suitable for children under 3-year to operate.



Do not overload wall outlets, extension cords or
adaptors beyond their capacity, this can result in
fire or electrical shock. Power-supply cords
should be routed so that they are not likely to
be walked on or pinched by items placed upon
or against them, paying particular attention to cords at plug end,
adapters and the point where they exit from the appliance.



The mains plug is used as the disconnect device. It shall remain
readily accessible and should not be obstructed during intended
use. Make sure to plug the power cord in until it is firmly inserted.
When removing the power cord, make sure to hold the power plug
when pulling the plug from the outlet, do not pull the plug out by the
wire. NEVER touch the plug or power cord with wet hands.
To disconnect the apparatus from the mains power, the plug must be
pulled out from the mains socket, therefore make sure the mains plug
is always easily accessible.



An outside antenna system should not be located
in the vicinity of overhead power lines or other
electric light or power circuits, or where it can fall
into such power lines or circuits. When installing
an outside antenna system, extreme care should
be taken to keep from touching such power lines
or circuits as contact with them might be fatal.
Ensuring the television is not overhanging the
edge of the supporting furniture.




When not in use

If you will not be using the TV set for several
days, the TV set should be disconnected from
the AC mains for environmental and safety
reasons. As the TV set is not disconnected
from the AC power when the TV is turned off
at the standby switch, pull the plug from the
AC power outlet to disconnect the TV completely.
However, some TV sets may have features that
require the TV set to be left in standby to function
correctly. In the case of lightning, unplug the TV
set from the outlet immediately. Never touch the
antenna wire during lightning.



Do not pull the plug out by the wire;
Never touch the plug with wet hands.

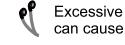

Excessive volume from earphones and headphones
can cause hearing loss.

Installation


The ventilation should not be impeded by covering the ventilation opening with items, such as newspapers, tablecloths, curtains, etc. At least 10 cm space should be left around the apparatus for sufficient ventilation.

Installation


The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat. Place the apparatus in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching and avoid completely dark environments and reflection from the screen as these may cause eye fatigue. Keep the TV set away from any equipment emitting electromagnetic radiation.

Installation

Do not place the set on an unstable cart, stand, table or shelf. The set may fall, causing serious personal injury as well as damage to the product. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.

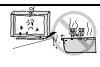

Do not place this apparatus near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wetbasement; or a swimming pool; and the like;

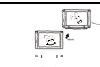

When the TV being moved in from cold place, it needs some right time for dew inside unit evaporating fully before turn on the unit;



To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.

Cleaning

Cleaning and handling the screen surface and cabinet. Disconnect the unit from the AC outlet before cleaning. To remove dust, wipe gently with a soft, lint free cloth. If required use a slightly damp cloth.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

Mounting and Connecting


Packing list

1. The TV set.
2. User Manual.
3. Remote control.
4. Power cord (or attached to TV set).

Mounting the TV set

Tips on Installation

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.
- Do not place the TV set at any place susceptible to mechanical vibration.
- Do not place the TV set at any place that insects may enter.
- Do not mount the TV set against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the TV set at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.

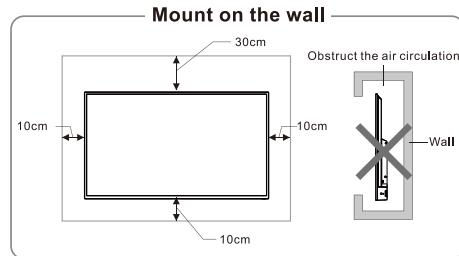

Ventilation


- Please keep this space at least around the TV, as shown in the figure.
- Do not cover the air vents or insert any object into the enclosure.
- Do not put the device in limited space, e.g. bookcase or embedded closet, unless the TV set is properly ventilated.

⚠ Warning

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.


If your existing television set is being retained and relocated, the same considerations as above should be applied.

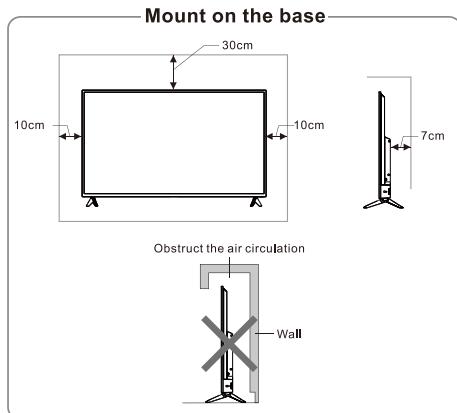

Connecting peripheral equipment

Remark:


1. When you need to connect the device which support the ARC function, please select the HDMI-1 interface.
2. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.
3. The peripheral equipment and cables described in this manual should be purchased separately

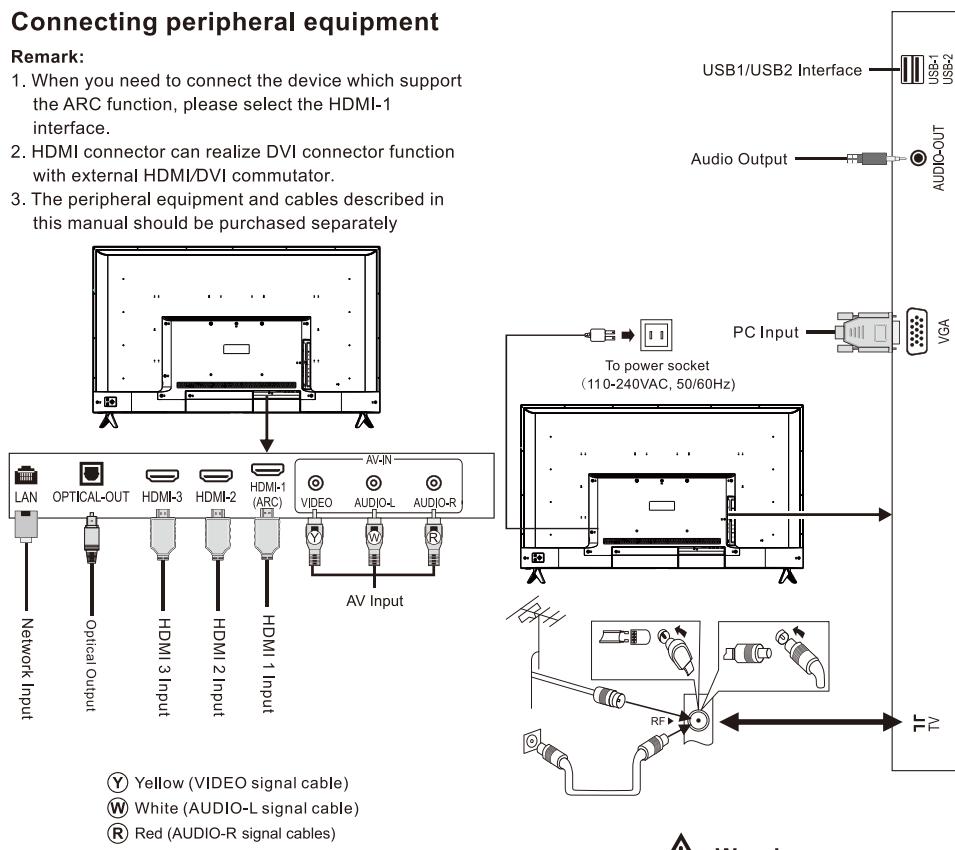

Warning

When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

Panel Control Keys

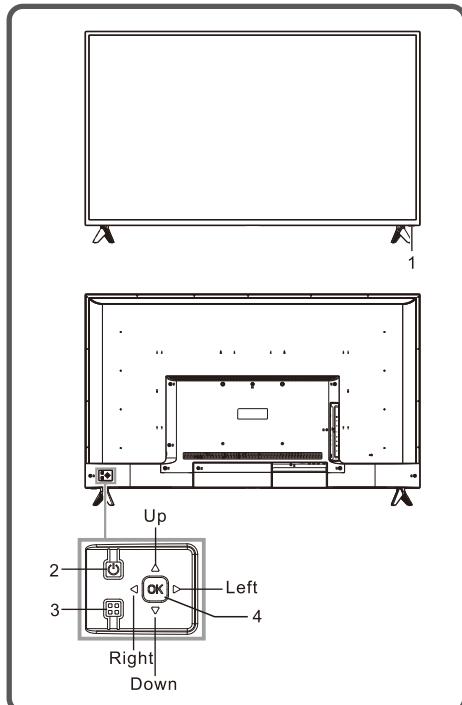

1) Power LED indicator and remote receiving window.
2) \Downarrow Standby: To switch the TV on or back to standby, the function is the same with pressing [\Downarrow] key on the remote control.

3) \blacksquare Menu key: Press this key to display the main menu. In OSD menu operation, press this key to return to the previous menu, the function is the same with pressing [MENU] key on the remote control.

4) Rocker button combination key:
Press **OK** Rocker:

①. In non-OSD menu operation, press **OK** rocker to enter source menu, the function is the same with pressing [**SOURCE**] key on the remote control.

②. In OSD menu operation, press **OK** rocker to confirm operation, the function is the same with pressing [**OK**] key on the remote control.

Move rocker **Up/Down**:

①. In TV mode, move rocker **Up/Down** to increase/decrease the channel number, the function is the same with pressing [CH^\wedge]/[CH^\vee] key on the remote control.

②. In OSD menu operation, move rocker **Up/Down** to select the adjustment items, the function is the same with pressing [\blacktriangle]/[\blacktriangledown] key on the remote control.

Move rocker **Left/Right**:

①. In non-OSD menu operation, move rocker **Left/Right** to decrease/increase the volume, the function is the same with pressing [**VOL-**]/[**VOL+**] key on the remote control.


②. In OSD menu operation, move rocker **Left/Right** to adjust the analog value of selected item, the function is the same with pressing [\blacktriangleleft]/[\blacktriangleright] key on the remote control.

Remark:

①. The appearance varies depending on the model, and the actual product shall prevail.

②. In smart mode, please operate with the remote control.

Remote Control

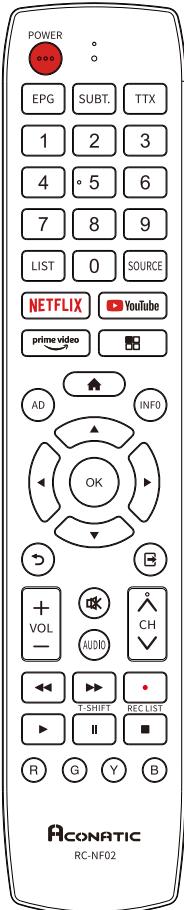

Keys of the Remote Control

Note: The appearance of the remote control may be different from this diagram; please refer to the real object as standard.

Keys	Function
Power (•••)	Switch between working and standby status.
Mute (🔇)	Turn on/off the sound.
Number keys	Select the channel or input numbers.
LIST	Show channel list.
AD	Turn on/off the associated audio.
prime video	Open prime video application.
YouTube	Open YouTube application.
SOURCE	Show signal source menu.
NETFLIX	Open Netflix application.
Home (🏡)	Show home page.
Menu (☰)	Show OSD menu.
◀, ▶, ▲, ▼	Select items or adjust values.
OK	Confirm the operation.
Return (↶)	Return to previous menu page, or return to previous channel.
Exit (☒)	Exit OSD menu or application.
Red key	Special function keys.
Green key	
Yellow key	
Blue key	
INFO	Show information bar.
VOL+/-	Turn up/down the volume.
CH+/- (^ CH ^)	Change program channel.
EPG	Electronic program guide.
AUDIO	Select audio language.
SUBT.	Select subtitle language.
TTX	Open / Close teletext.
◀◀	Fast backward.
▶▶	Fast forward.
Record (•)	Start to record current program.
▶ (play)	Play function in multimedia.
T-SHIFT (⏸)	Time shift key. (PAUSE)
REC LIST (⏹)	Show PVR list. (STOP)

Method for Installation of Remote Control

Battery

Remove the battery compartment cover and insert two AAA (No. 7, 1.5V) batteries; make sure the polarity of the batteries is in compliance with the polarity mark "+" and "-" in the battery compartment of the remote control.

Precautions for using the remote control

- The remote control should be pointed at the remote control sensor during operation. An object placed between the remote control and the remote control sensor may impede normal operation.
- The remote control should be prevented from strenuous vibration. Besides, please do not set or place the remote control under direct sunshine, as heating power may result in deformation of the remote control.
- Remote control failure may occur when the remote control sensor of the main unit is under direct sunshine or strong lighting; in this case, please change the angle of lighting or this TV set, or operate the remote control near the remote control sensor.
- Low battery will influence the remote control distance, in which case, the battery should be replaced with a new one. If the remote control is going to be idle for a long time or the battery runs out, please take the battery out to prevent the remote control from being corroded by battery leakage which may result in damage and failure of the remote control.
- Please do not use batteries of different types. It is not allowed to use old and new batteries together; the batteries should be replaced in pair.
- Please do not throw the batteries into fire or charge or decompose the batteries; do not charge, short-circuit, disassemble/assemble, heat or burn used batteries. Please dispose the waste batteries pursuant to relevant regulations on environmental protection.

Basic Operations

Remark:

1. The keys operation refers to remote control operation, for panel control keys operation please refer to "**Panel Control Keys**" operation explanation.
2. The [▶] key means direction key and the [▶](play) key means play function key
3. Menu Operation Instruction in this manual is explained according to TV mode. The operations in other modes are similar to the one in TV mode, and users can take it as reference.
4. Before power-on platform, please make sure that the power supply is stable.

Turning on/Standy

Before power-on platform, please make sure that the power supply is stable.

Plug power cord into the electrical socket, then press [POWER] key to turn on the TV. The first time you turn on the TV, the "Welcome" menu will be displayed on the screen. Press [▲]/[▼] key to select OSD language which you wish and press [▶] key to next step. The **Data collection and firmware updates notice** will be displayed on the screen, you can accept it or decline it according to your situation. Then you need to set the country, timezone and TV mode. Finally, follow the prompts to operate the network configuration and auto search, you can also choose to skip it temporarily. Please press [▷] key if you want to return to the previous page during the process.

In power on state, press [POWER] key to switch to standby mode.

★ Special Tips: This device adopts energy saving technology. If there is no signal input in power on state, it will enter standby state automatically in ten minutes; The device will enter standby state automatically at specified sleep time;

Signal source selection

You can connect various devices to the TV set and view high quality images. If the video device has HDMI, AV, PC and other video output ports, you can select one of them and connect to corresponding input ports of the TV set. After connected, turn on the device and press [SOURCE] key, then menu of signal source

will be displayed on the screen. Press [\blacktriangleleft]/[\triangleright] key to select the input signal, and press [OK] key to confirm.

Menu operation description

Press [\square] key to show the main menu on the screen:

1. Press [\blacktriangle]/[∇] key to select a menu from **Channel ,Picture, Sound, Network, System, Lock, Timer, Support**.
2. Press [OK]/[\triangleright] key to enter the submenu.
3. Press [\blacktriangle]/[∇] key to select an item in the menu.
4. Press [OK] key to confirm.
5. Press [\blacktriangleleft]/[\triangleright] key or [\blacktriangle]/[∇] key to adjust the value or setting.
6. Press [\square]/[\square] key to return to previous menu when the TV displays the submenu.
7. During menu operation, the icons of invalid options will change into grey.

Note: The default password for the lock system is **0000**.

Smart TV

Press [\blacktriangle] key to show the home page.

1. Press [\blacktriangleleft]/[\triangleright] key to select an application;
2. Press [OK] key to run the application;
3. Press [\square] key to return to previous page;
4. Press [\square] key to exit the smart mode.

Note: Before accessing the Internet, please connect your TV set to the Internet. Refer to "**Network Settings**" for details.

OSD Language setting

Press [\square] key, select **System > Language** and press [OK] key to enter. Press [\blacktriangle]/[∇] key to select the desired language, and then press [OK] key.

Program scanning

Tune the programs before watching the TV for the first time. Before scanning, please make sure that the antenna has been connected properly.

Auto Search

Press [\square] key, Select **Channel> Auto Tuning**, Press [OK] key, then set up the **Tune Type** and **Country** according to actual needs . Select **Search** and press [OK] key ,then the machine starts auto search. Press [\square] key, then select **YES** in the popup window and press [OK] to skip current search and start next search. Press [\square] key, then select **YES** in the

popup window and press [OK] to exit search. Select **NO** and press [OK] key to continue.

DTV Manual Search

Press [\square] key, Select **Channel> DTV Manual Tuning**, Press [OK] key to enter **DTV Manual Tuning** menu. Press [\blacktriangleleft]/[\triangleright] key to select channel, then press [\blacktriangle]/[∇] key to select **Search** and press [OK] key to confirm.

ATV Manual Tuning (In ATV signal source)

Press [\square] key, Select **Channel> ATV Manual Tuning**, Press [OK] key to enter **ATV Manual Tuning** menu, Press [\blacktriangle]/[∇] key to select **Current CH**, and then press [\blacktriangleleft]/[\triangleright] key to select which you wish, then select **Search** and press [\blacktriangleleft]/[\triangleright] key to search.

REC option

In DTV mode, Press Record [\bullet] key, then the system begins recording. Press [\blacksquare] key to stop and quit recording.

Press [REC LIST] key to display the record files and play them.

While playing, press [\blacktriangleleft]/[\triangleright]/[\triangleright](play)/[\square]/[\blacksquare] key to handle.

Note: The recording function can only support memorizer with FAT32 file system. Memorizer with other file systems need to be formatted; Before formatting memorizer, back-up useful data because the content of memorizer can not recover after formatting.

Time shift option

When user leaves program for a short time, time-shift function can suspend and cache the playing program to U disk. When user resumes playing, the program can continue to be played.

In DTV mode, Press [T-SHIFT] key, Time Shift option menu shows on the screen and the program is in suspended state. Press [\triangleright](play) key to resume play program. Press [\blacksquare] key to stop and quit time-shift.

While playing, press [\blacktriangleleft]/[\triangleright]/[\triangleright](play)/[\square]/[\blacksquare] key to handle.

APP

Press [\blacktriangle] key, then press [\blacktriangleleft]/[\triangleright] key to select an application and press [OK] key to enter. As to YouTube, prime video and Netflix, you can press the [**YouTube**], [**prime video**] and [**NETFLIX**] keys to use them. In the standby mode, you can turn on the TV and use Netflix by pressing [**NETFLIX**] key on the remote control.

Network settings

■ Wi-Fi

1. Press [■] key, then select **Network > Connection Type > Wifi** and press [OK] key, then the wireless network signals searched by your machine list automatically. The network searched without  icon indicates that the machine connects to the network without a password. The network with  icon indicates that it is encrypted and you must enter the correct password to connect to the network.
2. Select the network you want to connect to in the network list, and press [OK] key;
3. Type network connecting password in the box and exit keyboard, then select **Connect** and press [OK] key to connect to network.

■ Ethernet

1. Press [■] key, then select **Network > Connection Type > Wired** and your machine will connect to the Network automatically;
2. You can also set **IPv4** as **Manual**, then press []/[] key to select IP, Subnet mask, Gateway, DNS and set them. Finally, select **Connect** and press [OK] key, then your machine will connect to the Network.

WOW

WOW allows remote systems to wake up the sleeping TV by sending a frame of a specific format which the client anticipates. (It is available when Wi-Fi is connected.)

Press [■] key, then select **System > WOW**, and press [OK] key to enter. Press []/[] key to set it as "On" or "Off", and press [OK] key to confirm.

Important statement on network services

All contents and services obtained from this TV set belong to the third party and are protected by laws on copyright, patent right, trademark right and/or other intellectual property right. The said contents and services are only for your non-commercial purposes. It is not allowed to use any content or service without the authorization of the content owner or the service provider.

Our company will undertake no liability for any direct, indirect and accidental losses or damages caused by your or a third party's access to any content or service or any information or any third party software through this set under any circumstances.

Third party service may be changed, deleted or stopped without prior notice. Our company neither implies nor guarantees the continuous availability of some service or content within any period of time.

Our company is not held responsible for services related to the said service and content. Besides, we will not bear any liability for client service. Please directly contact relevant content and service providers if you have any problem and service request concerning relevant service or content.

Multimedia player

Press [] key, then press []/[] key to select **Media** and press [OK] key to enter. Select the file type from **Video, Photo, Music, Files**.

■ **Playing Files in local disk device:** Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Select local disk device in the file directory and press [OK] key to enter. Select the target folder and press [OK] key to enter the folder. Then press []/[]/[]/[] to select the target file and press [](play) to play it. Press [] key to return to previous page.

Attention:

1. Nonstandard USB devices can't be recognized probably; in this case, please replace a standard USB device;
2. The stream media system has certain restriction on the format of files; the playing will be abnormal if it is out of the system restriction;
3. Do not remove the USB device while playing, or else the system or device may have problem; Before replace the USB device, please turn off the machine's power supply;
4. The system supports standard USB1.1 and USB2.0 devices, such as USB mass storage devices and removable hard disks;
5. The maximum output current of the USB port of this device is 500mA, and the self-protection will be enabled if it is beyond this limit; please use external power supply if an external device of higher current will be connected;
6. The system is complicated; when it is reading or playing files, the screen may be still or certain functions may be invalid due to the compatibility and stability of the USB device; in this case, please turn off the device and re-initialize the system.

Press [INFO] key can display or hide the information. While playing, press []/[]/[]/[]key on the remote control to operate.

Troubleshooting

■ **Snowflake spots occur in the TV images and there is noise in accompanying sound.**

1. Check if the antenna plug is loose or the cable is in good condition.
2. Check the antenna type (VHF/UHF).
3. Adjust the direction and position of the antenna.
4. Try to use signal enhancer.

■ **There is neither display nor sound on the screen.**

The indication light is not on.

Check if the power line is connected.

■ **Dotted line or strip disturbance occurs in TV images.**

Do not use electric hair dryer aside the TV set and adjust the antenna direction to reduce disturbance.

■ **Double images occur on the TV screen.**

1. Use high oriented antenna.
2. Adjust the direction of the antenna.

■ **The images are colorless.**

Enter "Picture" setting to increase color saturation.

■ **The TV has no accompanying sound.**

1. Adjust the volume to a proper degree.
2. Press [OK] key on the remote control to cancel mute mode.

■ **No signal input images show on the machine screen. The indicator light is blinking.**

1. Check if the signal connecting cable is loose or falls off. Reconnect it.
2. The machine may be in standby mode, please reboot.

■ **The remote control distance is short or out of control.**

1. Remove the object to avoid blocking the remote control receiving window.
2. Replace the battery.

■ **Online video play is very slow.**

1. Please upgrade your network bandwidth to a higher one.
2. Please try to replace with other addresses to obtain better resources.


■ **Machine is slow, system crash, can't operate the machine.**

Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the TV again.

ACONATIC

บริษัท ไฮไฟ ออเรียนต์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161 -162 ซอยรามคำแหง 47(ชั้นที่ 2) โทร. 0-2954-5281 , 0-2580-6955
แขวงจุ่งส่องหด เชิงสะพาน Core Line. 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

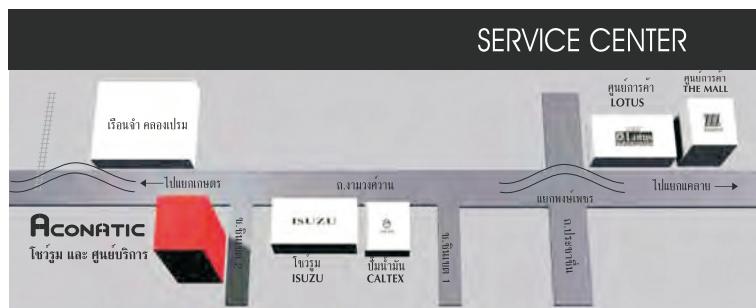

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของส่วนราชการและรายละเอียดสินค้าโดยมิต้องแจ้งให้ทราบล่วงหน้า