


# ACONATIC

## Party Speaker

รุ่น AN-SP163

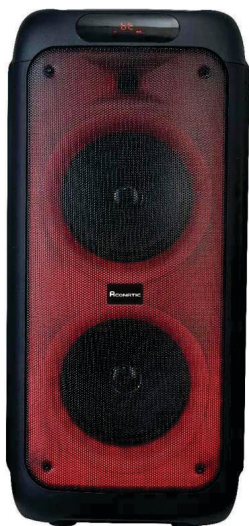

คู่มือการใช้งาน

ขอบคุณที่ไว้วางใจผลิตภัณฑ์ของเรา หวังว่าคุณจะเพลิดเพลินไปกับผลิตภัณฑ์ของเรา!

## คำแนะนำด้านความปลอดภัย

- อย่าวางผลิตภัณฑ์ไว้ในสภาพแวดล้อมที่เปียกชื้นหรือที่มีอุณหภูมิสูง
  - เพื่อลดความเสี่ยงจากไฟฟ้าช็อตหรือไฟไหม้ ห้ามถอดฝาครอบออก ติดต่อผู้เชี่ยวชาญเพื่อการบำรุงรักษา
  - ติดต่อผู้เชี่ยวชาญที่ผ่านการรับรองเพื่อตรวจสอบและซ่อมแซมอย่างเหมาะสม
- เมื่อเกิดความผิดปกติ อย่าพยายามซ่อมแซมเครื่องด้วยตนเอง
- หากเศษพลาสติก โลหะ หรือไม้หล่นเข้าไปในเครื่อง ใช้ไฟฟ้าหรือมีของเหลวชนิดใดๆ หล่นลงบนตัวเครื่อง ให้ถอดปลั๊กออกจากเต้ารับและนำไปที่ศูนย์บริการที่ได้รับอนุญาต

## คุณสมบัติ:

- การออกแบบที่ดูทันสมัย
- เอฟเฟกต์เสียงที่ชัดเจน
- แหล่งสัญญาณการใช้งานที่หลากหลาย
- เทคโนโลยี Bluetooth V 5.3
- แบตเตอรี่แบบชาร์จไฟได้ในตัว
- ฟังก์ชันการบันทึก
- พร้อมไฟ LED สีสดใส
- ฟังก์ชัน TWS
- พร้อมฟังก์ชันคาราโอเกะ

## ข้อมูลจำเพาะ:

กำลังขับ: 80W

ลำโพง: 8 นิ้ว\*2

ช่วงความถี่: 50Hz - 50KHz

อัตรา S/N:  $\geq 75$ dB

เวอร์ชันบลูทูธ: 5.3

ช่วงบลูทูธ: สูงสุด 10 เมตร

ฟังก์ชัน: USB, TF, อินพุตไมโครโฟนแบบมีสาย, อินพุตไมโครโฟนไร้สาย, AUX, อินพุตสำหรับกีตาร์, การบันทึก, บลูทูธ, ฟังก์ชัน TWS, ฟังก์ชันคาราโอเกะ, ไฟ LED

แบตเตอรี่: 12V 4500mAh

แหล่งจ่ายไฟ: AC 220-240V


ขนาด: 691\*325\*312 มม.

## อุปกรณ์ภายในกล่อง:

- ลำโพงปาร์ตี้ Bluetooth ขนาด 8 นิ้ว
- คู่มือการใช้
- สายไฟ
- ไมโครโฟนไร้สาย\*1
- ไม้รับประกัน
- สาย Aux

## คำแนะนำสำหรับแผงควบคุม

1. ปุ่มบันทึก
2. ปุ่มโหมด
3. การควบคุมระดับเสียงกีตาร์
4. การควบคุมระดับเสียงไมค์
5. การควบคุมระดับเสียงก้อง
6. ช่องใส่การ์ด TF
7. ช่อง USB
8. ช่อง AUX-IN
9. ช่อง กีตาร์
10. ช่อง ไมโครโฟน 1
11. ช่อง ไมโครโฟน 2
12. ปุ่ม เปิด/ปิด
13. ปุ่ม ปรับเสียงเบส
14. ปุ่ม ปรับระดับเสียงหลัก
15. ปุ่ม ปรับเสียงแหลม
16. ปุ่มไฟ RGB
17. ปุ่ม เล่นซ้ำ/ ฟังก์ชันคาราโอเกะ
18. ปุ่ม เล่นเพลงถัดไป
19. ปุ่ม เล่น/หยุดชั่วคราว/TWS
20. ปุ่ม เล่นเพลงก่อนหน้า

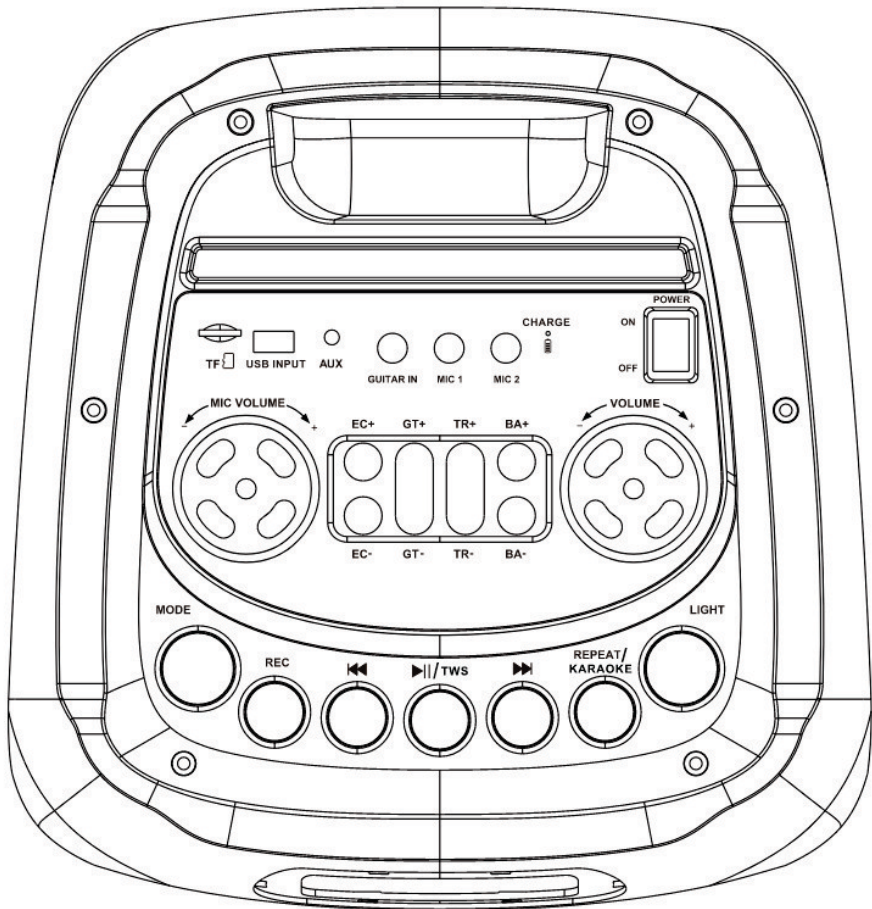

### การเชื่อมต่อบลูทูธ:

- กดปุ่ม MODE บนแผงควบคุม จนกระทั่ง BT แสดงบนจอหน้าจอแสดงผล
- จอแสดงผล ✳ จะกะพริบเพื่อระบุว่าลำโพงอยู่ในโหมดจับคู่ Bluetooth ตรวจสอบให้แน่ใจว่าอุปกรณ์ที่คุณต้องการเชื่อมต่ออยู่ในโหมดจับคู่ด้วย และค้นหา AN-SP163 ในรายการอุปกรณ์
- จอแสดงผล ✳ จะหยุดกะพริบ เมื่ออุปกรณ์ทั้งสองจับคู่กัน (ลำโพงจะจับคู่กับอุปกรณ์เดิมอีกครั้งโดยอัตโนมัติทุกครั้งที่อยู่ภายในระยะและเปิด Bluetooth ไว้) ลำโพงจะเล่นเพลงโดยอัตโนมัติจากเครื่องเล่นเพลงในระหว่างการจับคู่ Bluetooth

## ฟังก์ชัน TWS:

- เปิดอุปกรณ์ที่เหมือนกันสองตัวที่คุณต้องการจับคู่ กดปุ่ม ► ค้างไว้เพื่อจับคู่ จากนั้นค้นหา ชื่อผลิตภัณฑ์ ในอุปกรณ์ของคุณแล้วเชื่อมต่อกับลำโพง

## AUX IN:

- เชื่อมต่ออุปกรณ์ที่รองรับด้วยสายแจ็คสเตอริโอขนาด 3.5 มม.
- เลือกโหมด AUX โดยการกดปุ่ม MODE บนแผงควบคุมลำโพง ตรวจสอบให้แน่ใจว่าอุปกรณ์ที่เชื่อมต่ออยู่กำลังสร้างสัญญาณเสียง จากนั้นปรับระดับเสียงของลำโพงด้วยปุ่มปรับระดับเสียงหรืออุปกรณ์ที่เชื่อมต่อ
- ฟังก์ชันที่เกี่ยวข้องกับการเล่นเพลงทั้งหมดสามารถควบคุมได้โดยอุปกรณ์ที่เชื่อมต่อภายใต้โหมด AUX

## การชาร์จแบตเตอรี่:

- ไฟแสดงการชาร์จจะเป็นสีแดงระหว่างการชาร์จ และจะเปลี่ยนเป็นสีน้ำเงินเมื่อชาร์จเต็มแล้ว
- เวลาการใช้งานของลำโพงจะแตกต่างกันไปตามสภาพการใช้งานที่แตกต่างกัน เช่น ระดับเสียงเพลง โหมดไฟ LED เป็นต้น
- แบตเตอรี่แบบชาร์จไฟได้ในตัว ไม่สามารถเปลี่ยนได้ด้วยตนเอง อย่าทิ้งลงในกองไฟหรือของเหลว เพื่อหลีกเลี่ยงความเสี่ยงด้านความปลอดภัยและมลภาวะต่อสิ่งแวดล้อม

## ฟังก์ชันการบันทึก:

- เปิดลำโพงและเสียบ USB หรือการ์ด TF ลงในช่อง เสียงไมโครโฟนและเพลงภายใต้โหมด Bluetooth จะสามารถบันทึกได้เมื่อคุณกดปุ่ม REC บนแผงควบคุม กดปุ่ม REC อีกครั้ง เพื่อหยุดการบันทึก

## สื่อ USB และการเล่นเพลง TF CARD:

- เปิดลำโพงและใส่ USB หรือการ์ด TF จากนั้น ลำโพงจะเล่นเพลงที่รองรับโดยอัตโนมัติ
- หากต้องการเลือกเพลงก่อนหน้าหรือถัดไปโดยการกดปุ่ม ◀ หรือ ▶ เพิ่มระดับเสียงขึ้นและลงโดยการหมุนปุ่ม VOLUME บนแผงควบคุม เล่นหรือหยุดเพลงชั่วคราวโดยกดปุ่ม ▶◀
- ลำโพงจะตัดการเชื่อมต่อบลูทูธ เพื่อเล่นเพลงจาก USB หรือการ์ด TF โดยอัตโนมัติ  
คุณสามารถกลับสู่โหมด Bluetooth ได้โดยการกดปุ่ม MODE บนแผงควบคุม

## การเชื่อมต่อกีตาร์:

- อุปกรณ์นี้ยังมีแจ๊คกีตาร์เพิ่มเติมซึ่งสามารถใช้สำหรับติดกีตาร์ไฟฟ้าได้

## การทำงานของไมโครโฟน:

- เปิดลำโพงและเปิดไมโครโฟนไว้สาย

## ฟังก์ชันคาราโอเกะ:

- เปิดลำโพง กดปุ่ม REPEAT/KARAOKE ค้างไว้ ฟังก์ชันคาราโอเกะจะเปิดขึ้น โดยฟังก์ชันนี้จะตัดเสียงออก

## เอฟเฟกต์ไฟ LED:


- ตัวเครื่องยังมีไฟ LED หลากสีในตัวซึ่งจะส่องสว่างตรงที่ลำโพง
- กดค้าง เพื่อเปิด/ปิดไฟ หากกด 1 ครั้ง เพื่อเปลี่ยนโหมดแสงไฟ LED

## หมายเหตุ

ฟังก์ชันเหล่านี้จะทำงานได้ก็ต่อเมื่อลำโพงเปิดอยู่เท่านั้น

# Party Speaker

**Model: HD-BP85**

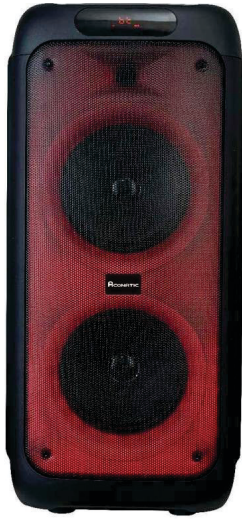

## User Manual

Thanks for your preference. We hope you enjoy the experience!



## Safety Instruction

- Don't put this product under high temperature wet environment and it will be worse when it is in the rain or crash strongly
- To reduce the risk of electronic shock or fire, do not remove the cabinet cover, to contact professionals for maintenance
- Contact a certified professionals for a proper diagnosis and repair when occurrence of malfunction, do not attempt to repair the unit by your own
- If plastic, metal, or wood fragments fall into the appliance or any type of liquid is dropped on the appliance, unplug it from the outlet and take it to an authorized service center, the appliance should be evaluated by a qualified technician

## **FEATURES:**

- Classic dynamic design
- Clear dynamic sound effect
- Versatile Input Options to support wide range devices
- Bluetooth V5.3 technology support wide range Bluetooth devices
- Built-in rechargeable lead-acid battery

- With recording function
- With colorful LED flame light
- With TWS function
- With karaoke function

## **SPECIFICATION:**

Output power: 80W

Speaker: 8 Inch\*2

Frequency Range: 50Hz-20KHz

S/N rate: >=75dB

Bluetooth version: 5.3

Bluetooth range: up to 10m

Function: USB, TF, Wired Microphone Input, Wireless microphone Input, AUX, Guitar IN, Recording, Bluetooth, TWS Function, Karaoke function, LED Flame Light

Lead-acid battery: 12V 4500mAh

Power supply: AC 220-240V


Dimensions: 691\*325\*312mm

## **Packing content:**



- Dual 8" Bluetooth party speaker
- Wireless microphone\*1
- User manual
- Warranty card
- Power cable
- Aux cable

## INSTRUCTION FOR CONTROL PANEL

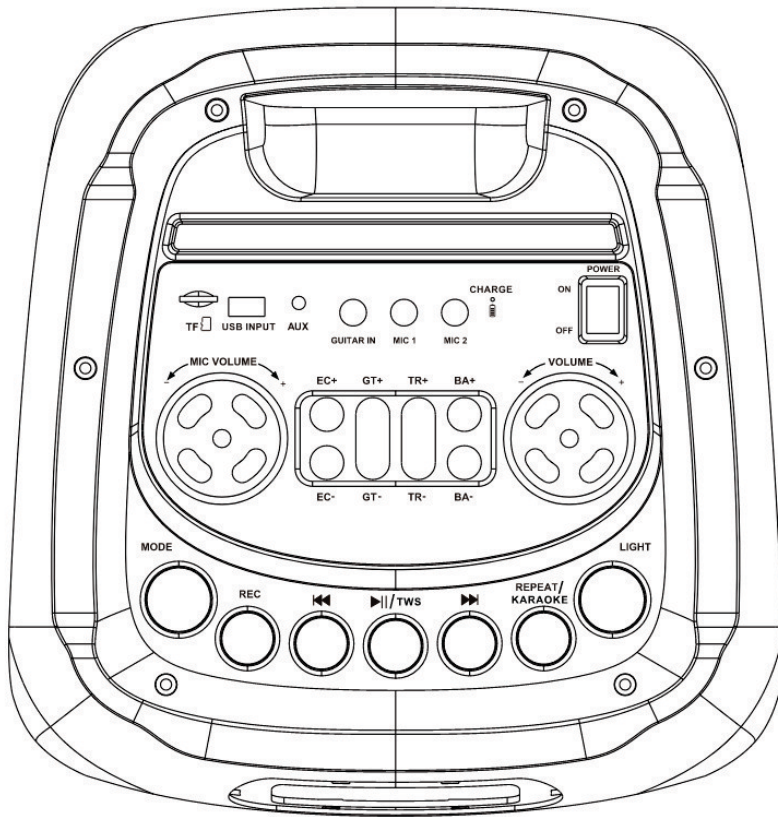1. Record button
2. MODE button
3. Guitar volume control
4. MIC volume control
5. Echo volume control
6. TF card input
7. USB input
8. AUX-IN input
9. Guitar input
10. MIC input 1
11. MIC input 2
12. Power button
13. Bass control
14. Master volume
15. Treble control
16. RGB lights button
17. Repeat button/ Karaoke function
18. Next track
19. Play/pause/ TWS
20. Previous track



## BLUETOOTH CONNECTION:

- Short Press the MODE button on the control panel until the BT display on the LED display.
- The  on the LED display will flash to indicate that the speaker is in Bluetooth pairing mode. Ensure that the device you wish to connect is also in pairing mode and search for AN-SP163 in its device list.
- The  on the LED display will stop flashing and remain constant when the two devices paired. (The speaker will now automatically re-pair with this device whenever it is within range and has Bluetooth turned on). The speaker will automatically play the music by the music player which operated during Bluetooth paired in the first time.

## **TWS FUNCTION:**

- Power on two identical speakers you want to pair and both turn to Bluetooth mode, long press ►|| button to pair each other. Then, search these paired speakers in your device's Bluetooth list and connect with them.

## **AUX IN:**

- Connect a compatible device by a 3.5mm – 3.5mm stereo jack cable.
- Select AUX mode by pressing the MODE button on the speaker control panel. Ensure the connected device is producing audio signal, then adjust the volume of speaker by Volume Knob or connected device.
- All music playing related function can be controlled by external connected device under AUX mode.

## **BATTERY CHARGING:**

- Power off the speaker before battery charging, the charging indicator in red color during charging period and turn to blue color when fully charged.
- The speaker working time vary from the different working condition, such as music volume, LED light mode, etc.
- The built-in rechargeable battery is not replaceable. Do not trash it to the fire or liquid to avoid safety risk and environmental pollution.

## **RECORDING FUNCTION:**

- Power on the speaker and put flash memory or TF card into the slots, microphone voice and the music under Bluetooth mode are recordable when you press REC button on control panel, press REC button again to stop the recording.

### **USB media AND TF CARD MUSIC PLAYING:**

- Power on the speaker and insert the flash memory or TF card, the speaker will automatically play the compatible music.
- To select previous or next music by pressing ◀◀ or ▶▶ buttons, to volume up and down by turning the VOLUME knob on control panel, to play or pause the music by pressing the ▶|| button.
- The speaker will disconnect the Bluetooth connection to automatically play the music from flash memory or TF card under Bluetooth mode, you can back to Bluetooth mode by pressing MODE button on control panel.

### **Connecting an electric guitar:**

- The unit also has an additional guitar jack which can be used for attaching an electric guitar.

### **Microphone operation:**

- Power on the speaker and power on the wireless microphone.

### **Karaoke function:**

- Power on the speaker. Long press the REPEAT/KARAOKE button, Karaoke function will be on. It will cut the voice out.

### **LED light effects:**

- The unit also has built-in multi-colored LED lights which light up the speaker drivers.
- Long press to turn the light On/Off, short press to switch the light mode( intervals for a second)

### **NOTE**

These will only work if the speaker is powered on.