



Aconatic

คู่มือการใช้งาน

LED TV

รุ่น 55US800AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์
เก็บคู่มือนี้ไว้ใช้อย่างจริง



1. ข้อมูลสำคัญด้านความปลอดภัย.....	2
2. อุปกรณ์เสริม.....	7
3. การติดตั้งทีวี LED.....	8
4. ภาพรวมของชุดทีวี	9
5. เชื่อมต่ออุปกรณ์ภายนอก	11
6. การใช้รีโมทคอนโทรล.....	13
7. Google Assistant	17



คำเตือน

1. อ่านคำแนะนำเหล่านี้
2. ปฏิบัติตามคำแนะนำเหล่านี้
3. เอาใจใส่ทุกคำเตือน
4. ทำตามคำแนะนำทั้งหมด
5. อย่าใช้อุปกรณ์นี้ใกล้น้ำ
6. ทำความสะอาดด้วยผ้าแห้งเท่านั้น
7. อย่าปิดกั้นช่องระบายอากาศใด ๆ ติดตั้งตามคำแนะนำของผู้ผลิต
8. อย่าติดตั้งใกล้แหล่งความร้อนใด ๆ เช่น เตาเป่าลมร้อนหรืออุปกรณ์อื่น ๆ (รวมถึงเครื่องขยายเสียง) ที่ก่อให้เกิดความร้อน
9. อย่าใช้งานปลั๊กชนิดมีขั้วหรือปลั๊กชนิดต่อสายดินผิดวัตถุประสงค์ด้านความปลอดภัย ปลั๊กชนิดมีขั้วจะมีขาเสียบสองขา โดยขาหนึ่งจะกว้างกว่าอีกขาหนึ่ง ปลั๊กชนิดต่อสายดินจะมีขาเสียบสองขา และขาที่สามเป็นขาสายดิน ขาที่กว้างกว่าหรือขาที่สามนั้นมีไว้เพื่อความปลอดภัยของคุณ หากปลั๊กที่ใหม่ไม่พอดีกับเต้ารับของคุณ โปรดปรึกษช่างไฟฟ้าเพื่อทำการเปลี่ยนเป็นเต้ารับรุ่นใหม่
10. ป้องกันไม่ให้สายไฟถูกเดินเหยียบหรือถูกกดทับโดยเฉพาะอย่างยิ่งบริเวณปลั๊ก เต้ารับ และจุดที่สายไฟออกจากอุปกรณ์
11. ใช้อุปกรณ์ที่ใหม่/อุปกรณ์เสริมตามที่ระบุไว้โดยผู้ผลิตเท่านั้น
12. ใช้กับริดเซ็น ขาดัง ขาดังแบบสามขา ตัวยึด หรือโต๊ะที่ระบุไว้โดยผู้ผลิตหรืออุปกรณ์ที่จำหน่ายเท่านั้น เมื่อใช้รีดเซ็น โปรดใช้ความระมัดระวังในการเคลื่อนย้ายรีดเซ็น/รวมถึงอุปกรณ์เพื่อป้องกันมิให้พลิกคว่ำ
13. ถอดปลั๊กในช่วงที่มีฝนตกฟ้าคะนองหรือเมื่อไม่ได้ใช้งานเป็นเวลานาน
14. เข้ารับการซ่อมบำรุงกับเจ้าหน้าที่บริการที่มีคุณสมบัติเหมาะสม จำเป็นต้องมีการซ่อมบำรุงเมื่ออุปกรณ์ได้รับความเสียหายไม่ว่าด้วยอาการใด ๆ เช่น สายไฟหรือปลั๊กเสียหาย ของเหลวหกใส่ หรือมีวัตถุตกลงไปในอุปกรณ์ อุปกรณ์สัมผัสกับฝนหรือความชื้น หรือตกหล่น
15. คำเตือน: เพื่อลดความเสี่ยงจากไฟไหม้หรือไฟฟ้าช็อตอย่าให้อุปกรณ์นี้ถูกฝนหรือความชื้น
16. ห้ามมิให้อุปกรณ์สัมผัสกับหยดน้ำหรือมีน้ำกระเด็นใส่และห้ามวางสิ่งของที่บรรจุของเหลว เช่น วางแจกันไว้บนเครื่อง
17. ปลั๊กไฟหลักหรืออุปกรณ์เชื่อมต่อเครื่องใช้ไฟฟ้าจะต้องพร้อมใช้งาน
18. การใช้งานภายนอกอาคาร: ที่รีนี้ไม่ได้ออกแบบมาสำหรับติดตั้งภายนอกอาคาร อย่าให้ทีวีโดนฝนเพราะอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้ นอกจากนี้อย่าให้ทีวีโดนแสงแดดโดยตรงเพราะอาจทำให้เกิดความร้อนเกินและเสียหายได้



ความปลอดภัย:

เพื่อลดความเสี่ยงจากไฟฟ้าช็อต อย่าถอดฝาครอบ (หรือฝาหลัง) ไม่มีส่วนที่ผู้ใช้สามารถซ่อมบำรุงได้อย่างง่ายใน โปรดส่งต่อให้บุคคลที่มีคุณสมบัติเหมาะสมเท่านั้น





แรงดันไฟฟ้าที่เป็นอันตราย: สัญลักษณ์รูปฟ้าแลบที่มีหัวลูกศรภายในรูปสามเหลี่ยมด้านเท่ามีจุดมุ่งหมายเพื่อเตือนให้ผู้ใช้ทราบถึงแรงดันไฟฟ้าที่เป็นอันตรายภายในผลิตภัณฑ์ ซึ่งอาจอยู่ในระดับที่เพียงพอที่จะก่อให้เกิดความเสี่ยงต่อการถูกไฟฟ้าช็อต



คำแนะนำ: เครื่องหมายอัศเจรีย์ภายในสามเหลี่ยมด้านเท่ามีไว้เพื่อเตือนให้ผู้ใช้ทราบถึงคำแนะนำในการใช้งานและการบำรุงรักษาที่สำคัญ ซึ่งอยู่ในเอกสารที่นำมาพร้อมกับอุปกรณ์

คำแนะนำที่เป็นข้อควรระวังเพื่อความปลอดภัย

การปฏิบัติตามข้อควรระวังพื้นฐานที่กล่าวถึงในคู่มือเล่มนี้จะช่วยให้คุณหลีกเลี่ยงอุบัติเหตุที่ปลอดภัยเป็นเวลานานหลายปี

1. อ่านและปฏิบัติตามคำแนะนำ
ควรอ่านและปฏิบัติตามคำแนะนำด้านความปลอดภัยและการใช้งานทั้งหมดก่อนที่จะใช้งานทีวี
2. เก็บรักษาคำแนะนำไว้
ควรเก็บรักษาคำแนะนำด้านความปลอดภัยและการใช้งานนี้เอาไว้เพื่อใช้อ้างอิงในอนาคต
3. เอาใจใส่คำเตือน
ควรปฏิบัติตามคำเตือนทั้งหมดที่อยู่บนทีวีและในคู่มือการใช้งาน
4. การทำความสะอาด
ถอดปลั๊กที่รีจออกจากรีจก่อนทำความสะอาด อย่าใช้น้ำยาทำความสะอาดหรือสเปรย์ทำความสะอาด ใช้ผ้าที่นุ่มและหมาดเล็กน้อยในการทำความสะอาด
5. น้ำและความชื้น
อย่าใช้งานทีวีนี้ใกล้กับน้ำ เช่น ใกล้กับอ่างอาบน้ำ อ่างล้างมือ อ่างล้างจาน หรืออ่างซักผ้า ในห้องใต้ดินที่ชื้น หรือใกล้สระว่ายน้ำ
6. ขาดั้งและรถเข็นอุปกรณ์เสริม
อย่าวางทีวีบนพื้นผิวที่ลื่นหรือเอียง หรือวางไว้บนรถเข็น ขาดั้ง หรือโต๊ะที่ไม่มั่นคง ที่ี้อาจเลื่อนหรือตกลงมาได้ ซึ่งอาจทำให้เด็กหรือผู้ใหญ่ได้รับบาดเจ็บสาหัสและทีวีได้รับความเสียหายอย่างร้ายแรง
7. การขนส่งทีวี
ชุดทีวีและรถเข็นควรได้รับการเคลื่อนย้ายด้วยความระมัดระวัง การหยุดอย่างรวดเร็ว การออกแรงที่มากเกินไป และพื้นผิวที่ไม่เรียบอาจทำให้ชุดทีวีและรถเข็นพลิกคว่ำได้





8. การระบายอากาศ

ช่องด้านหลังเครื่องมือไว้เพื่อระบายอากาศและเพื่อให้แน่ใจว่าทรีทำงานได้อย่างมีประสิทธิภาพ และจะต้องห้ามปิดกั้นหรือปิดบังช่องเหล่านี้เพื่อเป็นการป้องกันไม่ให้เครื่องมือทำความร้อนสูงเกินไปไป ไม่ควรวางทรีในเฟอร์นิเจอร์แบบฉนวน เช่น ตู้หนังสือหรือชั้นวาง เว้นแต่จะมีการระบายอากาศที่เหมาะสม

9. แหล่งจ่ายไฟ

ควรใช้งานทรีนี้กับแหล่งจ่ายไฟที่ระบุไว้บนฉลากกำกับเท่านั้น หากคุณไม่แน่ใจเกี่ยวกับประเภทของแหล่งจ่ายไฟ โปรดปรึกษาผู้เชี่ยวชาญ เจ้าหน้าที่อุปกรณ์อิเล็กทรอนิกส์หรือบริษัทที่ให้บริการไฟฟ้าในพื้นที่

10. ขั้วของสายไฟ

ชุดทรีนี้มีปลั๊กแบบสองสาย

ปลั๊กนี้จะพอดีกับเต้ารับไฟฟ้าแบบมีสายดินเท่านั้น นี่คือการสมบัติด้านความปลอดภัย หากคุณไม่สามารถเสียบปลั๊กเข้ากับเต้ารับได้ โปรดตัดต่อช่างไฟฟ้าของคุณเพื่อเปลี่ยนเต้ารับที่สามขั้วออกอย่าใช้งานปลั๊กชนิดต่อสายดินผิดวัตถุประสงค์ด้านความปลอดภัย

11. การป้องกันสายไฟ

ควรเดินสายไฟในลักษณะที่ป้องกันไม่ให้สายไฟถูกเดินเหยียบหรือถูกสิ่งของใดๆ กดทับ โดยเฉพาะอย่างยิ่งสายไฟบริเวณปลั๊ก เต้ารับ และจุดที่สายไฟออกจากทรี

12. การป้องกันฟ้าผ่า


เพื่อเป็นการป้องกันทรีเพิ่มเติมสำหรับในช่วงที่มีฝนตกฟ้าคะนองหรือเมื่อปล่อยทิ้งไว้โดยไม่ได้ใช้งานเป็นเวลานาน ให้ถอดปลั๊กออกจากเต้ารับที่ผนังและถอดสายอากาศออกหรือตัดการเชื่อมต่อจากระบบสายเคเบิล การทำเช่นนี้จะช่วยป้องกันมิให้ทรีได้รับความเสียหายจากฟ้าผ่าและไฟกระชาก

13. การต่อสายดินสำหรับเสาอากาศภายนอกอาคาร

หากมีการเชื่อมต่อเสาอากาศภายนอกอาคารหรือระบบสายเคเบิลเข้ากับทรี โปรดตรวจสอบให้แน่ใจว่าเสาอากาศหรือระบบสายเคเบิลมีการต่อสายดินเพื่อป้องกันไฟกระชากและสารสร้างประจุไฟฟ้าสถิต มาตรฐาน 810 กฎข้อบังคับในการออกแบบและติดตั้งระบบไฟฟ้าแห่งชาติ (สหรัฐอเมริกา) ANSI/NFPA ให้ข้อมูลเกี่ยวกับการต่อสายดินที่เหมาะสมสำหรับเสาอากาศและโครงสร้างรองรับ การต่อสายดินให้กับสายไฟฟ้าเข้าของชุดเสาอากาศ ขนาดของตัวนำที่ใช้ต่อสายดิน ตำแหน่งของเสาอากาศ การเชื่อมต่อกับอิเล็กทรอนิกส์โทรคราวิตและข้อกำหนดสำหรับอิเล็กทรอนิกส์โทรคราวิต



ตัวอย่างการต่อสายดินตามคำแนะนำในกฎข้อบังคับ
ในการออกแบบและติดตั้งระบบไฟฟ้าแห่งชาติ

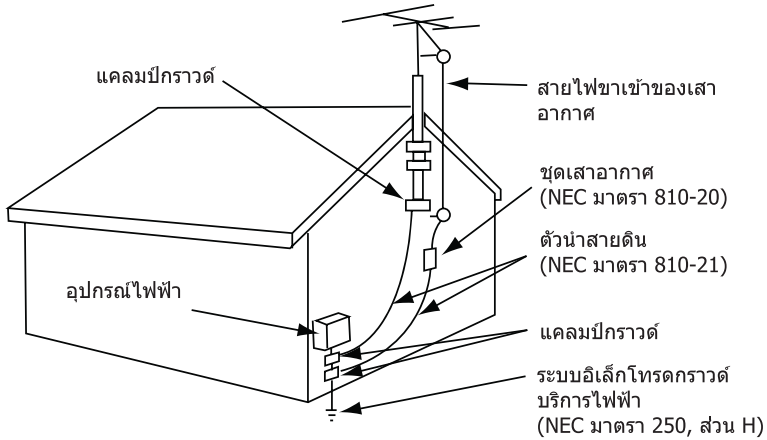

NEC - กฎข้อบังคับในการออกแบบและติดตั้งระบบไฟฟ้าแห่งชาติ

14. สายไฟ

ไม่ควรติดตั้งระบบเสาอากาศภายนอกอาคารไว้ในพื้นที่ที่อยู่ใกล้เคียงกับสายไฟเหนือศีรษะ หรือระบบแสงสว่าง หรือวงจรไฟฟ้าอื่น ๆ หรือในพื้นที่ที่เสาอากาศอาจสัมผัสสายไฟหรือวงจรไฟฟ้าได้ เมื่อติดตั้งระบบเสาอากาศภายนอกอาคารควรใช้ความระมัดระวังเป็นอย่างยิ่งเพื่อป้องกันไม่ให้เสาอากาศสัมผัสกับสายไฟหรือวงจรดังกล่าวเนื่องจากหากมีโครมาสัมผัสกับเสาอากาศ อาจทำให้เกิดอันตรายถึงชีวิตได้

15. การใช้กำลังไฟฟ้าเกินพิกัดหรือการโอเวอร์โหลด

อย่าใช้เต้ารับและสายไฟในลักษณะที่มีการต่อพ่วงมากเกินไป เพราะอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้

16. วัตถุและของเหลวเข้าไปในตัวเครื่องระบายอากาศ

อย่าดันวัตถุใด ๆ เข้าไปในที่รีฟานช่องเปิดเนื่องจากอาจสัมผัสกับจุดที่มีแรงดันไฟฟ้าที่เป็นอันตรายหรืออาจลัดวงจรขึ้นส่วนภายในซึ่งอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้ ห้ามทำของเหลวหกใส่หรือเข้าไปในที่รี

17. การซ่อมบำรุง

อย่าพยายามซ่อมบำรุงที่รีนี้ด้วยตัวเองเนื่องจากการเปิดหรือการถอดฝาปิดออกอาจทำให้คุณสัมผัสกับแรงดันไฟฟ้าที่เป็นอันตรายหรืออันตรายอื่น ๆ เข้ารับการซ่อมบำรุงกับเจ้าหน้าที่บริการที่มีคุณสมบัติเหมาะสม



18. หากเกิดความเสียหายที่จำเป็นต้องเข้ารับการซ่อมบำรุง ถอดปลั๊กออกจากเต้ารับที่ผนังและเข้ารับบริการกับช่างซ่อมบำรุงที่มีคุณสมบัติเหมาะสมภายใต้เงื่อนไขต่อไปนี้:
- a. หากสายไฟหรือปลั๊กเสียหาย
 - b. หากมีช่องเหลวหกใส่หรือมีวัตถุหล่นเข้าไปในผลิตภัณฑ์
 - c. หากทีวีสัมผัสกับฝนหรือน้ำ
 - d. หากทีวีทำงานผิดปกติเมื่อปฏิบัติตามคำแนะนำในการใช้งานแล้ว จะต้องใช้ช่างเทคนิคที่มีคุณสมบัติเหมาะสมในการซ่อมแซมผลิตภัณฑ์ให้กลับคืนสู่การทำงานตามปกติ
 - e. หากทีวีหล่นหรือตัวเครื่องได้รับความเสียหาย
 - f. หากทีวีมีประสิทธิภาพการทำงานที่เปลี่ยนแปลงไปอย่างชัดเจน



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.






2 อุปกรณ์เสริม

ภายใน

โปรดตรวจสอบให้แน่ใจว่ารายการต่อไปนี้มาพร้อมกับทีวี LED ของคุณ หากมีรายการใด ๆ หายไป โปรดติดต่อตัวแทนจำหน่ายของคุณ

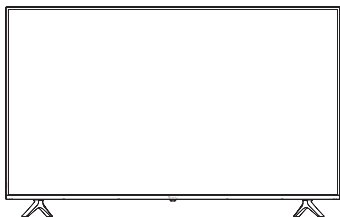

55US800AN

*โปรดดูที่ผลิตภัณฑ์จริง
ทีวี LED



คู่มือการใช้งาน



รีโมทคอนโทรล




แบตเตอรี่ 2 ก้อน



ใบรับประกัน




การติดตั้งขาตั้ง

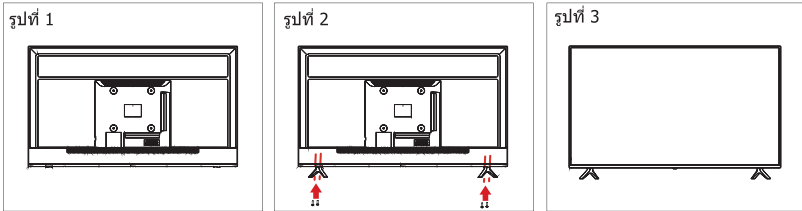


1. วางเครื่องที่รีบนผ้าที่นุ่มหรือบนเบาะโดยคว่ำหน้าลง วางฐานในตำแหน่งดังภาพ (ดูรูปที่ 1)
2. ใส่สกรู 4 ตัว (ที่นำมา) เข้าไปในรูสกรู และไขไขควงขันยึด (ดูรูปที่ 2)
3. ตั้งทีวีขึ้น (ดูรูปที่ 3)

การถอดขาตั้ง

1. วางทีวีบนโต๊ะโดยคว่ำหน้าจอ LED ลง เพื่อป้องกันไม่ให้ทีวีเป็นรอย ให้วางผ้านุ่ม ๆ บนโต๊ะที่จะวางหน้าจอ (ดูรูปที่ 1)
2. ถอดสกรู 4 ตัวที่ขาตั้งออก จากนั้นดึงขาตั้งขึ้นช้าๆ (ดูรูปที่ 2)
3. จากนั้นคุณจะสามารถนำฐานออกได้สำเร็จ (ดูรูปที่ 3)

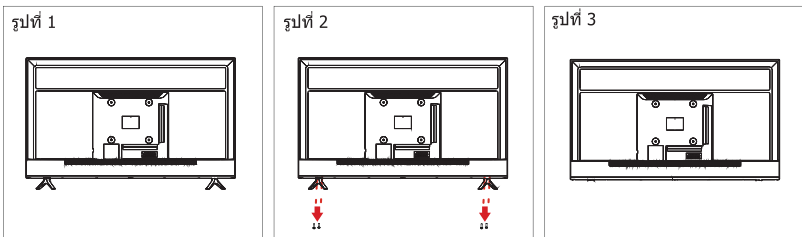


มุมมองด้านหน้า

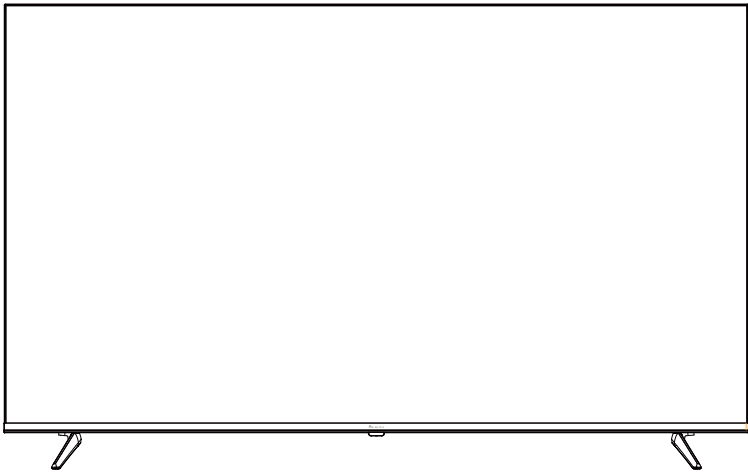


55US800AN

มุมมองด้านหลัง

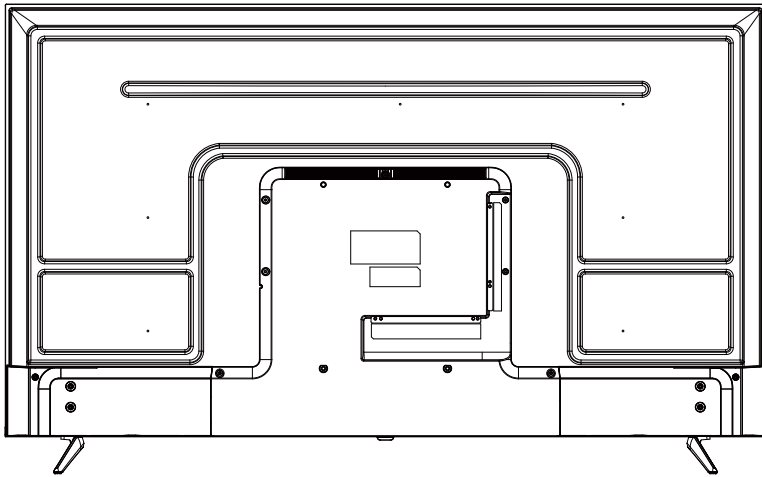

55US800AN

ส่วนควบคุมและการเชื่อมต่อ (ต่อ)

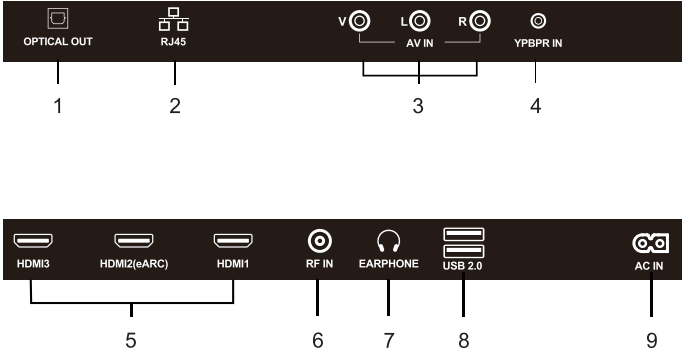


- 1: ช่อง OPTICAL OUT
- 2: ช่อง Rj45
- 3: ช่องวิดีโอ/เสียง ซ้ายและขวา
- 4: ช่อง YPBPR IN
- 5: ช่อง HDMI
- 6: ช่อง RF IN
- 7: ช่อง EARPHONE
- 8: ช่อง USB อินพุต
- 9: ช่องต่อสาย AC IN

สัญญาณที่รองรับ

AV	HDMI
480i	480i
576i	576i
480P	480P
576P	576P
720P / 50 Hz	720P / 50 Hz
720P / 60 Hz	720P / 60 Hz
1080i / 50 Hz	1080i / 50 Hz
1080i / 60 Hz	1080i / 60 Hz
2160P / 50 Hz	2160P / 50 Hz
2160P / 60 Hz	2160P / 60 Hz

การใส่แบตเตอรี่รีโมทคอนโทรล

1. ถอดฝาปิดแบตเตอรี่ออกโดยดึงแล้วยกปมที่ฝาปิด
2. ใส่แบตเตอรี่ตามเครื่องหมาย (+) และ (-) ที่ช่องใส่แบตเตอรี่
3. ใส่ฝาปิดแบตเตอรี่กลับคืน

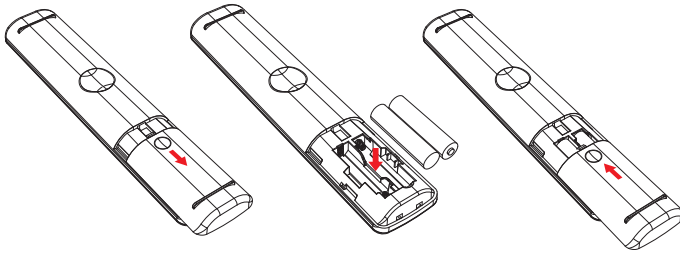

⚠️ ข้อควรระวัง

- ใช้ แบตเตอรี่ AA ที่ระบุไว้เท่านั้น
- อย่าใช้แบตเตอรี่เก่าและใหม่เนื่องจากอาจส่งผลให้เกิดการปะทุหรือรั่วไหล ซึ่งอาจก่อให้เกิดไฟไหม้หรือนำไปสู่การบาดเจ็บได้
- ใส่แบตเตอรี่ตามเครื่องหมาย (+) และ (-) การใส่แบตเตอรี่ไม่ถูกต้องอาจส่งผลให้เกิดการปะทุหรือรั่วไหล ซึ่งอาจก่อให้เกิดไฟไหม้หรือนำไปสู่การบาดเจ็บได้
- ทิ้งแบตเตอรี่ตามกฎหมายและระเบียบข้อบังคับของท้องถิ่น
- เก็บแบตเตอรี่ให้ห่างจากเด็กหรือสัตว์เลี้ยง
- เมื่อจะไม่ใช้รีโมทคอนโทรลเป็นระยะเวลานาน ให้ถอดแบตเตอรี่ออก

การใช้รีโมทคอนโทรล

1. ยื่นรีโมทคอนโทรลไปที่เซ็นเซอร์รีโมทคอนโทรลที่ด้านล่างของทีวี
 2. ระยะของรีโมทคอนโทรลจะอยู่ที่ประมาณ 16 ฟุตเมื่อทำมุมประมาณ 30 องศา
 3. หลีกเลียงไม่ให้มีสิ่งกีดขวางอยู่ระหว่างรีโมทคอนโทรลและเซ็นเซอร์
- > หากคุณไม่ได้ต้องการจะใช้รีโมทคอนโทรลเป็นเวลานาน ให้ถอดแบตเตอรี่ออก
 - > หากรีโมทคอนโทรลทำงานไม่ถูกต้อง หรือหากระยะเวลาการทำงานลดลง ให้เปลี่ยนแบตเตอรี่ใหม่ทั้งสองก้อน





NO.	Buttons	Description
1	Power	เปิด / ปิดเครื่อง
2	Source	ปุ่มเลือกช่องสัญญาณ
3	Number	ปุ่มหมายเลขหรือเลือกช่อง
4	Info	ปุ่มแสดงรายละเอียด
5	EPG	ปุ่มผังรายการอิเล็กทรอนิกส์
6	Menu	ปุ่มเปิด/ปิด เมนูการตั้งค่า
7	LIST	ปุ่มเปิดรายการช่อง
8	Google Assistant	เปิดใช้คำสั่งด้วยเสียง
9	Direction buttons/ OK	ปุ่มเลือก บน ล่าง ซ้าย ขวา และ ปุ่มตกลง
10	EXIT	ออกจากเมนู/แอปพลิเคชัน
11	Back	ปุ่มย้อนกลับรายการก่อนหน้า
12	Home	ปุ่มเปิดหน้าหลัก
13	APPS	ปุ่มแสดงหน้า APPs
14	Mute	เปิด / ปิดเสียง
15	CH+,CH-	ปุ่มเปลี่ยนช่องรายการ
16	Volume	ปุ่มเพิ่ม/ลดระดับเสียง
17	Media	ปุ่มควบคุมในโหมดมัลติมีเดีย
18	ASPECT	ปุ่มปรับขนาดภาพ
19	Audio	ปุ่มตั้งค่าเสียง
20	Subtitle	ปุ่มตั้งค่าบรรยาย
21	TEXT	ปุ่มแสดงข้อความ
22	Color	ปุ่มฟังก์ชันพิเศษ
23	YouTube	การเรียกใช้แอป YouTube
24	NETFLIX	การเรียกใช้แอป NETFLIX
25	prime video	การเรียกใช้แอป prime video
26	Google Play	การเรียกใช้แอป Google Play





7 | Google Assistant


1314

กดปุ่ม Google Assistant บนรีโมทของคุณเพื่อเริ่มการทำงาน
 คุณสามารถถามคำถามหรือสั่งให้ Google Assistant ทำสิ่งต่างๆได้เช่น เล่นรายการโปรด
 วิดีโอ หรือเพลง ค้นหาภาพยนตร์ล่าสุด ปรับระดับเสียง หรือเปลี่ยนช่องรายการสด
 คุณยังสามารถสอบถามเกี่ยวกับสภาพอากาศ กีฬา การจราจร รวมถึงสั่งให้ปรับระดับแสงได้อีกด้วย
 1.ถ้า TV คุณยังไม่ได้เข้าสู่ระบบเมื่อคุณกดปุ่ม Google Assistant บนรีโมท Bluetooth
 หน้าจอจะแสดงขั้นตอนลงชื่อเข้าใช้ ดังนี้


- กดปุ่ม Google Assistant บนรีโมท Bluetooth
- เลือกคำว่า Sign in

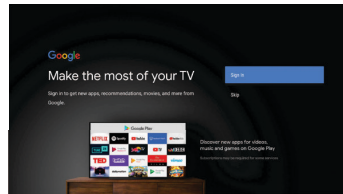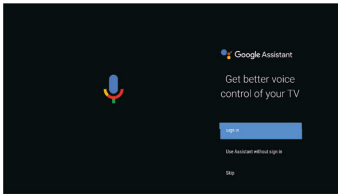

- เลือกคำว่า Use your remote


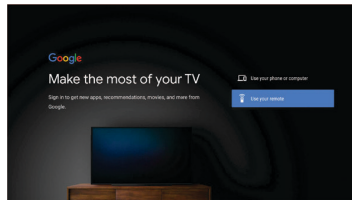


- จากนั้นให้ลงชื่อเข้าใช้ด้วย Google Account

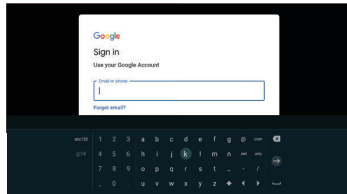





- e) กดปุ่ม Google Assistant บนรีโมท Bluetooth อีกครั้ง
- f) คุณสามารถตั้งค่าเพิ่มเติมได้หลังจากคุณ Sign in โดยการเลือก Continue

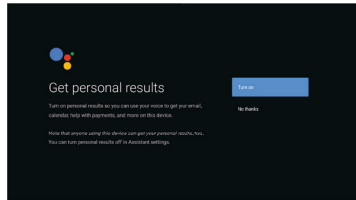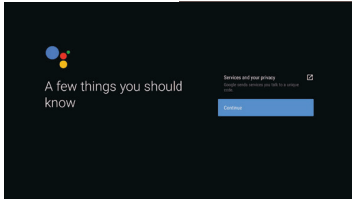



- g) เลือก "Yes "

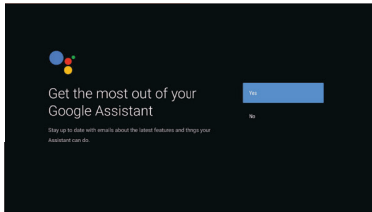

ตอนนี้คุณสามารถเพลิดเพลินกับ Google Assistant ได้แล้วเพียงกดปุ่ม Google Assistant และพูดบางสิ่งที่คุณต้องการได้เลย


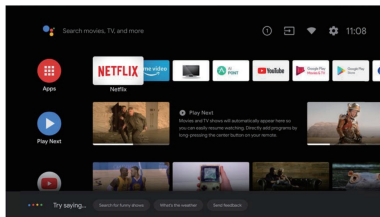


2. ถ้าคุณอยากรู้สภาพอากาศคุณแค่พูดว่า "What's the weather" หรือ "What the weather of Ratchayothin District "

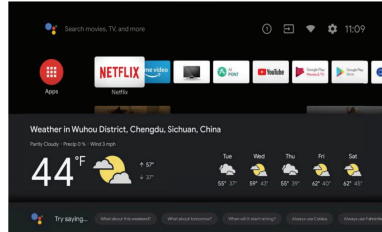
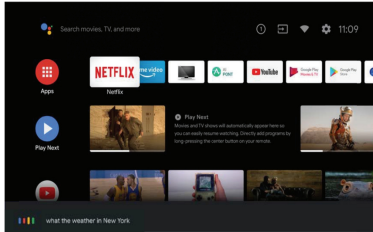


- 3.ถ้าคุณต้องการเปิดแอปคุณแค่พูดว่า "Open/Launch/Start/Go to Youtube"

- 4.ถ้าคุณต้องการปรับระดับเสียงคุณแค่พูดว่า "Turn it up/down", "Increase/Decrease volume by 10%", "Set volume to 30", "Max/Minnimum volume", "Mute/Unmute"

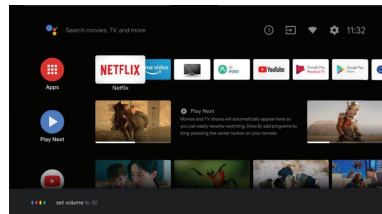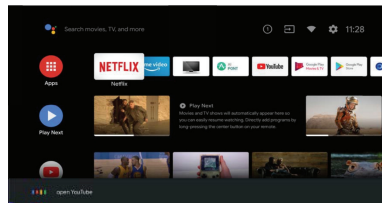


- 5.ถ้าคุณต้องการค้นหาหรือเปิด ภาพยนตร์/เพลง คุณแค่พูดว่า "Search for Romatic Movie", "Search for Spider-man", "Play latest Movie", "Play Spider-man Homecoming", "Show Funny cat video"

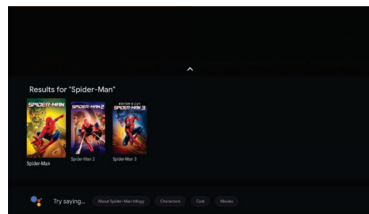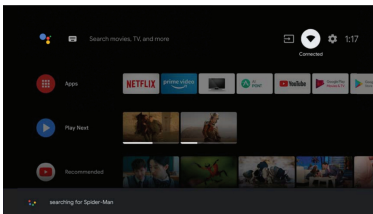

1. Important Safety Information.....	2
2. Accessories.....	6
3. Installing the LED TV.....	7
4. Overview of the TV set.....	8
5. Controls	10
6. Using the Remote Control	12
7. Google Assistant	15

Warnings

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold separately. When a cart is used, use caution when moving the cart/apparatus combination to avoid tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. **WARNING: To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.**
16. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
17. The mains plug or appliance coupler shall remain readily operable.
18. Use in outdoor: This TV is not designed for outdoor installation. Do not expose the TV to rain, as it may result in a fire or an electric shock. Also, do not expose the TV to direct sunlight, as it may heat up and become damaged.

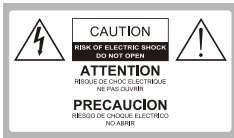

Safety:

TO REDUCE THE RISK OF ELECTRICAL SHOCK DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS ARE INSIDE. REFER TO QUALIFIED PERSONNEL ONLY.



Dangerous Voltage: The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of dangerous voltage within the inside of the product that may be sufficient level to constitute a risk of electric shock to persons.



Instruction: The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and servicing instructions in the literature accompanying the appliance.

Safety Precautions Instruction

Observing the simple precautions discussed in this booklet will provide you with many years of enjoyment and safe operation.

This product complies with all applicable US Federal safety requirements, and those of the Canadian Standards Association.

1. Read Follow Instructions

All safety and operating instructions should be read and followed before the TV is operated.

2. Retain Instructions

The safety and operating instructions should be retained for future reference.

3. Heed Warnings

All warnings on the TV and in the operating instructions should be adhered to.

4. Cleaning

Unplug the TV from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use soft and slightly damp cloth for cleaning.

5. Water and Moisture

Do not use this TV near water, for example, near bathtub, wash bowl, kitchen sink, or laundry tub, in wet basement, or near a swimming pool.

6. Accessories Carts and Stands

Do not place this TV on a slippery or tilted surface, or on an unstable cart, stand, or table. The TV may slide or fall, causing serious injury to a child or adult, and serious damage to the TV.

7. Transporting the Television

ATV and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the TV and cart combination to overturn.

8. Ventilation

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the TV and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the TV on a bed, sofa, rug, or other similar surface. The TV should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided.

9. Power Sources

This TV should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your electronics retailer or local power company.

10. Power-Cord Polarization

This TV set is equipped with a two-wire plug.

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet the contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.

11. Power-Cord Protection

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the TV.


12. Lightning

For added protection for the TV during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the TV from lightning and power-line surges.

13. Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the TV be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built up static charges. Article 810 of the National Electrical Code(U.S.A.), ANSI/ NFPA provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connect on to grounding electrodes and requirements for the grounding electrode.

Example of Grounding According to National Electrical Code Instructions

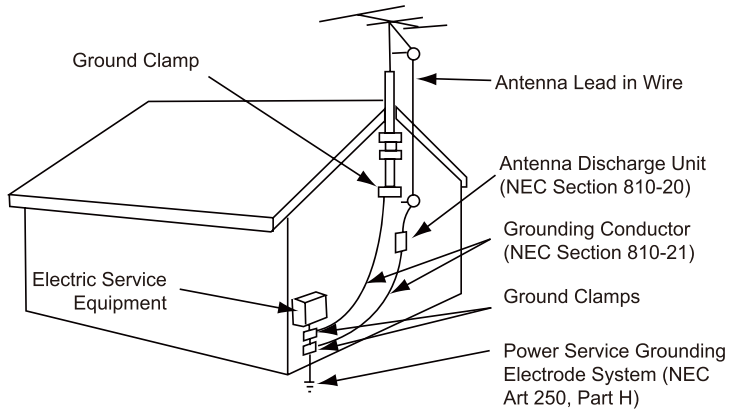

NEC - National Electrical Code

14. Power Lines

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall on to power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

15. Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

16. Object and Liquid Entry

Never push objects of any kind into this TV through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on or inside the TV.

17. Servicing

Do not attempt to service this TV yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

18. Damage Requiring Service


Unplug from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. If the power-supply cord or plug is damaged.
- b. If liquid has been spilled, or objects have fallen into the product.
- c. If the TV has been exposed to rain or water.
- d. If the TV does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- e. If the TV has been dropped or the cabinet has been damaged.
- f. If the TV exhibits a distinct change in performance.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

Please make sure the following items are included with your LED TV.
If any items are missing, please contact your dealer.

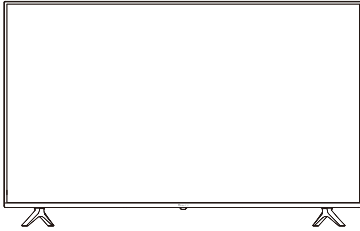

55US800AN

*Please refer to the real object

LED TV



Instruction Manual



Remote Control



2 batteries



warranty card

Installing the Stand

Figure 1

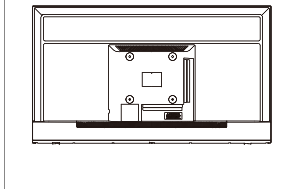


Figure 2


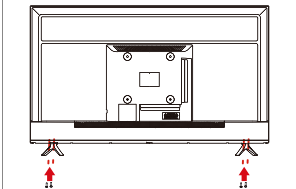


Figure 3

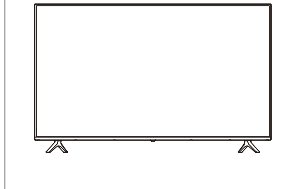

1. Place the TV set on soft cloth or cushion with face down. Place the base in position as shown. (see Figure 1).
2. Insert 4 screw(provided)into the screw holes, Use a screwdriver lock. (see Figure 2)
3. Stand the TV up. (see Figure 3)

Disconnecting the Stand

1. Lay the TV flat on a table with the LED screen face down. To prevent the TV from being scratched, put a piece of soft cloth on the table on which the screen will be set. (see Figure 1)
2. Remove the 4 screw on the stand, then pull up the stand slowly. (see Figure 2)
3. Then you successfully removed the base. (see Figure 3)

Figure 1

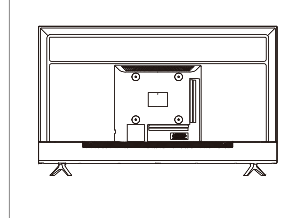


Figure 2



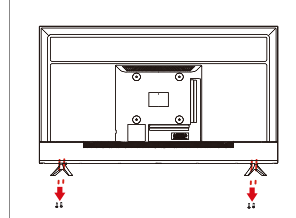


Figure 3

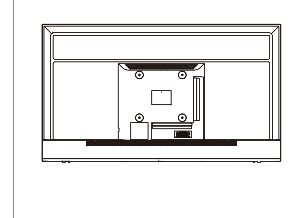


Front View

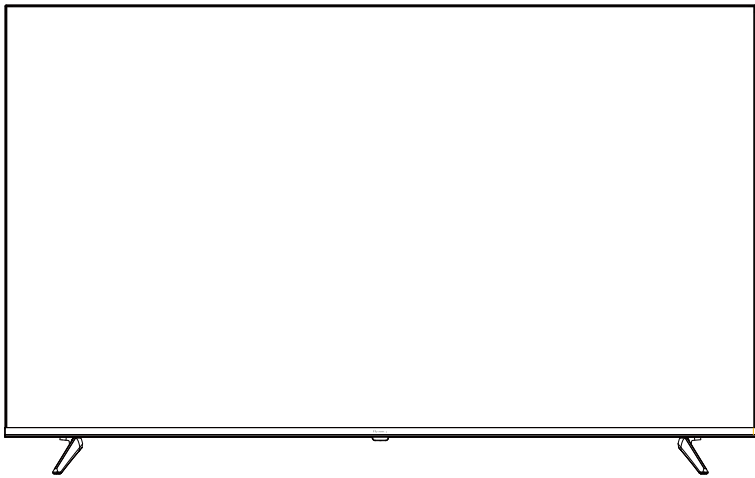


55US800AN

Rear View

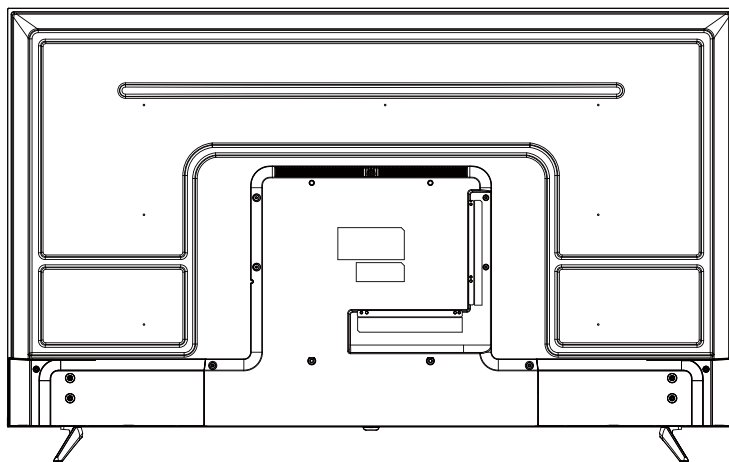

55US800AN

Controls And Connections(Cont.)

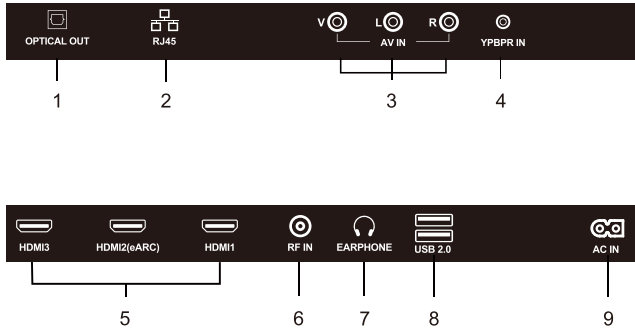


- 1: OPTICAL OUT
- 2: RJ45
- 3: AV IN
- 4: YPBPR IN
- 5: HDMI
- 6: RF IN
- 7: EARPHONE
- 8: USB 2.0 5.0V \equiv 500mA
- 9: AC IN

Supporting signals

AV	HDMI
480i	480i
576i	576i
480P	480P
576P	576P
720P / 50Hz	720P / 50Hz
720P / 60Hz	720P / 60Hz
1080i / 50Hz	1080i / 50Hz
1080i / 60Hz	1080i / 60Hz
2160P / 50Hz	2160P / 50Hz
2160P / 60Hz	2160P / 60Hz

Inserting Remote Control Batteries

1. Remove the battery cover by pulling then lifting the knob on the cover.
2. Insert the batteries, corresponding to the (+) and (-) markings on the battery compartment.
3. Reattach the battery cover.

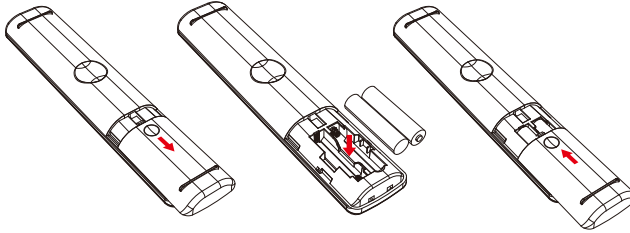

CAUTION

- . Only use the specified AA batteries.
- . Do not mix new and old batteries. This may result in creaking or leakage, which may pose a risk of fire or lead to personal injury.
- . Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in leakage, which may pose a risk of fire or lead to personal injury.
- . Dispose of the battery in accordance with local laws and regulations.
- . Keep the batteries away from children or pets.
- . When the remote control will not to be used for an extended period, remove the batteries.

Operating the Remote Control

1. Aim Remote Control directly at the Remote Control Sensor on the down of the TV set.
2. Remote Control range is at approx. 16 feet with angles of approx. 30 degree.
3. Avoid obstructions between the Remote Control and the sensor.

> If you do not intent to use the remote control for a long time, remove the batteries.

> If the remote control does not operate correctly, or if the operating range reduced, replace both batteries with new ones.





NO.	Buttons	Description
1	Power	Turn on/off TV
2	Source	Select signal source
3	Number	Number buttons
4	Info	Display program information
5	EPG	Launch Electronic Program Guide
6	Menu	Display main menu
7	LIST	Press to enter into channel list
8	Google Assistant	Activate Voice command function
9	Direction buttons/ OK	Press the direction buttons to select menu options or settings. Press OK to select or confirm menu item
10	EXIT	Exit the menu or exit the application
11	Back	Return to previous menu or setting
12	Home	Open Android TV Homepage
13	APPS	Launch the APPS page
14	Mute	Mute or restore sound
15	Program	Select programs in ascending or descending order
16	Volume	Adjust the volume
17	Media	Control media playback in Media mode
18	ASPECT	Adjust picture aspect ratio
19	Audio	Select audio languages and Audio channels
20	Subtitle	Select subtitle
21	TEXT	Show or hide Teletext
22	Color	Use in accordance with the Operation interface instructions
23	YouTube	Go to YouTube App
24	NETFLIX	Go to NETFLIX
25	prime video	Go to prime video
26	Google Play	Go to Google Play

Press the Google Assistant button on your remote control to start.



Ask it questions. Tell it to do things. Ask it to play your favorite show, video, music or find the latest blockbuster to enjoy. Or set up your volume, live channels or more.

Ask about the weather, sports, traffic, and more. You can even ask it to dim the lights.

1. If your TV has not signed in, when pressing the Google Assistant button on Bluetooth

Remote Control, it must ask you to sign in by following these steps:

- a) Press the Google Assistant button on Bluetooth Remote Control;
- b) Click "Sign in":

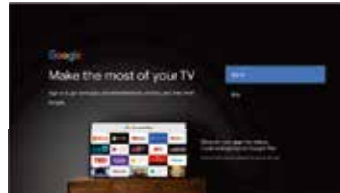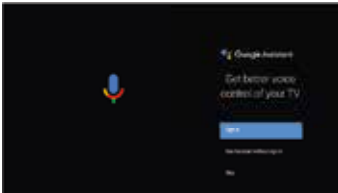

- c) Click "Use your remote":



- d) Then sign in with your Google Account:




- e) Press the Google Assistant button on Bluetooth Remote Control again;
- f) You must setup a few things after signed in. Click "Continue":



- g) Click "Yes":



Now you can enjoy your Google Assistant! Press the Google Assistant button and try saying something.


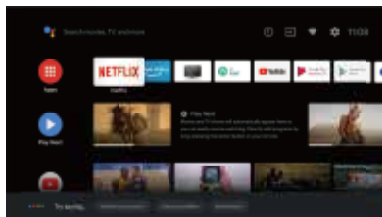





7 | Google Assistant

English


2. Ask about the weather, you can say "What's the weather" or "What's the weather of Wuhou District":

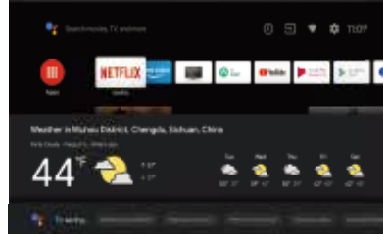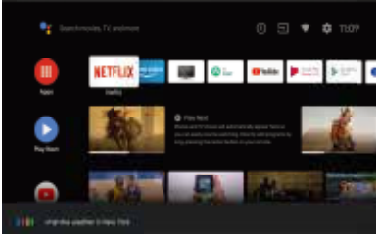


3. Open app, you can say "Open/Launch/Start/Go to YouTube":

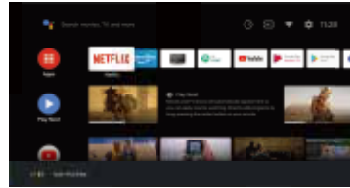

4. Set up your volume, you can say "Turn it up/down", "Increase/Decrease volume by 10%", "Set volume to 30", "Max/Minimum volume", "Mute/Unmute":

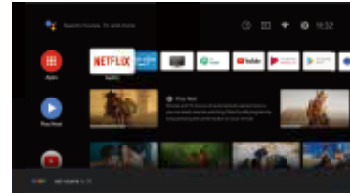


5. Search and play movies/Music, you can say "Search for Romantic Movies", "Search for Spider-Man", "Play a latest Movie", "Play Spider-Man Homecoming", "Show Funny cat videos":

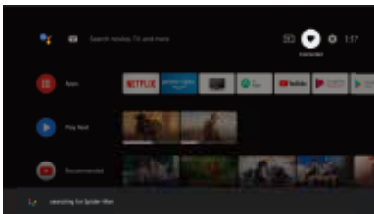

ACONATIC

บริษัท ไฮไฟ โอเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161-162 ซอยรามวงษ์วาน47(จีนพด) โทร. 0-2854-5281, 0-2580-6955
แขวงทุ่งสองห้อง เขตหลักสี่ Core Line: 02-591-9444, 02-589-5115
กรุงเทพมหานคร 10210

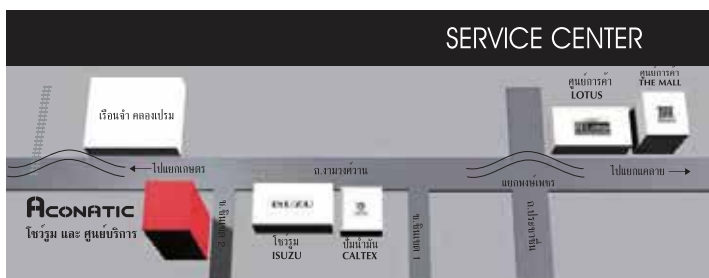

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของโฆษณาชุดและรายละเอียดสินค้าโดยมีฉิ่งแจ้งให้ทราบล่วงหน้า