


ACONATIC

คู่มือการใช้งาน

เครื่องปิ้งขนมปัง

รุ่น: AN-TT6002

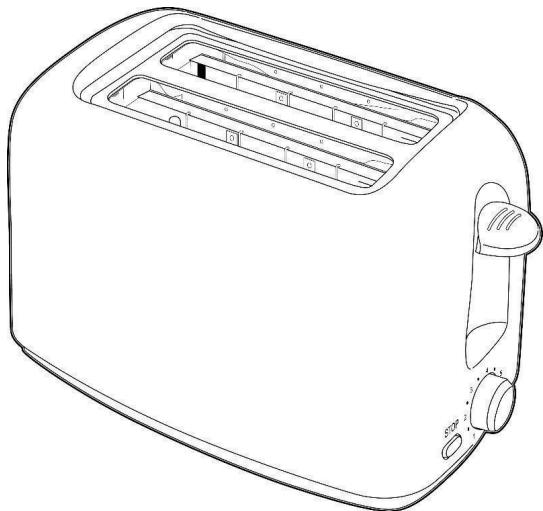

คำแนะนำ


1. โปรดอ่านคำแนะนำนี้ก่อนใช้งานและเก็บรักษาไว้สำหรับการใช้งานอิงในอนาคต
2. เพื่อป้องกันอันตรายจากไฟฟ้า ห้ามน้ำส่วนใดส่วนหนึ่งของเครื่องหรือสายไฟลงในน้ำหรือของเหลวอื่นๆ
3. ต้องมีการดูแลอย่างใกล้ชิด เมื่อใช้อุปกรณ์ใกล้เด็ก
4. ห้ามเปิดเครื่องทึบไว้โดยไม่มีผู้ใช้งาน
5. วางเครื่องปั๊มน้ำบนพื้นที่ราบ
6. ห้ามใช้เครื่องปั๊มน้ำที่ถูกดึง
7. ลอดปลั๊กออกจากเด้ารับทุกรังเมื่อไม่ใช้งานหรือก่อนทำความสะอาด
8. ห้ามใช้งานผลิตภัณฑ์เมื่ออุปกรณ์ได้รับความเสียหาย ให้ส่งกลับไปผู้จำหน่ายเพื่อตรวจสอบและทำการซ่อมแซม
9. เพื่อตรวจสอบความปลอดภัย ควรตรวจสอบสายไฟอย่างสม่ำเสมอเพื่อให้แน่ใจว่าไม่มีความเสียหาย เกิดขึ้น หากพบว่าสายไฟมีความเสียหายเพียงเล็กน้อย ควรส่งคืนเครื่องไปยังผู้จัดจำหน่ายเพื่อตรวจสอบ และทำการซ่อมแซม
10. หากจะจัดเก็บสายไฟ อย่าให้สายไฟสัมผัสกับความร้อนบริเวณของเครื่องปั๊มน้ำปั๊มน้ำที่อุปกรณ์เพื่อใช้งานเสร็จ ให้ปล่อยเครื่องยืนลงก่อนหลังจากนั้นค่อยพับสายไฟเพื่อจัดเก็บ
11. ต้องระมัดระวังข้อด้มดักกับพื้นผิวที่ร้อน และห้ามเก็บหรืออุดอุปกรณ์ลงก่าวะเข็นลงสนิท
12. ห้ามวางแผนเดาแก๊สหัวไก่สีเหลืองร้อน
13. ห้ามใช้สารกัดกร่อนหรือน้ำยาทำความสะอาดที่รุนแรงเมื่อทำความสะอาดผลิตภัณฑ์
14. ควรวางตำแหน่งเครื่องปั๊มน้ำปั๊มน้ำที่ห่างจากวัสดุติดไฟง่ายในขณะที่ใช้งานผลิตภัณฑ์ เช่น เสื่อผ้า ผ้าม่าน เป็นต้น ควรวางไว้บริเวณตำแหน่งที่อากาศถ่ายเท – แนะนำให้ใช้แผ่นรองกันความร้อนเป็นฐานรองอุปกรณ์
15. เครื่องนี้สำหรับใช้ในครัวเรือนเท่านั้น อย่าใช้อุปกรณ์เพื่อสิ่งอื่นนอกเหนือจากการใช้งานที่ระบุไว้
16. ห้ามใช้เครื่องปั๊มน้ำปั๊มน้ำที่ถูกดูดของเศษขยะไม่ต้องดูดและควรทำความสะอาด ถอดของเศษขยะออก
17. ห้ามใช้เครื่องนี้กับอาหารที่มีน้ำตาลอรือแยม
18. หากสายไฟชำรุด จะต้องเปลี่ยนโดยผู้มีคุณภาพหรือผู้จัดจำหน่ายที่อุดอุปกรณ์และทำการซ่อมแซม
19. อุปกรณ์นี้ไม่เหมาะสมสำหรับใช้โดยบุคคล (รวมถึงเด็ก) ที่มีความสามารถทางกายภาพ ประสาทสัมผัส หรือจิตใจคล่อง หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานอุปกรณ์โดยบุคคลที่รับผิดชอบด้านความปลอดภัย

20. ขบวนเครื่องปั้งขนมปังทำงานครอแคลเด็ก ไม่ให้เข้าไปเล่นเครื่องปั้งขนมปัง
21. พื้นผิวที่รองรับผลิตภัณฑ์อาจมีอุณหภูมิสูงขึ้นเมื่อกำลังใช้เครื่องปั้งขนมปัง
22. ขนมปังอาจลุกไฟได้ ดังนั้นห้ามใช้เครื่องปั้งขนมปังใกล้ชิดกับไฟ เหร่น ผ้าม่าน

คำเตือน!

อย่าพยายามดึงขนมปังหรือส่งอื่น ๆ ที่ติดอยู่ ด้วยมือหรือวัสดุอื่น เนื่องจาก การสัมผัสถันส่วนที่มีกระแสไฟอาจทำให้เกิดการลุกไฟฟ้าช็อตได้ ควรรอให้อุปกรณ์เย็นลง กดดับลักษณะแล้วจึงค่อย ๆ นำขนมปังออกอย่างระมัดระวัง

- A. กันไฟกันความร้อน
- B. ปุ่มตั้งระดับความร้อน
- C. ปุ่มหยุดการทำงาน

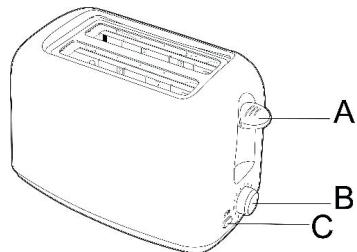

ขั้นตอนการใช้งาน

1. เลี่ยงปลั๊กเครื่องปั้งขนมปัง และปรับปุ่มตั้งระดับความร้อนให้เข้ากับประเภทขนมปังที่คุณต้องการ
2. เลือกการตั้งค่าที่ต้องการ (หมายเลข 1- หมายเลข 6) เมื่อใช้เครื่องปั้งขนมปังครั้งแรกเราแนะนำให้คุณตั้งค่าที่หมายเลข 3 หมายเหตุ การตั้งค่าขึ้นอยู่กับความชอบส่วนบุคคลและประเภทของขนมปัง
3. ใส่ขนมปังลงในช่องปั้งขนมปัง และกดปุ่มกันไฟกันประกายบนปุ่มลงเพื่อติดตั้งขนมปัง
4. เมื่อปั้งขนมปังเสร็จแล้ว ขนมปังและตัวกันไฟกันความร้อนจะกลับสู่ตำแหน่งเดิม โดยอัตโนมัติ
5. หากคุณต้องการหยุดปั้งขนมปังให้กดปุ่มหยุดการทำงาน ผลิตภัณฑ์จะหยุดการทำงานโดยอัตโนมัติ โดยขนมปังและตัวกันไฟกันความร้อนจะกลับสู่ตำแหน่งเดิม
6. ถ้าขนมปังติดอยู่ในเครื่องปั้ง กดดับลักษณะแล้วนำขนมปังออก

การดูแลทำความสะอาด

1. ตรวจสอบให้แน่ใจว่าเครื่องปั้งขนมปังถูกดับลักษณะก่อนทำความสะอาด
2. ห้ามน้ำเครื่องปั้งขนมปังลงในน้ำหรือของเหลวอื่น ๆ
3. ในการทำความสะอาดเครื่องปั้งขนมปัง ให้ถอดปลั๊กออกและปล่อยให้เย็นลง
4. ห้ามนำวัสดุหรือชิ้นส่วนต่างๆลงในเครื่องปั้งขนมปัง รวมถึงขนมปังในระหว่างการทำความสะอาด

วิธีกำจัดเศษข้นมปัง

เครื่องปั้นข้นมปังของคุณมาพร้อมกับด้าครองเศษข้นมปังที่ถอดได้ ซึ่งเป็นวิธีที่รวดเร็วและสะดวกในการเอาเศษข้นมปังออก ควรตรวจสอบให้แน่ใจว่าเครื่องปั้นข้นมปังถูกถอดปลั๊กและยืนยันก่อนที่จะถอดด้าครองเศษข้นมปัง ทำความสะอาดด้วยผ้าชูบัน้ำหมาดๆ และเช็ดด้าให้แห้งสนิทก่อนนำกลับเข้าเครื่องปั้นข้นมปัง

การทำความสะอาดและการบำรุงรักษา

1. ถอดปลั๊กเครื่องปั้นข้นมปังออกจากเตาอบและปล่อยให้เย็นก่อนทำความสะอาด
2. ห้ามใช้สารทำความสะอาดที่มีฤทธิ์กัดกร่อน ควรเช็ดด้วยผ้าชูบัน้ำหมาดๆ และเช็ดให้แห้ง หากใช้ผลิตภัณฑ์ทำความสะอาดสามารถใช้ได้แต่ห้ามเช็ดที่ด้าเครื่องปั้นข้นมปังโดยตรง
3. ในการนำเศษข้นมปังออกให้เลื่อนด้าครองเศษข้นมปังออกและทิ้งเศษข้นมปัง เช็ดทำความสะอาดและล้างลับที่เดิม และห้ามใช้ครีอิงปั้นข้นมปังโดยไม่มีด้าครองเศษข้นมปัง
4. เพื่อเอาชนะมปังที่เหลืออยู่ในเครื่องปั้นข้น ให้พลิกเครื่องปั้นลงและเขย่าเบาๆ อย่าใช้ครีอิงมือหรือของมีคมแหย่ข้าไปในช่อง เพราะอาจทำให้เครื่องปั้นเสียหายและเป็นอันตราย
5. ห้ามพันสายไฟเก็บรอบด้านนอกของเครื่องปั้นข้นมปัง ให้พันสายไฟตรงด้าชิดเก็บสายไฟที่อยู่ด้านล่างของเครื่องปั้นข้นมปัง

คำเตือน


1. เพื่อป้องกันไฟฟ้าช็อต ควรถอดปลั๊กออกจากไฟหลักก่อนถอดฝาครอบ
2. ไม่มีชิ้นส่วนภายในที่ผู้ใช้สามารถซ่อมแซมได้เอง
3. การติดต่อเจ้าหน้าที่บริการที่มีความเชี่ยวชาญในการซ่อมแซม

ACONATIC

INSTRUCTION MANUAL

TOASTER

Model : AN-TT6002

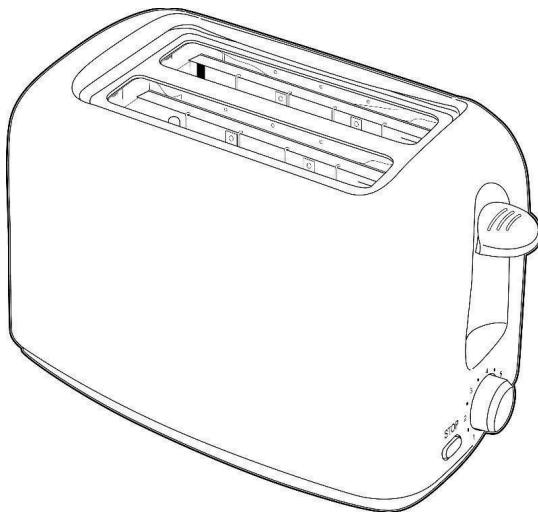

IMPORTANT INSTRUCTIONS


1. Please read these instructions before operating and retain for future reference.
2. To protect against electrical hazard do not immerse any part of the appliance or cord in water or any other liquid .
3. Close supervision is necessary when the appliance is used near children.
4. Do not leave the appliance unattended when in use.
5. Always use the appliance on a dry, level surface.
6. Do not use this appliance outdoors.
7. Always unplug from the plug socket when not in use and before cleaning.
8. Do not operate the appliance if damaged, after an appliance malfunctions or it has been damaged in any manner, return to an authorized service engineer for repair, because special purpose tools are required.
9. In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Should there be any signs that the cord is damaged in the slightest degree, the entire appliance should be returned to an authorized service engineer.
10. Do not let the cord hang over the edge of a table or counter or touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
11. Care must be taken not to touch any hot surfaces, do not store or cover the appliance until it has full cooled down.
12. Do not place this appliance on or near a hot gas or electric burner, in or where it could touch a heated oven, or a microwave oven.
13. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
14. Caution-bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem – an insulated heat pad is recommended.
15. THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY. DO NOT USE THE APPLIANCE FOR ANYTHING OTHER THAN INTENDED USE.
16. Do not use the toaster without the slide out crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
17. Do not use this appliance with any foodstuff product containing sugar content or with products containing jam or preserves.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.
21. The temperature of accessible surfaces may be high when the appliance is operating.
22. The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

WARNING!

Never attempt to extract Jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution.

Allow the appliance to cool down, unplug and carefully remove the bread.

- A. Carriage Bread Handle
- B. Adjustable Browning Control
- C. "CANCEL" Button

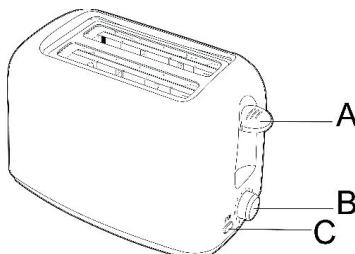

Operation

plug the toaster in and adjust it to the type of toasting you require,with the browning control(4)

Select the desired browning setting, from No.6 on the browning control knob (No.1-lightest,No.6-darkest).When using the toast for the first time we suggest you toast on No.3. Different types of bread and personal preference may require a different browning setting.

put the bread into the open toasting slot (1)and press the start control(2)down.it remains down until the bread is toasted

once toasted,the slices appear in the openings(1)and the start control(2)returns to its original position.the toaster switches“off”automatically.

Press the stop' and automatic eject button(3)if you wish to stop the toaster

If the bread sticks in the toaster,unplug it,wait for it to cool, and remove the bread

Care and cleaning instruction

ensure the toaster is unplugged before cleaning it.

Never place it in water or any other liquid

To clean the toaster,unplug it and allow to cool

Do not put anything bread in the toaster during cleaning.

HOW TO REMOVE BREAD CRUMB

Your toaster comes with a removable crumb tray. This is a quick and convenient way to remove crumbs. Always ensure that the toaster is unplugged and has cooled down before removing the crumb tray. Clean the crumb tray with a damp cloth and always dry the tray properly before replacing it into the toaster.

CLEANING AND MAINTENANCE

1. Always unplug the toaster from electrical outlet and allow to cool before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleaning agent to cloth, not directly onto the toaster.

- To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and shake gently. Never inset any hard or sharp instrument into the slots as this could damage the toaster and cause a safety hazard.
- Never wrap the cord around the outsides of the toaster, use the cord storage cleats on the underside of the toaster.

CAUTION


To prevent electric shock , disconnect from the mains before removing cover .

No user serviceable parts inside.

Refer servicing to qualified service personnel.

บริษัท ไฮไฟ ออเรียนต์ ไทย จำกัด (มหาชน) HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161 -162 ชั้น 6 ถนนวารินชำราษ 47(ชั้นหก) โทร. 0-2954-5281 , 0-2580-6955
เบอร์โทรศัพท์ Core Line. 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

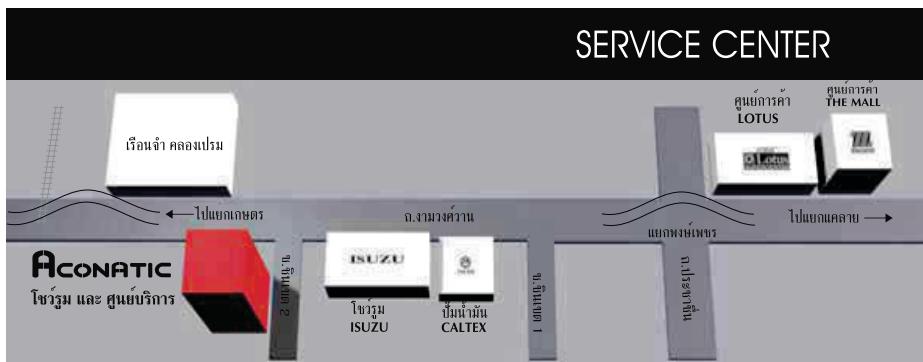

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของส่วนลดค่าโดยสารด้วยผลิตภัณฑ์ให้ทราบล่วงหน้า