

**ACONATIC**

**คู่มือการใช้งาน**

**หม้อสุกี้**

**รุ่น AN-POT1300**

โปรดอ่านคู่มืออย่างละเอียดก่อนใช้งาน

## สารบัญ

ส่วนที่ 1	ข้อมูลทางเทคนิค
ส่วนที่ 2	วงจรไฟฟ้า
ส่วนที่ 3	ส่วนประกอบควบคุมการทำงาน
ส่วนที่ 4	วิธีการใช้งาน
ส่วนที่ 5	ข้อควรระวังเพื่อความปลอดภัย
ส่วนที่ 6	การทำความสะอาดและการบำรุงรักษา

### ส่วนที่ 1

### ข้อมูลทางเทคนิค

-ค่าความถี่ : 50/60 Hz


-น้ำหนัก : 3.13 kg

-พิกัดกำลังไฟฟ้า : 1300W

-แหล่งจ่ายไฟฟ้า : 220-240VAC


### ส่วนที่ 2

### วงจรไฟฟ้า

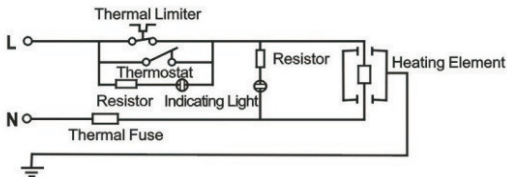

### ส่วนที่ 3

### ส่วนประกอบควบคุมการทำงาน

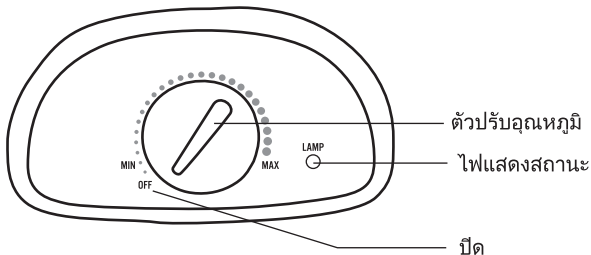

## ส่วนที่ 4

## วิธีการใช้งาน

1. ก่อนเปิดใช้งานหม้อ ควรเช็ดหม้อให้แห้ง หลังจากนั้นให้วางตัวหม้อลงไป และเช็ดหม้อว่าสัมผัสกับแผ่นทำความร้อนหรือไม่
2. การประกอบอาหาร การต้ม และการตุ๋น
  - 2.1 ใส่อาหารลงในหม้อและปิดฝา ปรับอุณหภูมิตามความต้องการ โดยตัวปรับอุณหภูมิ เมื่อเปิดใช้งานไฟแสดงสถานะจะสว่างขึ้น
  - 2.2 เมื่ออาหารสุก ทำการปรับอุณหภูมิไปที่ตำแหน่ง "ปิด" จากนั้นไฟแสดงสถานะจะสว่างขึ้นอัตโนมัติ
3. การประกอบอาหาร การผัด และการทอด  
ปรับอุณหภูมิการปรุงอาหารตามต้องการด้วยตัวปรับอุณหภูมิ ไฟแสดงสถานะจะสว่างขึ้น หม้อจะเริ่มทำความร้อน และคุณสามารถใส่วัตถุดิบการทำอาหารลงไป  
หมายเหตุ : เมื่อใช้งานหม้อเสร็จแล้ว โปรดปรับตัวปรับอุณหภูมิไปที่ตำแหน่ง "ปิด" และถอดปลั๊กทุกครั้งเมื่อประกอบอาหารเสร็จ
4. ก่อนใช้งานหม้อ ต้องดึงฝาครอบพลาสติก ออกจากตัวหม้อก่อนใช้งาน



## ส่วนที่ 5

## ข้อควรระวังเพื่อความปลอดภัย

1. เตารับไฟฟ้าต้องมีการต่อสายดิน
2. ห้ามนำตัวหม้อลงในน้ำ
3. ห้ามใช้วัตถุใดๆ กระแทกแผ่นทำความร้อนและกันหม้อด้านในเพื่อไม่ให้เกิดความเสียหาย
4. ต้องเช็ดคราบสกปรกบนแผ่นทำความร้อนและกันหม้อด้านในให้สะอาด เพื่อป้องกันไม่ให้หม้อเสียหาย
5. ห้ามใช้โลหะขูดหม้อด้านใน อาจทำให้สารเคลือบหม้อหายได้
6. ห้ามปรุงอาหารที่มีกรดและด่างภายในหม้อไฟฟ้า
7. ห้ามใช้หม้ออื่นที่ไม่ได้มาพร้อมกับเครื่อง และเมื่อไม่ใช้งานอย่าทิ้งหม้อไว้ในตัวเครื่อง
8. การใช้หม้อครั้งแรกให้ล้างให้สะอาดและเช็ดให้แห้ง
9. สารเคลือบไม่สามารถทนต่ออุณหภูมิสูงมากได้ อาจมีผลต่อการใช้งาน
10. ห้ามใช้สายไฟหรือปลั๊กที่ไม่ตรงกับเครื่อง
11. สายไฟไม่ควรงอหรือม้วน
12. ห้ามเสียบปลั๊กขณะมือเปียก
13. ห้ามใช้หม้อไฟฟ้านอกอาคาร
14. หลีกเลี่ยงการการใช้งานหม้อที่ไม่มีการประกอบอาหาร
15. ห้ามถอดปลั๊กโดยการดึงสายไฟ

16. ห้ามเสียบปลั๊กไฟไว้เมื่อไม่ได้ใช้งาน
17. ห้ามสัมผัสเครื่องหลังจากเพิ่งใช้งาน เนื่องจากเครื่องยังมีความร้อนอาจทำให้เกิดแผลพุพองได้
18. หลีกเลี่ยงการใช้งานเครื่องในสถานที่ที่เด็กสามารถสัมผัสได้
19. อุปกรณ์นี้ไม่ได้มีวัตถุประสงค์ไว้ใช้งานสำหรับโดยบุคคลที่ด้อยความสามารถทางร่างกาย ประสาทสัมผัสหรือจิตใจ รวมถึงเด็กหรือผู้ที่ขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการดูแลหรือการสอนเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบด้านการดูแลของบุคคลเหล่านั้น
20. ห้ามใช้งานอุปกรณ์ ที่สายไฟหรือปลั๊กชำรุด หากเกิดความเสียหายต้องเปลี่ยนโดยผู้ผลิตหรือตัวแทนผู้บริการ
21. ผลิตภัณฑ์นี้ใช้สำหรับในครัวเรือนเท่านั้น

## **ส่วนที่ 6 การทำความสะอาดและการบำรุงรักษา**

1. เมื่อใช้งานเสร็จทุกครั้ง ต้องถอดปลั๊กทุกครั้งหลังใช้งาน
2. โปรดใช้ผ้าสะอาดหรือน้ำยาทำความสะอาดแบบอ่อนในการทำความสะอาดเครื่อง ห้ามใช้แปรงโลหะ หรือน้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อน
3. ห้ามนำเครื่องลงในน้ำในการทำความสะอาด แต่ให้ใช้ฟ้านุ่มหรือแห้งในการเช็ดทำความสะอาด
4. ฟาหุ้ม แหวนฟาหุ้ม ตัวเครื่อง และหม้อ สามารถทำความสะอาดด้วยน้ำยาทำความสะอาดหรือใช้ผ้าเช็ดทำความสะอาด
5. โปรดทำความสะอาดและเก็บเครื่องไว้ในที่แห้ง





# INSTRUCTION MANUAL

**ELECTRIC HOT POT**  
**MODEL:AN-POT1300**

# CONTENTS

Chapter 1	Technology Parameter
Chapter 2	Circuit Diagram
Chapter 3	Control Panel Function Explanation
Chapter 4	How To Use
Chapter 5	Safety Notices
Chapter 6	Cleaning and Maintenance


## Chapter 1

### TECHNOLOGY PARAMETER

- Frequency: 50Hz
- Rate power: 1300W
- Weight: 2.75 Kgs
- Power supply: 220V


## Chapter 2

### CIRCUIT DIAGRAM

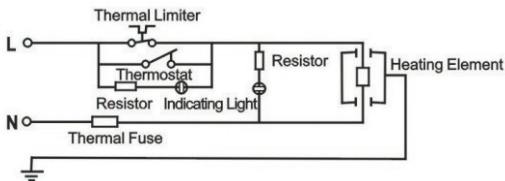

## Chapter 3

### CONTROL PANEL FUNCTION EXPLANATION

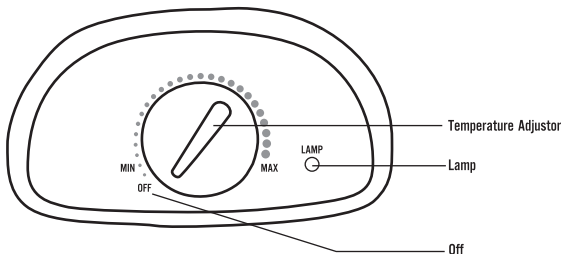

1. Before turning on the cooker, please wipe and dry the bottom of the cooking pot, and then place the pot into the cooker and turn several times to make sure the pot is closely in contact with the heating plate.
2. Slow cook, cook, braise
  - Put the food into the pot and cover, adjusting the cooking temperature to any desired temperature by the temperature adjuster. the heating up light turns on.
  - When the food is done, adjust the temperature adjustment display to "off" positions, then the keeping warm light turns on automatically. the pot temperature will be kept warm.
3. Stir fry and fry
  - Adjust the cooking temperature to any desired temperature by the temperature adjuster, the heating up light turns on, the cooker starts to heat, and you can put the fresh food into the pot and make your favorite dishes.



Remark: when finishing using the cooker, please adjust the temperature adjustment display to "off" position and unplug from the outlet.

4. Before use the unit, must peel off the protection plastic cover of outer body to avoid danger.


1. The power socket must be grounded.
2. Don't immerse the whole unit into the water.
3. Never use any solid object to hit the heating plate and the bottom of the inner pot to avoid damages.
4. Must wipe off any foreign matters on the heating plate and the bottom of the inner pot. Otherwise will damage the unit and cooking effects.
5. Don't use any metals to scrape the inner pot. It will damage the non-stick coating.
6. Don't cook acids and alkali food with this cooker, please place the unit at a clean and dry place away from any corrosive gas and moisture.
7. Don't use any other spade. Please use the accompanied special spade we offered, don't leave it in the hot pot for a long time.
8. Before using the pot for the first time. Please wash it well, wipe off the water.
9. The non-stick coating can not be cooked at ultra high temperature, its usage will be effected.
10. Do not use the pot if pin cord shatters or the plug doesn't match the socket stably.
11. The cord should be neither bend nor folded into coil.
12. Don't plug with wet hands.
13. Don't use the pot outside the room.
14. Avoid heating the empty pot or heating in excess.
15. Don't put out the pin by pulling the power line cord.

16. Don't put plug the power pin on the socket without using it.
17. Don't touch the unit surface after using the unit immediately, since the high heat will transmit to the unit.
18. Avoid using the unit in a place where children might touch it or operate by themselves.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliances.
20. Do not operate any appliances with damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
21. This produce only for household use only.

**Chapter 6 CLEAN AND MAINTENANCE**

- When finished using the unit, please un-plug from the outlet and cool down the pot before washing. Please use soft cloth and mild detergent to clean the unit, don't use metal brush, corrosive detergent to damage the unit.
- Don't immerse the whole unit into the water. Never immerse the heating plate, cooker housing etc into the water. Use a soft and dry moisture cloth to dry off.
- Pot cover, cover circle, cooker housing, and spade can be cleaned with mild detergent and a soft cloth.
- Please clean and store the unit at a dry and clear place when planning not to use for long time.

**บริษัท ไฮฟอริเอนท์ ไทย จำกัด (มหาชน)**  
**HIFI ORIENT THAI PUBLIC COMPANY LIMITED**  
 83/161-162 ซอยงามวาสุกรี(จีนเซต2) โทร. 0-2954-4281 , 0-2580-6955  
 แขวงทุ่งต้อมท้อง เขตหลักสี่ Core Line. 02-591-9444 , 02-589-5115  
 กรุงเทพมหานคร 10210

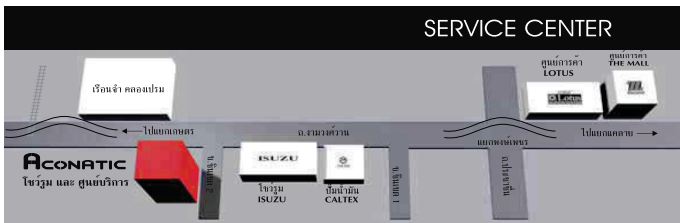

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของโฆษณาจุดและรายละเอียดสินค้าโดยมิต้องแจ้งให้ทราบล่วงหน้า