

Aconatic

คู่มือการใช้งาน

TV รุ่น 85QS100AN

คำแนะนำ

กรุณารีบก่อนซื้อ คู่มือข้อมูลทางเดียว ก่อนทำการติดตั้งและใช้งานโดยทันที
เก็บคู่มือนี้ไว้ใช้อ้างอิง

ความสำคัญด้านความปลอดภัย



สัญลักษณ์การแจ้งเตือนด้วยสายไฟฟ้าข้อมูลศรัทธายในสามเหลี่ยมด้านเท่านี้มีวัตถุประมงเพื่อแจ้งให้ผู้ใช้ทราบถึงการมี "แรงดันไฟฟ้าที่อันตราย" ที่ไม่ได้ดีดคนงานภายในกล่องสินค้าซึ่งอาจก่อให้เกิดความเสี่ยงต่อการถูกไฟฟ้าช็อก

คำเตือน

- เพื่อลดความเสี่ยงต่อการถูกไฟฟ้าช็อก โปรดอย่าดูดไฟ (ด้านหลัง) เมื่อจากไม่มีชั้นส่วนที่ผู้ใช้สามารถซ่อนได้ กรุณาติดต่อบุคลากรที่มีความรู้และความชำนาญในการซ่อมบำรุง
- เครื่องหมายติดใจภายนอกสามเหลี่ยมด้านเท่านี้มีวัตถุประมงเพื่อเตือนให้ผู้ใช้ทราบถึงคำแนะนำในการใช้งานและการบำรุงรักษาของผลิตภัณฑ์
- อย่าดัดตั้งอุปกรณ์นี้ในพื้นที่ที่ถูกจำกัดหรืออยู่ในอาคาร เช่น ตู้ห้องสีอิฐ หรือพื้นที่คล้ายคลึงกัน และเว้นระยะห่างสม่ำเสมอให้กับอุปกรณ์อื่นๆ เช่น หนังสือพิมพ์ ผ้าม่าน เป็นต้น
- โปรดอย่างชื่นชมุลนี้เกี่ยวกับข้อมูลทางไฟฟ้าและความปลอดภัยก่อนติดตั้งหรือใช้งานอุปกรณ์นี้
- ปลั๊ก/อุปกรณ์ชื่อต่อปลั๊กไฟ ควรอยู่ในสถานะที่สามารถใช้งานได้เสมอ
- เพื่อลดความเสี่ยงจากไฟไหม้หรือไฟฟ้าช็อก อย่าให้อุปกรณ์นี้โคลนฟันหรือความชื้น ห้ามวางอุปกรณ์ไว้โคลนน้ำหายดหรือกระเชื้อน และห้ามวางวัตถุที่มีช่องเหลา เช่น แจกัน ไว้บนเครื่องเมื่อ
- แบบเตอร์ (เบตเตอร์หรือชุดแบตเตอร์) จะต้องไม่ถูกความร้อนมากเกินไป เช่น แสงแดด ไฟ หรือสิ่งที่คล้ายกัน
- อย่างไร้ที่ในที่ไม่นั่ง โทรทัศน์อาจตกลงมาทำให้ไดร์บันดาดเจ็บสาหัส โดยเฉพาะกับเด็กสามารถหลีกเลี่ยงได้โดยใช้มาตรการป้องกันต่างๆ เช่น:
 - ใช้ชุดหรือแท่นวางที่แนะนำโดยผู้ผลิตเครื่องรับโทรทัศน์
 - ใช้เฟอร์นิเจอร์ที่รองรับโทรทัศน์ได้อย่างปลอดภัยเท่านั้น
 - ไม่วางโทรทัศน์บนเฟอร์นิเจอร์ที่สูง (เช่น ตู้หรือชั้นห้องสีอิฐ) โดยไม่มีที่ชิดทั้งเฟอร์นิเจอร์และโทรทัศน์
 - ไม่วางโทรทัศน์บนผ้าหรืออวัสดุอื่นที่อาจอยู่ระหว่างโทรทัศน์และเฟอร์นิเจอร์
 - ให้ความรู้แก่เด็กเกี่ยวกับอันตรายของการเป็นขึ้นไปบนเฟอร์นิเจอร์เพื่อเข้าถึงโทรทัศน์ ถ้าโทรทัศน์ถูกเก็บรักษาควรใช้การพิจารณาแบบเดียวกันข้างต้น
- ไม่ควรวางปลายไฟ เช่น เทียน ไฟที่จุดไฟไว้บนโทรทัศน์และอุปกรณ์
- รักษาระยะห่างอย่างน้อย 5 ซม. รอบๆ โทรทัศน์เพื่อการระบายอากาศที่เพียงพอ

หมายเหตุ สำหรับการทิ้งแบตเตอรี่

แบตเตอรี่ที่ใช้กับผลิตภัณฑ์นี้มีสารเคมีที่เป็นอันตรายต่อสิ่งแวดล้อม เพื่อรักษาสิ่งแวดล้อม ทึ้งแบตเตอรี่ที่ใช้แล้ว ตามกฎหมายหรือระเบียบข้อบังคับในท้องถิ่นของคุณ อย่างไร้แบตเตอรี่กับขยะทั่วไปในครัวเรือน สำหรับข้อมูลเพิ่มเติม โปรดติดต่อหอน่วงงานท้องถิ่นหรือร้านค้าปลีกของคุณที่คุณซื้อผลิตภัณฑ์ เครื่องหมายการค้าทั้งหมดเป็นทรัพย์สินของ บริษัทที่เกี่ยวข้องและมีสิทธิ์ทั้งหมด

- อุปกรณ์นี้เป็นเครื่องใช้ไฟฟ้าประเภท II หรืออุปกรณ์สองชั้น ได้รับการออกแบบในลักษณะที่ไม่ต้องการการ เชื่อมต่อกับสายดิน
- เพื่อป้องกันการแพร่กระจายของไฟ เก็บเทียนหรือเปลวไฟอื่น ๆ ให้ห่างจากผลิตภัณฑ์ตลอดเวลา
- การกำจัดผลิตภัณฑ์นี้อย่างถูกวิธี เครื่องหมายนี้ระบุว่าไม่ควรทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือนอื่นๆ ทั่วโลกอย่างไร เพื่อป้องกันอันตรายที่อาจเกิดขึ้นกับสิ่งแวดล้อมหรือสุขภาพของมนุษย์จากการกำจัด ของเสียที่ไม่มีการควบคุม ให้รีไซเคิลอย่างมีความรับผิดชอบเพื่อส่งเสริมการนำทรัพยากรวัสดุกลับมา ใช้ใหม่อีกครั้ง หากต้องการส่งคืนอุปกรณ์ที่ใช้แล้ว โปรดใช้ระบบส่งคืนและรับสินค้าหรือติดต่อ ร้านค้าปลีกที่ซื้อผลิตภัณฑ์ พากษาสามารถนำผลิตภัณฑ์นี้ไปรีไซเคิลอย่างปลอดภัย

HDMI®

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

ห้ามวางโทรศัพท์ในที่ที่ไม่มั่นคง โทรศัพท์อาจตกลงมา ทำให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้ การนาดเจ็บหลายอย่างโดยเฉพาะกับเด็กสามารถหลอกเลี้ยงได้โดยใช้มาตรการป้องกันดังๆ เช่น:

- ใช้ตู้หรือแท่นวางที่แนะนำโดยผู้ผลิตโทรศัพท์
- ใช้เฟอร์นิเจอร์ที่รองรับโทรศัพท์ได้อย่างปลอดภัยเท่านั้น
- ไม่วางโทรศัพท์บนเฟอร์นิเจอร์ทรงสูง (เช่น ตู้หรือตู้ห้องเสื้อ) โดยไม่ได้ยึด โทรศัพท์ควรไว้บนฐานรองรับที่เหมาะสม
- ไม่วางโทรศัพท์บนผ้าหรือวัสดุอื่นๆ ที่อยู่ระหว่างโทรศัพท์และเฟอร์นิเจอร์ที่รองรับ
- ให้ความรู้สึกเด็กเกี่ยวกับอันตรายของการปืนเข้าไปบนเฟอร์นิเจอร์เพื่อเข้าลึกลึกลงโทรศัพท์ หากโทรศัพท์ที่มีอยู่ข้างคุณถูกเก็บรักษา ควรใช้การพิจารณาแบบเดียวกันข้างต้น

สารบัญ

บทที่ 1 : การแนะนำผลิตภัณฑ์

ข้อควรระวัง	4
ผลิตภัณฑ์	4
แหล่งจ่ายไฟและปลั๊ก	4
สายไฟและสายสัญญาณ	4
สภาพแวดล้อม	4
ทำความสะอาด	4
แนวโน้มที่วินน์ดูม	4

บทที่ 2 : การใช้งานทั่วไป

การเปิดเครื่อง	5
การปิดเครื่อง	5
การเชื่อมต่อเครือข่าย	6

บทที่ 3 : รายละเอียดอื่นๆ

การแก้ไขปัญหา	7
การติดต่องานทีวี	7

ข้อควรระวัง

อ่านคำแนะนำนำ้หน้าก่อนใช้งาน
เก็บในตำแหน่งเดิมเท่านั้นเพื่อใช้ในอนาคต

ผลิตภัณฑ์

- อ่านป้ายกันไฟหรือปิดช่องระบายอากาศด้านหลังเครื่อง
- ห้ามดันวัดอุ่นได้ เท่านี้ไปในเครื่องนี้ผ่านช่องระบายอากาศ
เนื่องจากอุ่นสูงก่อภาวะอัคคีภัยสันสนเข็นส่วนที่เป็นไฟฟ้าทำให้เกิดการลัดวงจร ส่งผลให้เกิดไฟไหม้ไฟฟ้าซึ่ด
- อุบัติภัยอาจเปิดไฟหลังพรางอาจทำให้เกิดความเสียหายได้
ไม่ว่าส่วนใดๆ ในที่อยู่อาศัยจะต้องบังคับรุงได้ด้วยตัวเอง
โปรดใช้การบริการกับบุคลากรที่มีคุณสมบัติเหมาะสม
- ห้ามใช้น้ำร้อนเพลิงเผาที่หัวน้ำจ่อ อาจทำให้หัวน้ำจ่อหัก
- ห้ามใช้ไฟฟ้าเพลิงเผาที่หัวน้ำจ่อ อาจทำให้หัวน้ำจ่อหัก
- อย่าใช้แรงกดหัวไฟฟ้าแรงกดหัวน้ำจ่อ อาจทำให้หัวน้ำจ่อหัก

แหล่งจ่ายไฟและปลั๊ก

- ลดปั๊กภายในไฟเงื่อนไฟต่อไปนี้:
 - หากไม่ได้ใช้งานทิวีปีนจะลดเวลาในการใช้งาน
 - หากสายไฟหรือปลั๊กไฟเสียหาย
 - ทำความสะอาดนำ้เพื่อติดตั้งและปรับแต่งผลิตภัณฑ์การปรับส่วนที่ไม่ได้ถูกล่างในสูญเสียการใช้งานนี้
 - “ไม่เหมาะสมอาจส่งผลให้เกิดความเสียหายได้ หากเกิดเหตุการณ์นี้ขึ้น ให้ถอดปลั๊กและติดต่อเจ้าหน้าที่บริการ
 - หากมีการระเบกหรือมีการตกหล่นทำให้เครื่องเสียหาย

สายไฟและสายสัญญาณ

- ไม่ควรใช้สายไฟและสายสัญญาณถูกกดทับ
- ป้องกันสายไฟและสายสัญญาณถูกกดทับ
- อย่าใช้สายไฟหรือหัวเต้าเสียบไฟใช้ไฟมากเกินไป
- อย่าใช้สายไฟและสายสัญญาณถูกความชื้น

สภาพแวดล้อม

- ไม่ควรวางโทรศัพท์ไว้บนรถเข็น ชาตั้ง หรือโต๊ะที่ไม่มั่นคง
- วางโทรศัพท์บนที่รับของอาหารได้ดี
- ห้ามใช้โทรศัพท์ใกล้บริเวณที่อากาศดี ป้องกันจากความร้อนที่สูงเกินไป
- เก็บโทรศัพท์ให้ตั้งจากแสงแดดโดยตรง
- ห้ามใช้อุปกรณ์ใดบนน้ำหนาดหรือกระเด็นใส่และห้ามใส่สิ่งของที่มีของเหลวเข็น แจกันว่าไว้บนเครื่อง
- “ไม่ควรใช้งานโทรศัพท์ใกล้กับแหล่งที่มีฝุ่น

ทำความสะอาด

- บีบผุ่นเครื่องดูดหัวใจด้วยหัวน้ำมุ่งสะอาดหรือน้ำยาทำความสะอาด
- อย่าใช้แรงมากเกินไปกับหัวน้ำจ่อเมื่อทำความสะอาด
- ห้ามใช้น้ำหรือสารเคมีทำความสะอาดอื่นๆ ในการทำความสะอาดหัวน้ำจ่อเมื่อจากอาจทำให้ไฟฟ้าเสียหายได้หัวน้ำจ่อ

แนวทางที่วิบัติผนัง

คำเตือน: การดำเนินการนี้ต้องใช้คนสองคนเพื่อให้แน่ใจว่าการติดตั้งปลอดภัย ให้ปฎิบัติตามความปลอดภัยต่อไปนี้ หมายเหตุ:

- ตรวจสอบว่าที่วีและชุดติดผนังสามารถรับน้ำหนักที่วีได้หรือไม่
- ปฏิบัติตามคำแนะนำในการติดตั้งที่ให้มาพร้อมกับผนัง
- ที่วีต้องติดตั้งเครื่องบนผนังในแนวตั้ง
- ตรวจสอบให้แน่ใจว่าใช้สกรูที่เหมาะสมกับวัสดุท่านั้น
- ตรวจสอบให้แน่ใจว่าได้วางสายเคเบิลของโทรศัพท์ไว้ในลักษณะที่ไม่มีอันตรายจากการสะท้อนล้ม

คำแนะนำด้านความปลอดภัยอื่นๆ ทั้งหมดเกี่ยวกับโทรศัพท์สามารถใช้ได้ร่วมกัน

หมายเหตุ:

ภาพประกอบภายในเอกสารนี้มีไว้เพื่อการอ้างอิงเท่านั้น

การเปิดเครื่อง

พำนамคำแนะนำในหน้านี้เกี่ยวกับวิธีเปิดทีวีและรีโมทคอนโทรลก่อนที่จะไปปั้งหน้าต่อไปเพื่อเชิงบัญชีใช้การตั้งค่าซ่อนสัญญาณโดยขั้นตอนนี้ดังนี้.

1. ใส่แบตเตอรี่สองถ่านในรีโมทคอนโทรล

ข้อควรระวังในการใช้แบตเตอรี่:

- ใช้เฉพาะแบตเตอรี่ที่ระบุไว้เท่านั้น
- ตรวจสอบให้แน่ใจว่าถ่านใส่ไว้ที่ถูกต้อง
- อ่านค่าความแรงเดื่อไว้ใหม่และแบตเตอรี่ที่ใช้แล้ว
- ห้ามใช้แบตเตอรี่แบบบาร์จไฟได้
- อย่าใช้แบตเตอรี่โคนความจุมากเกินไป เช่น แสงแคนดี้ไฟ หรือสิ่งที่คล้ายกัน
- เพราอาจเป็นสาเหตุให้เกิดการร้าวไฟหรือระเบิดได้
- ถอดแบตเตอรี่ออกจากรีโมทคอนโทรลหากหาคุณไม่ได้ใช้งานเป็นเวลานาน

2. เชื่อมต่อสายไฟเข้ากับโทรศัพท์ทันที่อน จากนั้นจึงต่อเข้ากับเตารับ

(หมายเหตุ: หากเชื่อมต่อสายไฟเข้ากับโทรศัพท์โดยเครื่อมต่อคอมพิวเตอร์สายไฟเข้ากับเตารับหลัก)

- ทีวีของคุณควรเชื่อมต่อ กับแหล่งจ่ายไฟ AC

ทีวีควรเชื่อมต่อ กับแหล่งจ่ายไฟกระแสสลับ เท่านั้น ไม่ควรเชื่อมต่อไปปั้งแหล่งจ่ายไฟกระแสตรง หากปลั๊กหลุดออกจากสายไฟ สิ่งที่ไม่ควรทำเป็นอย่างยิ่ง คือการเสียบปลั๊กเข้ากับเตารับหลัก เนื่องจากมีความเสี่ยงที่จะเกิดไฟฟ้าช็อตได้

- หากทีวีของคุณเชื่อมต่อ กับแหล่งจ่ายไฟ DC

ทีวีของคุณควรเชื่อมต่อ กับแหล่งจ่ายไฟ DC เท่านั้น จะดีกว่าไม่เชื่อมต่อไปปั้งแหล่งจ่ายไฟกระแสสลับ หากปลั๊กหลุดออกจากสายเคเบิล อย่านำมายืดให้ขาดหรือหัก ให้ต่อเข้ากับเตารับหลัก เนื่องจากมีความเสี่ยง

ที่จะเกิดไฟฟ้าช็อตได้

3. เชื่อมต่อสายจากภายนอกเข้ากับด้านหลังทีวี

4. เมื่อทำการเปิดเครื่อง ทีวีจะเปิดตัวโดยอัตโนมัติหรืออัตโนมัติโดยทันที

(หมายเหตุ: สำหรับบางรุ่น การเปิดทีวีต้องกดปุ่ม Power

ถ้าไฟแสดงสถานะสว่างขึ้น ทีวีจะชี้อยู่ในโหมดสแตนบายค.กดปุ่ม บนรีโมทคอนโทรลหรือคปุ่มที่ทีวีเพื่อเปิดเครื่อง

การปิดเครื่อง

- หากต้องการให้เครื่องทีวีเข้าสู่โหมดสแตนบาย ให้กดปุ่ม บนรีโมทคอนโทรลของทีวี ทีวีจะยังคงเปิดอยู่แต่มีการสั่นเปลืองพลางงานต่อ

- หากต้องการปิดเครื่องทีวี ให้กดปุ่มล็อกไฟหลักออกจากเตารับหลัก

(หมายเหตุ: สำหรับบางรุ่น ให้กดปุ่มปิด/ปิด เพื่อปิดเครื่องทีวี

การเชื่อมต่อเครือข่าย

การเชื่อมต่อเครือข่ายในการเชื่อมต่ออินเทอร์เน็ต คุณต้องสมัครบริการอินเทอร์เน็ตจากผู้ให้บริการอินเทอร์เน็ต

คุณสามารถเชื่อมต่อ กับเครือข่ายในบ้านได้ 2 วิธี:

- ต่อสายไฟเบอร์ออฟฟิท RJ45 (LAN) ที่แผงด้านหลัง
- เชื่อมต่อแบบ “ไร้สาย” โดยใช้เครือข่ายไร้สายของคุณ


หมายเหตุ: ทั้งที่ชันนี้ไม่มีในบางรุ่น คำแนะนำด้านล่างเป็นเพียงวิธีปกติในการเชื่อมต่อทีวีไปยังเครือข่ายแบบใช้สายหรือไร้สาย วิธีการเชื่อมต่ออาจแตกต่างกันไปขึ้นอยู่กับเครือข่ายที่ต้องของคุณ การกำหนดค่า หากคุณมีข้อสงสัยเกี่ยวกับเครือข่ายในบ้านของคุณ โปรดดูที่ ISP (ผู้ให้บริการอินเทอร์เน็ต) ของคุณ

เชื่อมต่อ กับเครือข่ายแบบใช้สาย

ในการเชื่อมต่อ กับเครือข่ายแบบใช้สาย

1. ตรวจสอบให้แน่ใจว่า:

- คุณมีสายอีเธอร์เน็ตขาวพื้นที่จะเชื่อมต่อทีวีของคุณ
- เราเตอร์หรือไมค์เพิ่มต่ออินเทอร์เน็ตความเร็วสูง
- การเชื่อมต่ออินเทอร์เน็ตความเร็วสูง
- พور์ต Ethernet (LAN) ที่ด้านหลังของทีวี
- 2. เชื่อมต่อสายเก็บบล็อกอีเธอร์เน็ตของคุณเข้ากับเราเตอร์และเข้ากับ พอร์ต Ethernet ที่ด้านหลังของทีวี
- 3. ใช้การตั้งค่าเครือข่ายเพื่อกำหนดค่าทีวี

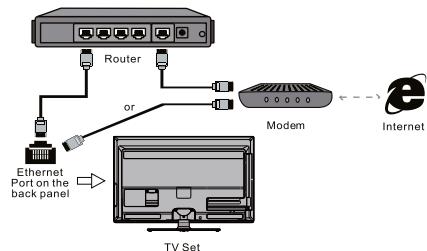


เชื่อมต่อ กับเครือข่ายไร้สาย

การเชื่อมต่อ กับเครือข่ายไร้สาย

1. ตรวจสอบให้แน่ใจว่าคุณมี:

- เราเตอร์กระจายสัญญาณไร้สายความเร็วสูง
 - การเชื่อมต่ออินเทอร์เน็ตความเร็วสูง
 - อะแดปเตอร์ USB แบบ wireless
 - 2. ชุดทีวีพร้อมโมดูล Wi-Fi3. ใช้มนูเครือข่ายเพื่อกำหนดค่าทีวี
- หมายเหตุ: บางรุ่นอาจมีโมดูลไร้สายภายในซึ่งไม่จำเป็นต้องใช้ อะแดปเตอร์ USB ไร้สาย บางอุปกรณ์ต่อรับไร้สายภายนอกไม่สามารถใช้ร่วมกับทีวีได้

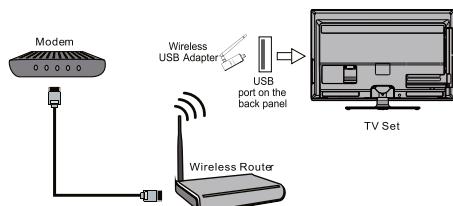

การแก้ไขปัญหา

ปัญหาส่วนใหญ่ที่คุณพบในทีวีอาจแก้ไขได้โดยคุ้มครองการแก้ไขปัญหาดังไปนี้

ไม่วิภาวนามีเสียง

- ตรวจสอบว่าไฟล์หรือบูตเกอร์ทำงานหรือไม่
- เดินทางไปถ้าคุณปรับจักรีไฟฟ้าอื่นที่ติดต่อรับ
- ตรวจสอบว่าทำงานหรือเปลี่ยน
- ปลดไฟฟ้าและติดต่อรับไม่ติด
- ตรวจสอบแหล่งเสียงภายใน

ไม่มีเสียง

- เปลี่ยนระบบเสียง
- ปรับความอิ่มตัวของเสียง
- ลองซื้อจิ้งจก อาจได้รับโปรแกรมมาตราคำ

รีโมทคอนโทรลไม่ทำงาน

- เปลี่ยนแบตเตอรี่
- คิดถึงแบบทดสอบไม่ถูกต้อง
- ไม่ได้ต่อไฟหลัก

ไม่วิภาวนาเสียงปกติ

- ปรับความสว่างและความคมชัด
- ความล้มเหลวในการออกอากาศจากเครื่อง

ภาพปกติไม่มีเสียง

- กดปุ่ม Vol+ เพื่อเพิ่มระดับเสียง
- ระยะเดินทางถูกตั้งค่าเป็นปีกเสียง กดปุ่มปีกเดินทางเพื่อตั้งค่าเดินทาง
- เปลี่ยนระบบเสียง
- อาจเกิดการรับสัญญาณของเสาอากาศ

สัญญาณเป็นคลื่นที่ไม่เป็นระเบียบและห้าม

มักเกิดจากการบานในพื้นที่ เช่น รอดน้ำ โถวไฟเดือไฟ และไฟฟ้าผ่านเสาอากาศเป็นผลของการบาน

หน้าจอไม่มีสัญญาณในโหมด VGA

ทีวีอาจไม่รู้จักความละเอียดที่ตั้งค่าไว้หรือ แนะนำให้เปลี่ยนเป็นความละเอียดที่ตั้งค่าไว้ตามมาตรฐานของระบบ Windows

เกิดอุบัติการณ์ของสัญญาณ
หากเสาอากาศอยู่บริเวณห่างไกลจากสถานีโทรทัศน์ อาจเกิดสัญญาณอ่อนช่องเป็นภาพมีร่องรอย บนความชัดเจนมากอาจจำเป็นต้องติดตั้งเสาอากาศพิเศษเพื่อปรับปรุงการรับสัญญาณ

- ปรับตำแหน่งและทิศทางเสาอากาศ
- ตรวจสอบการเชื่อมต่อของเสาอากาศ
- ปรับแต่งช่อง
- ลองเปลี่ยนช่องรับชม

หน้าจอเมือง

มีจุดดำหรือเส้นแนวนอนปรากฏขึ้น หรือรูปภาพล่องลอยซึ่งมักเกิดจากการบานในระบบหลอดนีออน สาวนไฟฟ้า หรือเครื่องใช้ไฟฟ้าอื่นๆ

ภาพชัด

ภาพชัดจากที่รับสัญญาณเข้ามาพร้อมกัน สามารถเปลี่ยนทิศทางหรือตำแหน่งของเสาอากาศทำให้การรับสัญญาณดีขึ้น

การบานของคลื่นความถี่วิทยุ


ทำให้เกิดระยะห่างของเสาอากาศทำให้การรับสัญญาณดีขึ้น และในบางกรณี การรูปภาพเสียหาย

ตัวทีวีชำรุด

- กดปุ่ม Power เพื่อปิดทีวี จากนั้นกดปุ่ม Power เพื่อตรวจสอบทีวีอีกครั้ง
- ดัดแปลงไฟ จากนั้นกดปุ่มปิด/ปิดเพื่อเรียกไฟทัศน์ หมายเหตุ หาก 2 วินี้ ไม่สามารถแก้ไขได้โปรดติดต่อศูนย์บริการหลังการขายเพื่อแก้ไขปัญหา

การติดตั้งขาทีวี

หันด้านขาทีวี ให้ตรงตำแหน่งจากนั้นบันสกรูเพื่อขัดกันทีวีหมายเหตุ: ภาพประกอบด้านล่างมีไว้เพื่อการอ้างอิงเท่านั้น และอาจแตกต่างจากจริงอย่างมีนัยสำคัญที่จะระวัง

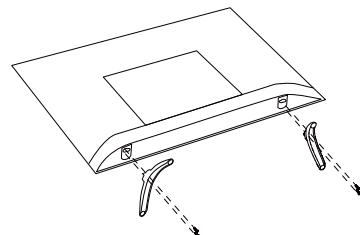

IMPORTANT SAFETY INSTRUCTIONS



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

WARNING

1. To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
2. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
3. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
4. Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
5. The mains plug/appliance couple is used as disconnect device, the disconnect device shall remain readily operable.
6. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
7. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
8. Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:
 - Using cabinets or stands recommended by manufacturer of the television set.
 - Only using furniture that can safely support the television set.
 - Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and television set to a suitable support.
 - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and located, the same considerations are above should be applied.
9. No naked flame sources, such as lighted candles, should be placed on the apparatus.
10. Keep a minimum distance of 5 cm around all edges of the display for sufficient ventilation.

Notes for battery disposal

The batteries used with this product contain chemicals that are harmful to the environment. To preserve our environment, dispose of used batteries according to your local laws or regulations. Do not dispose of batteries with normal household waste. For more information, please contact the local authority or your retailer where you purchased the product. All trademarks are the property of their respective owners and all rights are acknowledged.



This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.



To prevent the spread of fire, keep candles or other open flames away from this product at all times.



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The terms **HDMI**, **HDMI High-Definition Multimedia Interface**,
HDMI Trade dress and the **HDMI Logos** are trademarks or registered
trademarks of **HDMI Licensing Administrator, Inc.**

- * Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:
 - Using cabinets or stands recommended by manufacturer of the television set.
 - Only using furniture that can safely support the television set.
 - Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and television set to a suitable support.
 - Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - Educating children about the dangers of climbing on furniture to reach the television set or its controls. If your existing television set is being retained and located, the same considerations are above should be applied.

Table of Contents

Chapter 1: Introduction

Precautions	4
Product	4
Power and Plug	4
Power Cord and Signal Cable	4
Use Environment	4
Cleaning	4
Hanging the TV Set on the Wall	4

Chapter 2: General Operation

Switching on	5
Switching off	5
Network connection	6

Chapter 3: Other Information

Troubleshooting	7
Base Installation	7

Precautions

Read all of the instructions before operating the set.
Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
 - Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
 - If the set is subject to impact or has been dropped to have the cabinet damaged.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.

Hanging the TV Set on the Wall

Warning: This operation requires two people.

To ensure a safe installation, observe the following safety notes:

- Check that the wall can support the weight of the TV set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The TV set must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the TV set cables are placed so that there is not danger of tripping over them.

All other safety instructions about our TV sets are also applicable here.

Note:

Illustrations within this publication are provided for reference only.

Switching on

Follow the instructions on this page on how to switch on your TV set and the remote control before going on to following pages describing how to use the channel set-up procedure.

1. Insert two batteries in the remote control.

Precautions on using batteries:

- Only use the battery types specified.
- Make sure you use the correct polarity.
- Do not mix new and used batteries.
- Do not use rechargeable batteries.
- Do not expose batteries to excessive heat such as sunshine, fire or the like, throw them in a fire, recharge them or try to open them, as this could cause them to leak or explode.
- Remove the batteries from the remote control if you are not using it for a long period of time.

2. Connect the power cable **FIRST** to the television, **THEN** to a mains socket.

(Note: If the power cable is connected to the television, please only connect the power cable to the mains socket.)

- If your TV is connected to an AC supply
Your TV set should only be connected to an AC supply. It must not be connected to a DC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.
- If your TV is connected to a DC supply
Your TV set should only be connected to a DC supply. It must not be connected to a AC supply. If the plug is detached from the cable, do not, under any circumstances, connect it to a mains socket, as there is a risk of electric shock.

3. Connect an outside aerial to the **ANTENNA IN** socket at the back of the TV set.

4. When powered on, the TV will be turned on directly or be in standby.

Note: For some models, switch the TV on by pressing the power button.

If the power indicator lights up, the TV set is in standby mode. Press the \odot button on the remote control or on the TV set to turn on the TV.

Switching off

- To put the TV set into standby mode, press the \odot button on the remote control or on the TV, the TV set remains powered up, but with low energy consumption.
- To switch off the TV set, unplug the mains socket from the mains outlet.
Note: For some models, press the power button to switch off the TV set .

Network Connection

To access the internet, you must subscribe high speed broadband internet service from your internet service provider.

Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless or external wireless USB adapter and your home wireless network.

Note: This function is not available for certain models. Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP (Internet Service Provider).

Connecting to a wired network

To connect to a wired network:

1. Ensure you have:
 - An ethernet cable long enough to reach your TV
 - A router or modem with an available Ethernet port
 - A high-speed internet connection
 - An Ethernet (LAN) port on the back of the TV
2. Connect your ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the Network Settings to configure the TV.

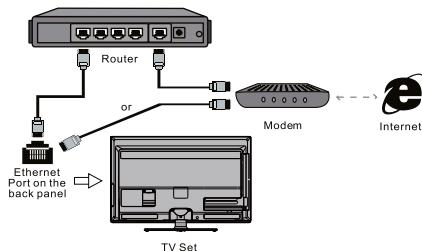


Connecting to a wireless network

To connect to a wireless network

1. Ensure you have:
 - A router broadcasting a high-speed wireless signal
 - A high-speed internet connection
 - A wireless USB Adapter (not need for a built-in wireless connection).
2. The TV set with Wi-Fi Module.
3. Use the Network menu to configure the TV.

Note: Some models may have internal wireless module, then the wireless USB adapter is unnecessary. Some external wireless adapters cannot be compatible with the TV.

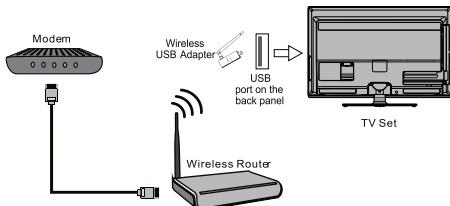

Troubleshooting

Most problems you encounter with your TV can be corrected by consulting the following troubleshooting list.

No picture, no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control does not work

1. Change the batteries.
2. Batteries are not installed correctly.
3. Main power is not connected.

No picture, normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture, no sound

1. Press the **Vol+** button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair dryers. Adjust the antenna to minimize the interference.

Blank screen in VGA mode

Perhaps the TV can not recognize the resolution set by the PC. Suggest to change to the best resolution or other standard resolutions of the Windows system.

Snowy dots and interference

If the antenna is located in the fringe area of a television signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor/outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the **Power** button to turn off TV, then press the **Power** button again to reset TV.
2. Unplug the power cord, then press the **Power** button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

To fix the double support base on the unit by screws, the installation is completed.

Note: Illustrations below are provided for reference only and may differ from actual product appearance.

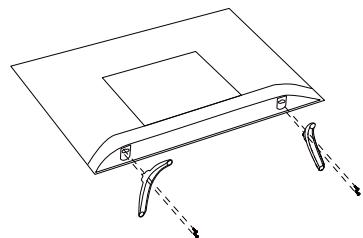

Aconatic

บริษัท โอริエ็นท์ ไทย จำกัด (มหาชน) HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161 -162 ซอยงามวงศ์วาน 47 (ชั้นที่ 2) โทร. 0-2954-5281 , 0-2580-6955

แนวทางที่สองห้องเบดลักซ์ Core Line. 02-591-9444 , 02-589-

กตัญญูฯ 10210



หมายเหตุ : นวัตกรรมอสูรลิทีคในการเปลี่ยนแปลงรายการของสมนาคัญและรายละเอียดลินค้าโดยมิต้องแจ้งให้ทราบล่วงหน้า