

Aconatic

คู่มือการใช้งาน

MOBILE SMART SCREEN

32SMU9000AN

คำแนะนำ


กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งาน

เก็บคู่มือนี้ไว้ใช้อ้างอิง

สารบัญ

รายการบรรจุภัณฑ์	1
คำเตือนด้านความปลอดภัยและข้อควรระวัง.....	2
คำแนะนำในการติดตั้ง.....	6
การปรับมุมและความสูง.....	9
การเชื่อมต่ออุปกรณ์ต่างๆ	10
การทำงานของปุ่มต่างๆ	10
การใช้งานแบตเตอรี่	11
การใช้งานเบื้องต้น	12
การเปิด/ปิดเครื่อง.....	12
การสั่งงานด้วยระบบสัมผัส	12
การเชื่อมต่อเครือข่ายไร้สาย.....	12
คำชี้แจงสำคัญเกี่ยวกับบริการเครือข่าย.....	13
การแก้ไขปัญหาเบื้องต้น.....	13
ข้อมูลจำเพาะ	14


รายการบรรจุภัณฑ์

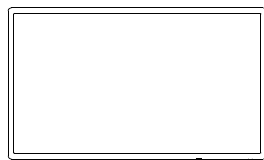


หน้าจอแสดงผล



ฝาหลัง




ฐานรอง

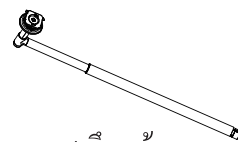


เสายึดหน้าจอ



คู่มือใช้งาน



สายไฟ



อะแดปเตอร์



สกรู

หากขาดชิ้นส่วนใด ๆ ในรายการข้างต้น โปรดติดต่อตัวแทนจำหน่าย

คำเตือนด้านความปลอดภัยและข้อควรระวัง

ผลิตภัณฑ์นี้มาพร้อมกับสล็อตที่สามารถเคลื่อนที่ไปได้อย่างอิสระ จึงสามารถใช้งานได้ในสภาพแวดล้อมต่างๆ เช่น ห้องนั่งเล่น ห้องนอน สำนักงาน และสถานที่ตั้งแคมป์ ผลิตภัณฑ์ผสานรวมเทคโนโลยีสัมผัสขั้นสูง มีคุณสมบัติในการตอบสนองที่รวดเร็ว ตำแหน่งที่แม่นยำ ปรับตัวเข้ากับสภาพแวดล้อมได้ดี

ปัจจัยด้านความปลอดภัยส่วนบุคคลได้รับการพิจารณาในระหว่างการออกแบบผลิตภัณฑ์ และทดสอบผลิตภัณฑ์อย่างเคร่งครัดก่อนส่งมอบ อย่างไรก็ตาม การติดตั้งและใช้งานอย่างไม่ถูกต้องอาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้ หรืออันตรายอื่นๆ เพื่อให้แน่ใจว่าจะใช้งานได้อย่างปลอดภัยและยืดอายุการใช้งานให้เกิดประสิทธิภาพสูงสุด โปรดอ่านและทำความเข้าใจคำแนะนำการใช้งานทั้งหมด และปฏิบัติตามข้อควรระวังด้านความปลอดภัยต่อไปนี้อย่างละเอียดถี่ถ้วน ก่อนใช้ผลิตภัณฑ์ และเก็บคู่มือนี้ไว้เพื่อใช้เป็นข้อมูลในอนาคต



เพื่อลดความเสี่ยงจากไฟฟ้าช็อต โปรดอย่าถอดแผ่นปิด (หรือแผ่นด้านหลัง) ออก ผลิตภัณฑ์ไม่มีส่วนประกอบใดๆ ที่ผู้ใช้สามารถซ่อมบำรุงเองได้ โปรดปรึกษากับเจ้าหน้าที่บริการที่มีคุณสมบัติเหมาะสม



ระวังอันตรายจากแรงดันไฟฟ้า หากไม่มีการป้องกันจนวนในตัวผลิตภัณฑ์ และความแรงของแรงดันไฟฟ้าเพียงพอที่จะก่อให้เกิดความเสี่ยงต่อการเกิดไฟฟ้าช็อต



คำเตือน	อาจส่งผลให้เกิดการเสียชีวิตหรือบาดเจ็บรุนแรง		แสดงถึงพฤติกรรมหรือการกระทำที่พึงหลีกเลี่ยงหรือห้ามกระทำโดยเด็ดขาด
ข้อควรระวัง	มีความเสี่ยงต่อการบาดเจ็บเล็กน้อยหรือเกิดความเสียหายต่อทรัพย์สิน		แสดงถึงขั้นตอนหรือวิธีการปฏิบัติที่จำเป็นต้องดำเนินการอย่างเคร่งครัด

- หากเกิดสถานการณ์ต่อไปนี้ ให้ปิดเครื่องทันที ถอดปลั๊กไฟออกจากเต้าเสียบ และติดต่อเจ้าหน้าที่เพื่อทำการซ่อมแซม
 - เครื่องมีเสียงหรือกลิ่นที่ผิดปกติหรือมีอาการผิดปกติอื่นๆ ที่ชัดเจน
 - สายไฟหรือปลั๊กไฟชำรุด
 - เครื่องได้รับความเสียหายจากการตก กระแทก หรือถูกกระแทก ของเหลวหรือสิ่งแปลกปลอมตกลงไปบนเครื่อง
- ในกรณีที่มีการรั่วไหลของก๊าซไวไฟ ห้ามเสียบ/ถอดปลั๊กไฟของเครื่องหรือเครื่องใช้ไฟฟ้าอื่นๆ แต่ให้ปิดวาล์วที่รั่วไหล และเปิดประตูและหน้าต่างทันที

คำเตือนด้านความปลอดภัยและข้อควรระวัง



คำเตือน

- ⊘ ● ผลิตภัณฑ์นี้สามารถใช้ได้เฉพาะแหล่งจ่ายไฟชนิดที่ระบุไว้เท่านั้น หากคุณไม่แน่ใจเกี่ยวกับประเภทของแหล่งจ่ายไฟที่ใช้งาน โปรดปรึกษาตัวแทนจำหน่าย
- ผลิตภัณฑ์นี้จะต้องเชื่อมต่อกับเต้าเสียบปลั๊กไฟสามขาเพื่อความปลอดภัย
- ห้ามแยกชิ้นส่วนอะแดปเตอร์หรือสายไฟ เพราะอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้
- โปรดวางอะแดปเตอร์อย่างระมัดระวังเพื่อหลีกเลี่ยงการตกหรือการกระแทก
- การกระแทกอาจทำให้ผลิตภัณฑ์เสียหายได้
- โปรดวางผลิตภัณฑ์บนพื้นเรียบ อย่าวางผลิตภัณฑ์ในตำแหน่งที่ไม่มั่นคงหรือเอียง มิฉะนั้น อาจเกิดการตกและเสียหายได้ ซึ่งอาจทำให้ได้รับบาดเจ็บหรือเสียชีวิตได้
- ควรใช้ขาตั้งและวิธีการติดตั้งตามที่แนะนำเสมอ
- ห้ามให้เด็กปีนขึ้นไปบนผลิตภัณฑ์ มิเช่นนั้น ผลิตภัณฑ์จะล้มลงมา และอาจได้รับบาดเจ็บได้
- เพื่อหลีกเลี่ยงความเสี่ยงในการกลืน ควรเก็บอุปกรณ์ขนาดเล็กให้พ้นจากการเข้าถึงของเด็ก
- ห้ามวางผ้าหรือวัสดุอื่นใดระหว่างผลิตภัณฑ์และพื้น
- ห้ามวางสิ่งของใดๆ ลงบนผลิตภัณฑ์
- ห้ามวางผลิตภัณฑ์
 1. ในสภาพแวดล้อมที่มีความชื้น ร้อน หนาว หรือมีฝุ่นละอองมากเกินไป หรือได้รับแสงแดด
 2. ในสภาพแวดล้อมที่มีการเก็บหรือใช้สารไวไฟหรือวัตถุระเบิด
 3. ในสภาพแวดล้อมที่มีก๊าซติดไฟหรือกัดกร่อน
 4. ภายในหรือใกล้ห้องน้ำ ห้องครัว หรือสภาพแวดล้อมการทำงานอื่นที่มีความชื้นสูง หรือมีแหล่งกำเนิดความร้อน ใยสังเคราะห์หรือควันน้ำมัน
- ห้ามใช้เต้ารับไฟฟ้าที่ชำรุดหรือไม่เหมาะสม ควรเสียบปลั๊กไฟกับเต้ารับไฟฟ้าให้สนิท
- หลีกเลี่ยงปลั๊กไฟและเต้ารับไฟฟ้าจากฝุ่นละออง
- อย่าทำให้สายไฟได้รับความเสียหาย
 1. ห้ามดัดแปลงสายไฟ
 2. ห้ามวางสิ่งของหนักทับสายไฟ
 3. เก็บสายไฟให้ห่างจากแหล่งความร้อน
 4. ห้ามดึงสายไฟขณะถอดปลั๊กไฟ โปรดจับที่ปลั๊กไฟแทนสายไฟ
- การใช้ปลั๊กไฟจำนวนมากเกินไปกับเต้ารับไฟเพียงเต้าเดียวอาจทำให้เกิดไฟไหม้เนื่องจากกินไฟมากเกินไป
- เพื่อหลีกเลี่ยงความเสี่ยงจากไฟฟ้าช็อตหรือไฟไหม้ โปรดเก็บเครื่องให้ห่างจากเปลวไฟ (เช่น เทียนที่จุดอยู่)

คำเตือนด้านความปลอดภัยและข้อควรระวัง



คำเตือน

- ห้ามเทหาชนะที่มีน้ำลงบนผลิตภัณฑ์ หรือให้หยดน้ำหรือกระเซ็นใส่ เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้
- เพื่อหลีกเลี่ยงความเสี่ยงต่อการเกิดไฟฟ้าลัดวงจร และไฟฟ้าช็อต อย่าใส่ของมีคม โลหะ หรือของเหลวเข้าไป หรือให้สิ่งเหล่านี้สัมผัสส่วระบายอากาศหรือขั้วต่อสัญญาณ
- ช่องระบายอากาศในตัวเครื่องได้รับการออกแบบมาเพื่อป้องกันไม่ให้ภายในร้อนเกินไปและช่วยให้ทำงานได้อย่างมีประสิทธิภาพในระยะยาว ควรวางเครื่องโดยไม่ปิดกั้นช่องระบายอากาศดังกล่าว ควรเว้นระยะห่างรอบ ๆ ผลิตภัณฑ์อย่างน้อย 4 นิ้วหรือ 10 ซม. เพื่อรับประกันการระบายอากาศที่ดี
- ● ฐานของผลิตภัณฑ์มีแบตเตอรี่ในตัว โปรดใช้งานด้วยความระมัดระวัง
 - หากแบตเตอรี่รั่ว ให้หยุดใช้ทันทีเพื่อหลีกเลี่ยงการสัมผัสกับผิวหนังและดวงตา การไม่ระมัดระวังอาจส่งผลให้สูญเสียการมองเห็นหรือได้รับบาดเจ็บจากการถูกไฟไหม้ หากส่วนใดส่วนหนึ่งของร่างกายของคุณสัมผัสกับของเหลวที่รั่วออกมาแล้วมีอาการผิดปกติ โปรดล้างด้วยน้ำสะอาดที่เพียงพอ และปรึกษาแพทย์
 - โปรดทิ้งแบตเตอรี่อย่างถูกต้อง การกำจัดแบตเตอรี่อย่างไม่ถูกต้องอาจมีความเสี่ยงต่อการระเบิดหรือไฟไหม้
 - อย่าให้ผลิตภัณฑ์ (โดยเฉพาะแบตเตอรี่) ถูกกับไฟฟ้า
 - ห้ามให้เครื่องถูกเปลวไฟ เครื่องทำความร้อนไฟฟ้า หรือแสงแดดโดยตรง มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต บาดเจ็บ หรือเกิดเพลิงไหม้ได้
 - ในการชาร์จแบตเตอรี่ อย่าใช้แหล่งจ่ายไฟหรือวงจรใดๆ เกินช่วงที่กำหนด มิฉะนั้นอาจทำให้แบตเตอรี่เสียหายหรือเกิดไฟไหม้ได้
 - ควรระมัดระวังในการใช้แบตเตอรี่เนื่องจากมีความเสี่ยงต่อการเกิดไฟไหม้หรือการระเบิดได้
 - ทำความสะอาดช่องเสียบที่ชาร์จด้วยผ้าเนื้อนุ่ม หากมีสิ่งสกปรกหรือสิ่งแปลกปลอมอื่น ๆ อยู่ แบตเตอรี่จะไม่สามารถชาร์จได้ตามปกติ มิฉะนั้นอาจเกิดไฟไหม้ได้
 - หากแบตเตอรี่หมดและไม่ได้ใช้งานเป็นเวลานาน อาจเป็นไปได้ว่าไม่สามารถชาร์จแบตเตอรี่ได้หรือแบตเตอรี่อาจมีอายุการใช้งานสั้นลง
 - ห้ามถอด ประกอบ หรือทำให้แบตเตอรี่เกิดไฟฟ้าลัดวงจร มิฉะนั้น อาจทำให้เกิดไฟฟ้าช็อต บาดเจ็บ หรือเกิดเพลิงไหม้ได้
 - ห้ามทิ้งแบตเตอรี่ลงในกองไฟหรือเตาเผา หรือห้ามบีบหรือตัดแบตเตอรี่โดยเด็ดขาด มิฉะนั้นอาจทำให้เกิดการระเบิดได้
 - ห้ามวางแบตเตอรี่ไว้ในสภาพแวดล้อมที่มีอุณหภูมิสูงเกินไป เพราะอาจทำให้แบตเตอรี่ระเบิดหรือเกิดการรั่วไหลของของเหลวหรือก๊าซที่ติดไฟได้
 - อย่าวางแบตเตอรี่ไว้ในที่ที่มีความกดอากาศต่ำมากเกินไป เพราะอาจทำให้แบตเตอรี่ระเบิดหรือของเหลวและก๊าซที่ติดไฟได้รั่วไหลได้

คำเตือนด้านความปลอดภัยและข้อควรระวัง



คำเตือน

-  เพื่อหลีกเลี่ยงความเสี่ยงจากการถูกไฟฟ้าช็อต อย่าสัมผัสปลั๊กไฟด้วยมือเปียก
-  ห้ามใช้งานผลิตภัณฑ์ขณะฝนตกหนักหรือฟ้าผ่า ควรถอดปลั๊กออกเพื่อป้องกันฟ้าผ่า
-  เพื่อหลีกเลี่ยงความเสี่ยงจากไฟฟ้าช็อตหรือไฟไหม้ ห้ามถอดประกอบผลิตภัณฑ์ด้วยวิธีการต่างๆ ควรส่งต่อการซ่อมแซมทั้งหมดไปยังช่างผู้เชี่ยวชาญ



ข้อควรระวัง

- โปรดจัดสายไฟและสายเคเบิลที่เชื่อมต่อกับเครื่องให้เรียบร้อยเพื่อหลีกเลี่ยงการสะดุด ค้าง หรือคว่ำ
- โปรดตรวจสอบให้แน่ใจว่าไม่มีเด็กเล่นผลิตภัณฑ์ เพื่อหลีกเลี่ยงการพลิกคว่ำหรือความเสียหายของผลิตภัณฑ์
- โปรดตรวจสอบให้แน่ใจว่าไม่มีสัตว์เลี้ยงเล่นผลิตภัณฑ์เพื่อหลีกเลี่ยงการพลิกคว่ำหรือความเสียหายของผลิตภัณฑ์
- ห้ามวางเครื่องบนพรมหรือเบาะ
- ควรดูแลมือ เท้า เส้นผม หรือเสื้อผ้าไม่ให้ติดอยู่ในล้อ
- ห้ามผลักหรือเตะตัวเครื่อง
- ห้ามเหยียบบนเครื่องเพื่อใช้เป็นที่พักเท้า
- ห้ามใช้วัตถุของแข็งหรือกดลงบนหน้าจอ
- ถอดปลั๊กไฟก่อนทำความสะอาดเครื่อง ทำความสะอาดด้วยผ้าเนื้อนุ่ม โดยไม่ใช่สารเคมีใดๆ ระวังอย่าให้สิ่งแปลกปลอมเข้าไปในเครื่อง การทำความสะอาดที่ไม่เหมาะสม (เช่น น้ำยาทำความสะอาด น้ำ) อาจทำให้เครื่องเสียหาย หรือทำให้ส่วนประกอบภายในเสียหาย (หากน้ำยาทำความสะอาดหรือน้ำไหลเข้าไปในเครื่อง) และทำให้จอภาพทำงานผิดปกติ
- ถอดสายเคเบิลทั้งหมดออกก่อนเปลี่ยนตำแหน่งของเครื่อง เพื่อหลีกเลี่ยงความเสี่ยงในการตก ควรเคลื่อนย้ายเครื่องอย่างระมัดระวัง
- เพื่อหลีกเลี่ยงความเสี่ยงจากน้ำค้างในเครื่อง อย่าใช้เครื่องทันทีหลังจากย้ายจากสถานที่ที่มีอุณหภูมิต่ำไปยังสถานที่ที่มีอุณหภูมิสูง
- โปรดอย่าวางเครื่องใกล้พื้นที่ที่มีสนามแม่เหล็กไฟฟ้าสูง มิฉะนั้น เครื่องอาจจะได้รับสัญญาณรบกวนจากคลื่นแม่เหล็กไฟฟ้าและได้รับความเสียหาย
- โปรดอย่าวางเครื่องไว้ด้านหลังเครื่องปรับอากาศ มิฉะนั้น อาจทำให้เกิดน้ำค้างบนแผงภายในเครื่อง และอาจทำให้เกิดความเสียหายได้
- หากของเหลวที่รั่วไหลกระเด็นใส่ผิวหน้าของคุณเมื่อหน้าจอ LCD แดก ให้ล้างผิวหน้าด้วยน้ำสะอาดเป็นเวลา 15 นาทีและไปพบแพทย์ จับที่มุมทั้งสี่และด้านล่างไว้ เมื่อต้องเคลื่อนย้ายเครื่องด้วยมือ

คำเตือนด้านความปลอดภัยและข้อควรระวัง



ข้อควรระวัง

- หากหน้าจอแสดงภาพเดิมซ้ำๆ หรือมีข้อความหรือไอคอนค้างอยู่บนภาพเคลื่อนไหวเป็นเวลานาน จะทำให้เกิด "ภาพติด" บนหน้าจอ ซึ่งอาจยังคงปรากฏอยู่แม้หลังจากปิดเครื่องไปแล้ว ความเสียหายลักษณะนี้ไม่อยู่ในเงื่อนไขการรับประกัน
- การดูหน้าจออย่างถูกวิธี
 1. โปรดรับชมภายใต้แสงที่เหมาะสม หากแสงไม่เพียงพอหรือการใช้งานเป็นเวลานานต่อเนื่อง อาจทำให้สายตาสายได้
 2. โปรดปรับระดับแสงเพื่อป้องกันการได้ยินจากระดับเสียงที่ดังเกินไป
- กรุณาปิดเครื่องและถอดปลั๊กไฟออกทุกครั้ง หากจะไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน
- ปลั๊กไฟหรือขั้วต่อของอุปกรณ์ที่ทำหน้าที่เป็นอุปกรณ์ตัดกระแสไฟ ควรใช้งานได้ง่าย
- เสียบปลั๊กไฟเข้ากับเต้ารับให้สนิท การเชื่อมต่อที่หลวมอาจทำให้เกิดประกายไฟหรือไฟไหม้ได้
- เพื่อให้การให้บริการที่ดียิ่งขึ้น ข้อมูลทางเทคนิคทั้งหมดที่ระบุไว้ในคู่มือนี้และบนกล่องบรรจุภัณฑ์ อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า หากมีความแตกต่างระหว่างข้อมูลในคู่มือกับการใช้งานจริง ให้ถือการใช้งานจริงเป็นหลัก

Android, Google Play and YouTube are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

คำแนะนำในการติดตั้ง


วิธีการติดตั้งฐานรองและเสายึดหน้าจอ

⚠ คำเตือน


- ขณะประกอบ กรุณาถือสกรูยึดด้วยดีให้แน่น เพราะหากตัวยึดหลุด อาจทำให้เกิดความเสียหายแก่เครื่อง หรือเกิดอุบัติเหตุได้
- เนื่องจากผลิตภัณฑ์มีน้ำหนักพอสมควร ควรใช้อย่างน้อย 2 คนในการแกะกล่องและติดตั้ง
- ระหว่างการประกอบ ห้ามใส่สารแปลกปลอมใดๆ (เช่น น้ำมัน หรือจาระบี) บนสกรู
- หลังจากติดตั้งเสร็จแล้ว ห้ามถอดตัวยึดสายเคเบิลและสกรูออก
- ขณะใช้งานตามปกติ ควรจับที่กึ่งกลางของตัวเสายึดจอ และยกขึ้นในแนวตรง ห้ามเอียงเครื่อง เพราะอาจทำให้ล้มลง ซึ่งอาจก่อให้เกิดความเสียหายต่อเครื่องหรือเป็นอันตรายต่อผู้ใช้ได้

คำแนะนำในการติดตั้ง


วิธีการติดตั้งเสายึดจอ

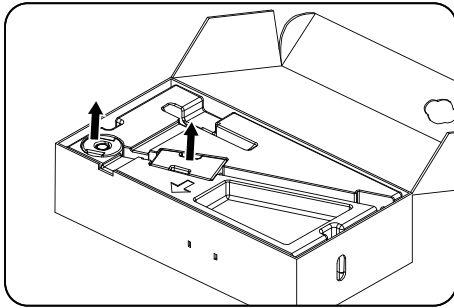


1. แกะกล่องและนำแผ่นรองกันกระแทกด้านหลังจอออก

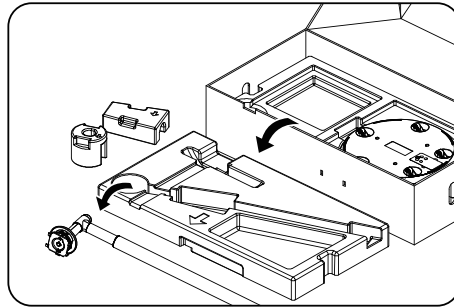


2. นำแผ่นกันกระแทกและเสายึดจอออก

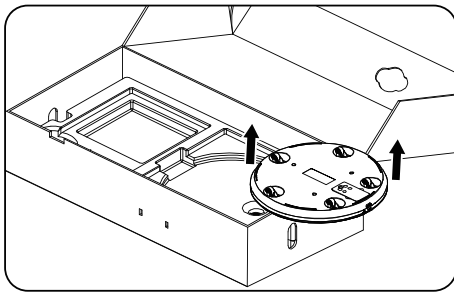


3. นำฐานรองจอออก

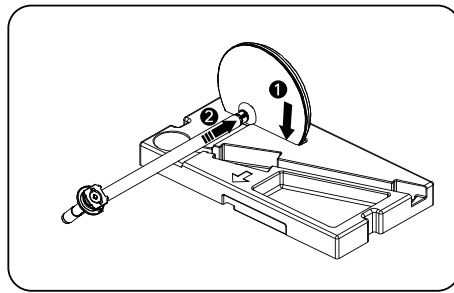

4. วางฐานลงในตำแหน่งช่องล็อกที่กำหนดไว้

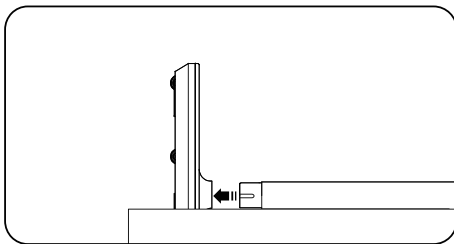


5. ติดตั้งเสาฐานบนฐาน โดยจัดตำแหน่งให้ตรงกับช่องล็อก

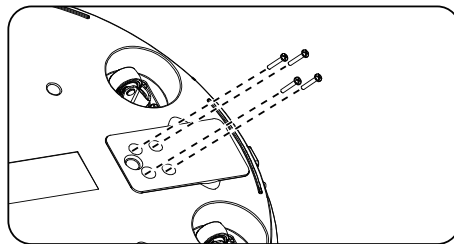


6. จัดตำแหน่งสกรูให้ตรงกับรูสกรู จากนั้นขันสกรูให้แน่น

คำแนะนำในการติดตั้ง


วิธีการติดตั้งสายยัดจอ

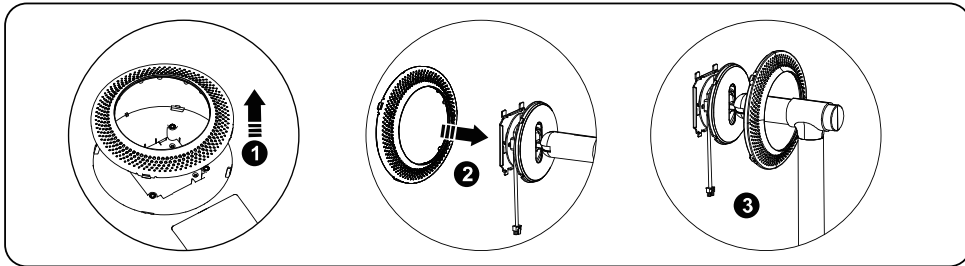


7. ก่อนนำหน้าจอออกจากบรรจุภัณฑ์ ให้ถอดฟาล์งออกก่อน จากนั้นค่อยใส่ฟาล์งผ่านสายยัดจอ

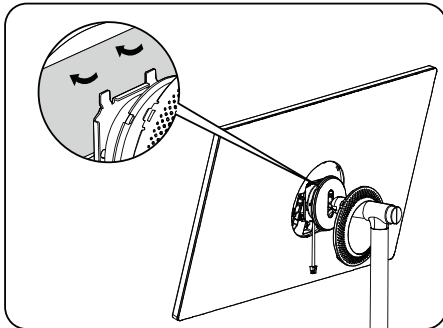


8. หันหน้าจอไปด้านหน้า แล้วติดตั้งโดยใส่หน้าจอให้ตรงกับจุดล็อก

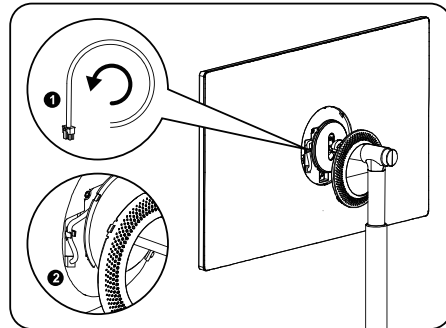

9. ม้วนสายไฟตามเข็มนาฬิกา แล้วเสียบในช่องเสียบสาย จากนั้นจัดสายไฟให้เรียบร้อย และใส่สายเข้าในช่องยัดสาย

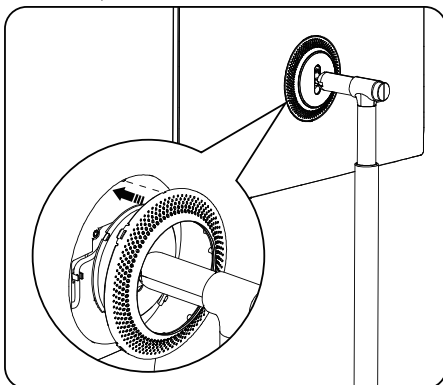

10. จัดตำแหน่งรูล็อกของฟาล์งให้ตรงกับหมุดล็อกที่อยู่ด้านหลังตัวจอ แล้วกดเบาๆ เพื่อให้ติดตั้งเสร็จสมบูรณ์

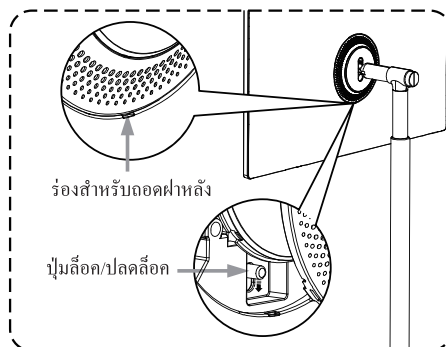

คำเตือน: ขณะถอดชิ้นส่วน กรุณากดปุ่มล็อกเพื่อถอดหน้าจอออกจากสายยัดจอ



การปรับมุมและความสูง

หลังจากติดตั้งผลิตภัณฑ์แล้ว คุณสามารถปรับความสูงและมุมของจอได้ เพื่อให้เหมาะสมกับการรับชม

ปรับความสูงของเสายึดจอ


หากต้องการปรับความสูง จำเป็นต้องถอดสกรูล็อกของตัวเสาก่อน

1. คลายสกรูล็อกออกจากเสายึดจอ และเก็บไว้เพื่อการใช้งานในภายหลัง
2. ใส่จุกปิดลงในรูสกรู
3. ขยับเสายึดจอเพื่อปรับความสูง

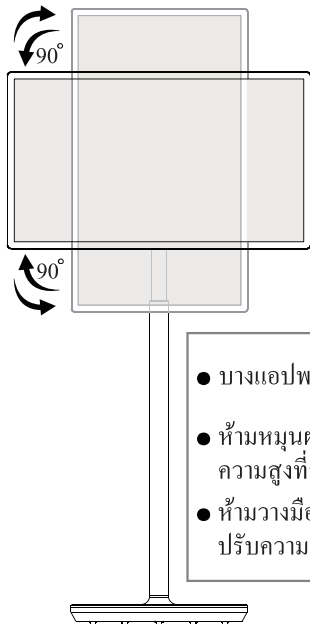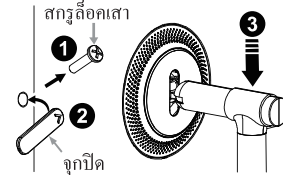


มุมก้ม : $20^{\circ} \pm 3^{\circ}$
มุมเงย : $20^{\circ} \pm 3^{\circ}$

สามารถปรับความสูงของเสายึดจอ
ได้ประมาณ 200 ± 10 mm

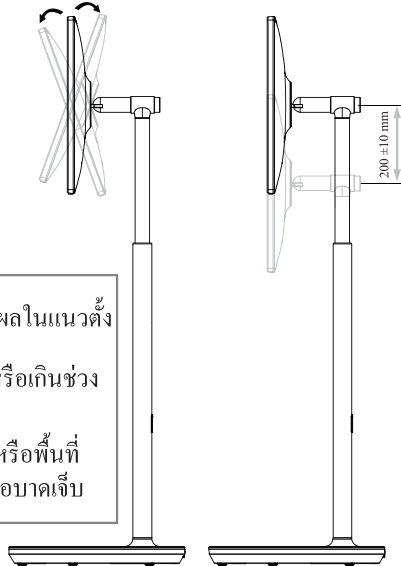


⚠️ ข้อควรระวัง

- บางแอปพลิเคชัน ไม่รองรับการแสดงผลในแนวตั้ง
- ห้ามหมุนผลิตภัณฑ์เกินมุมที่กำหนดหรือเกินช่วงความสูงที่สามารถปรับได้
- ห้ามวางมือหรือนิ้วไว้ในบริเวณขาตั้งหรือพื้นที่ปรับความสูง เพื่อป้องกันการหนีบหรือบาดเจ็บ

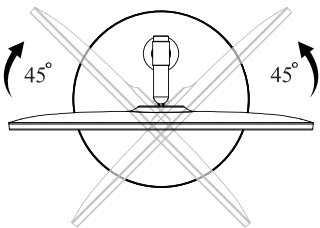

หมุน ซ้าย/ขวา: $45^{\circ} \pm 5^{\circ}$

ล็อกความสูงของเสายึดจอ

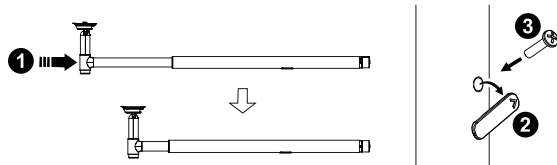

1. หลังจากถอดจอและฐานออกแล้ว ให้วางเสาในแนวนอน จากนั้นกดบริเวณด้านบนของเสาจนถึงตำแหน่งต่ำสุด
2. ดึงจุกซิลิโคนออก;
3. ขันสกรูล็อกเพื่อล็อกความสูงของตัวเสายึดจอ


การเชื่อมต่ออุปกรณ์ต่างๆ

 คำเตือน: กรุณาปิดเครื่องก่อนเชื่อมต่อหรือถอดสายเคเบิลใด ๆ

หมายเหตุ: ความละเอียดสูงสุดของ HDMI 2.0 คือ
3840 × 2160 @60 Hz

คำเตือน:

- หลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน กรุณาเชื่อมต่ออะแดปเตอร์ไฟฟ้าก่อน เพื่อให้สามารถเปิดเครื่องได้ตามปกติ
- กรุณาเชื่อมต่อผลิตภัณฑ์เข้ากับอะแดปเตอร์ไฟฟ้าก่อน จากนั้นจึงเสียบปลั๊กไฟของผลิตภัณฑ์กับเต้ารับไฟฟ้า

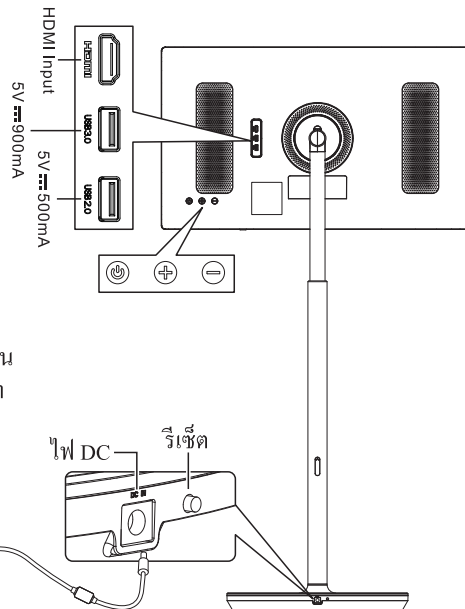

การทำงานของปุ่มต่างๆ

ปุ่มรีเซ็ต: บังคับปิดเครื่องแล้วรีเซ็ตารทอุปกรณ์ใหม่

Ⓢ ปุ่มเปิด/ปิดเครื่อง

- ในโหมดสแตนด์บาย กดปุ่ม Ⓢ เพื่อเปิดใช้งานผลิตภัณฑ์
- ขณะทำงานตามปกติ กดปุ่ม Ⓢ เพื่อเข้าสู่โหมดสแตนด์บาย
- จากเมนูบนหน้าจอ ให้กด "⚙️ > System > Gestures > Press & hold power button" จากนั้นเลือก "Power menu" หรือ "Digital assistant" เพื่อกำหนดฟังก์ชันการใช้งาน

⊕ VOL+: เพิ่มระดับเสียง

⊖ VOL-: ลดระดับเสียง

การใช้งานแบตเตอรี่

ฐานของผลิตภัณฑ์มีแบตเตอรี่อยู่ภายใน ซึ่งสามารถจ่ายแรงดันไฟฟ้าให้กับผลิตภัณฑ์ได้ระยะหนึ่งเมื่อไม่มีการเชื่อมต่อแหล่งจ่ายไฟอื่น ไฟแสดงสถานะแบตเตอรี่มี 3 สี (เขียว เหลือง และแดง) ซึ่งจะเปลี่ยนไปตามความจุแบตเตอรี่ที่เหลืออยู่ โดยไฟสีแดงจะสว่างขณะกำลังชาร์จ



หมายเหตุ:

- อายุการใช้งานของแบตเตอรี่และระยะเวลาการใช้งานหลังการชาร์จจะลดลงตามระยะเวลาการใช้งานของผลิตภัณฑ์
- แบตเตอรี่ไม่สามารถชาร์จได้ในสภาพแวดล้อมที่ไม่เหมาะสม
- ในโหมดสแตนด์บาย ความจุของแบตเตอรี่ที่เหลืออยู่จะลดลงตามธรรมชาติ
- เพื่อยืดอายุการใช้งานของแบตเตอรี่ แนะนำให้ชาร์จแบตเตอรี่หลังจากใช้งานไปสักระยะ
- การรักษาความจุแบตเตอรี่ไว้ที่ประมาณ 50% จะช่วยยืดอายุการใช้งานของแบตเตอรี่
- ระยะเวลาการใช้งานอาจแตกต่างกันขึ้นอยู่กับหลายปัจจัย เช่น อุปกรณ์ที่เชื่อมต่อ อุณหภูมิขณะใช้งาน ระยะเวลาการใช้งาน และการตั้งค่าของผู้ใช้ ดังนั้นระยะเวลาใช้งานจริงอาจแตกต่างกันไปตามสภาพการใช้งาน

การใช้งานเบื้องต้น

การเปิด/ปิดเครื่อง

เสียบสายไฟต่อกับแหล่งจ่ายไฟ ตัวเครื่องจะเริ่มทำงานโดยอัตโนมัติเมื่ออุปกรณ์เปิดอยู่ ให้ปิดหน้าจอลงจากขอบด้านบน เมนูจะปรากฏขึ้นและที่ > Power off จากนั้น อุปกรณ์จะเข้าสู่โหมดสแตนด์บาย

การสั่งงานด้วยระบบสัมผัส

- คลิก: แตะที่หน้าจอ
- คลิกล้าง: แตะที่หน้าจอค้างไว้นาน 2 วินาทีขึ้นไป
- ปิดหน้าจอ: ปิดหน้าจอขึ้น ลง ซ้าย หรือขวา
- ลาก: แตะค้างที่เป้าหมาย (เช่น แอปพลิเคชัน) ที่ต้องการย้าย จากนั้นปลดไปยังตำแหน่งที่ต้องการ
- ขยายหน้าจอ: ใช้นิ้วสองนิ้วแตะที่หน้าจอ จากนั้นแยกนิ้วออกหรือหุบนิ้วเข้าหากัน เพื่อซูมเข้าหรือซูมออก

หมายเหตุ: หลังจากหน้าจอดับ ให้แตะสองครั้งเพื่อเปิดหน้าจอ

ไปที่ "Settings > System > Gestures > System navigation" เพื่อเลือกโหมดการนำทางของระบบ

ข้อควรระวัง:

- การรองรับฟังก์ชันการซูมเข้าหรือซูมออกขึ้นอยู่กับแอปพลิเคชันที่ใช้งาน โปรดใช้งานตามระบบของแอป
- หลีกเลี่ยงการกดหน้าจอแรงๆ หากจำเป็น ให้ใช้นิ้วกดเบาๆ บริเวณที่ต้องการ หากสวมถุงมือหรือใช้เล็บสัมผัสหน้าจอ อาจทำให้ไม่สามารถใช้งานได้ตามปกติ
- หากหน้าจอเปียกหรือมีความชื้นมาก เซ็นเซอร์อาจไม่สามารถทำงานได้ตามปกติเมื่อต้องสัมผัสหน้าจอ

การเชื่อมต่อเครือข่ายไร้สาย

ไปที่ "การตั้งค่า > เครือข่ายและอินเทอร์เน็ต > อินเทอร์เน็ต" แล้วเปิด Wi-Fi ระบบจะเริ่มค้นหาและแสดงรายการเครือข่ายไร้สายที่มีสัญญาณอยู่ คลิกละเลือกเครือข่ายที่ต้องการเชื่อมต่อ โดยไอคอน จะแสดงว่าเครือข่ายนั้นมีการเข้ารหัสหรือไม่ หากมีการเข้ารหัส จะสามารถเชื่อมต่อได้ก็ต่อเมื่อคุณใส่รหัสผ่านที่ถูกต้องเท่านั้น

หมายเหตุ: สามารถตั้งค่าระบบเพิ่มเติมได้ในเมนู "การตั้งค่า" ตามความต้องการ

คำชี้แจงสำคัญเกี่ยวกับบริการเครือข่าย

เนื้อหาและบริการทั้งหมดที่ได้รับจากผลิตภัณฑ์นี้เป็นทรัพย์สินของบุคคลที่สาม และได้รับความคุ้มครองภายใต้กฎหมายลิขสิทธิ์ สิทธิบัตร เครื่องหมายการค้า และ/หรือกฎหมายทรัพย์สินทางปัญญาอื่น ๆ เนื้อหาและบริการเหล่านี้มีไว้สำหรับการใช้งานส่วนบุคคล ที่ไม่ใช่เชิงพาณิชย์เท่านั้น และไม่อนุญาตให้นำไปใช้ในลักษณะที่ไม่ได้รับอนุญาตจากเจ้าของเนื้อหาหรือผู้ให้บริการ

ในทุกกรณี ทางบริษัทจะไม่รับผิดชอบต่อความสูญเสียหรือความเสียหายใด ๆ ไม่ว่าจะโดยตรง ทางอ้อม หรือที่ไม่คาดคิด ซึ่งเกิดจาก การที่คุณหรือบุคคลที่สามเข้าถึงเนื้อหา บริการ ข้อมูล หรือซอฟต์แวร์ของบุคคลที่สามผ่านผลิตภัณฑ์นี้

บริการของบุคคลที่สามอาจมีการเปลี่ยนแปลง ยกเลิก หรือยุติลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า บริษัทของเราไม่มีข้อผูกพันหรือรับประกันว่าบริการหรือเนื้อหาบางอย่างจะสามารถเข้าถึงได้ตลอดเวลา ทางบริษัทจะไม่รับผิดชอบต่อการบริการใด ๆ ที่เกี่ยวข้องกับเนื้อหาและบริการเหล่านี้ และจะไม่รับผิดชอบในการให้บริการลูกค้า หากมีคำถามหรือต้องการขอรับบริการเกี่ยวกับเนื้อหาและบริการเหล่านี้ โปรดติดต่อผู้จำหน่ายหรือผู้ให้บริการโดยตรง

การแก้ไขปัญหาเบื้องต้น

อาการ	วิธีแก้ไข
หน้าจอไม่แสดงผล ไม่มีเสียง และไฟแสดงสถานะไม่ติด	1. ตรวจสอบว่าได้เปิดเครื่องแล้วหรือไม่ 2. ตรวจสอบว่าสายไฟได้เชื่อมต่อเรียบร้อยแล้วหรือไม่
เครื่องปิดเองโดยอัตโนมัติ	1. เป็นไปได้ว่าแบตเตอรี่อาจจะหมด กรุณาเสียบสายไฟ 2. กดปุ่มรีเซ็ตเพื่อเริ่มต้นการทำงานของเครื่องใหม่ 3. ตรวจสอบว่าฟังก์ชันปิดเครื่องอัตโนมัติทำงานอยู่หรือไม่ตามเวลาที่ตั้งไว้ 4. หากแบตเตอรี่ร้อนเกินไป เครื่องจะปิดตัวเองโดยอัตโนมัติเพื่อป้องกันความเสียหาย
ไม่มีสัญญาณเมื่อเชื่อมต่ออุปกรณ์ HDMI ภายนอก	1. กดปุ่มรีเซ็ตเพื่อเริ่มต้นการทำงานของเครื่องใหม่ 2. เชื่อมต่อสาย HDMI อีกครั้ง 3. ขณะเครื่องเปิดอยู่ ให้รีเซ็ตพอร์ต HDMI
ไม่มีเสียง	ปรับระดับเสียงให้อยู่ในระดับที่เหมาะสม
ไม่สามารถเชื่อมต่อเครือข่ายได้	1. ติดต่อผู้ดูแลระบบเครือข่ายเพื่อขอที่อยู่ IP และพารามิเตอร์อื่น ๆ ที่สามารถใช้งานได้ 2. ตรวจสอบว่าสายเครือข่ายเชื่อมต่ออย่างถูกต้องหรือไม่ 3. ปรีกษาผู้ให้บริการเครือข่ายอินเทอร์เน็ต

การแก้ไขปัญหาเบื้องต้น

อาการ	วิธีแก้ไข
เครือข่ายช้าขณะเล่นวิดีโอออนไลน์	1. กรุณาอัปเดตความเร็วแบนด์วิดท์ของเครือข่ายให้สูงขึ้น 2. กรุณาลองใช้แหล่งวิดีโอ (VOD) อื่น ๆ เพื่อเข้าถึงทรัพยากรที่ดีกว่า
เครื่องค้าง ชัดช้า หรือไม่สามารถใช้งานได้	กดปุ่มรีเซ็ตเพื่อเริ่มการทำงานของเครื่องใหม่

ข้อมูลจำเพาะ

32"

ความละเอียดหน้าจอ	3840×2160
ระบบปฏิบัติการ	Android 13
กำลังขับลำโพง	5W+5W
แหล่งจ่ายไฟ	19V $\approx$ 4.74A, 90W
แบตเตอรี่	11.1V / 9000mAh (99.9Wh)
อะแดปเตอร์	อินพุต: 100-240V~, 50/60Hz เอาต์พุต: 19V $\approx$ 4.74A
ข้อกำหนดด้านสิ่งแวดล้อม	อุณหภูมิขณะใช้งาน: 0°C ~ +40°C อุณหภูมิในการจัดเก็บ: -10°C ~ +50°C ความชื้นขณะใช้งาน: 0% ~ 65% ความชื้นขณะจัดเก็บ: 0% ~ 80% ระดับความสูงในการใช้งาน: $\leq$ 3000 m

ขนาดและน้ำหนัก

ขนาดโดยรวม (ไม่รวมฐาน)	734.41×55.22×428.86mm
ขนาดโดยรวม (รวมฐาน)	สูงสุด: 734.41×426.91×1332.63mm ต่ำสุด: 734.41×426.91×(1142.63±10)mm
น้ำหนักตัวเครื่อง	18.3kg


หมายเหตุ: โปรดดูข้อมูลผลิตภัณฑ์บนฉลากที่ติดอยู่บริเวณฐานของเครื่อง



Contents

Packing List	1
Safety Warnings and Precautions.....	2
Installation Instructions.....	6
Adjustment of Angle and Height.....	9
Connection of Peripherals.....	10
Functions of Keys.....	10
Use of Internal Battery.....	11
Basic Operations.....	12
Power-on/Standby.....	12
Touch Operation.....	12
Wireless Network Connection.....	12
Important Statement on Network Service.....	13
Troubleshooting.....	13
Specifications.....	14

PackingList

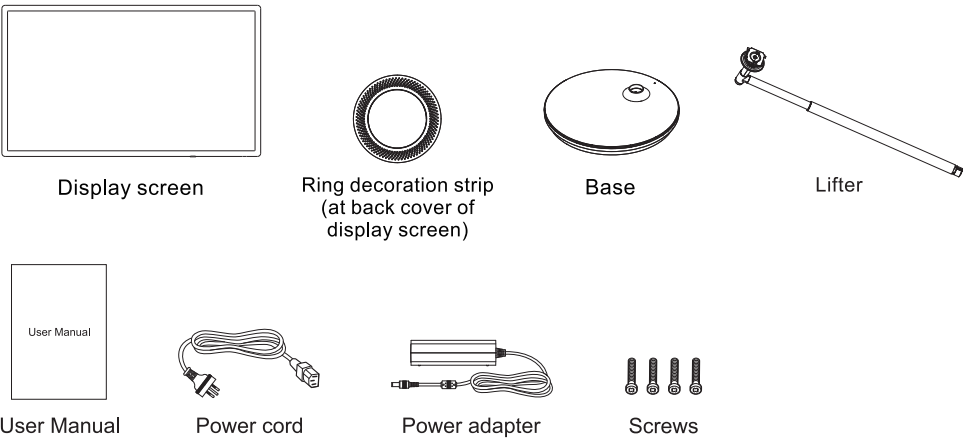

If any of the above items is missing, please contact your product dealer.

Safety Warnings and Precautions

Congratulations on your purchase of this product. This product is supplied with mecanum wheels which can move freely with you, so it can be used in various environments such as living room, bedroom, office and camping site. The product is integrated with the advanced touch technology, featuring fast response, precise positioning, strong environmental adaptability, accurate operation, etc.

Personal safety factors have been taken into account during design of the product, and the product has been tested strictly before delivery. However, improper installation and use could result in electric shock, fire or other hazards. To ensure its safe use, prolong its service life and bring its best performance into full play, please read and understand all operating instructions and nameplate indications and observe the following safety precautions carefully before using the product, and keep this manual properly for future reference.



Caution: In order to reduce the risk of electric shock, please do not remove the cover plate (or back plate). The product does not contain any user-serviceable components. Please consult qualified service personnel for service arrangement.

 There is “dangerous voltage” without insulation protection in the product housing, and the voltage strength is high enough to pose the risk of electric shock.

 Warning	May result in casualties		Indicate the behaviors that must be prohibited
 Caution	May result in personal injury or property losses		Indicate the operations that must be performed

- In any of the following situations, turn off the product immediately, disconnect the power plug from the power socket and contact authorized professional service personnel for repair.
 1. The product produces abnormal sound or smell or has any other obvious abnormality.
 2. The power cord or power plug is damaged or worn.
 3. The product gets damaged due to fall, strike or impact. Any liquid flows or foreign object falls into the product.
- In case of any flammable gas leakage, do not connect/disconnect the power plug of the product or any other electrical appliance but close the leaky valve and open the doors and windows immediately.

Safety Warnings and Precautions

Warning

- ⊘ ● This product can only use the power supply of the type indicated on its nameplate. If you are not sure about the type of power supply in use, please consult your product dealer or the local power supply bureau.
- This TV must be connected to a three pin socket outlet for safety.
- Do not disassemble the adapter or power cord, which may cause fire or electric shock.
- Please place the adapter carefully to avoid drop or impact.
- Impact could cause damage of the product.
- Please place the product on an even ground. Do not place the product at an unstable or inclined position; otherwise, drop and damage or even fire could be caused, further resulting in severe personal injury or death.
- Always use the stand and installation method recommended by the manufacturer.
- Never allow children to climb up the product; otherwise, the product will topple over, resulting in severe injury.
- To avoid the risk of swallow, keep small accessories beyond the reach of children.
- Do not put any fabric or other material between the product and the ground.
- Do not place any article on the product.
- Do not place the product:
 1. in an environment that is too damp, hot, cold or dusty or exposed to direct sunlight;
 2. in an environment where flammable or explosive substances are stored or used;
 3. in an environment where there are combustible or corrosive gases;
 4. in or near a bathroom, kitchen or other working environment with high humidity or with source of heat, steam or oil fume.
- Do not use any damaged or inappropriate power outlet. Keep a good contact between the power plug and the power outlet.
- Protect the power plug and the power outlet against dust and metal attachments.
- Do not damage the power cord:
 1. Do not remodel the power cord;
 2. Do not put heavy objects on the power cord;
 3. Keep the power cord away from heat sources;
 4. Do not pull the power cord when disconnecting the power plug. Please hold the power plug instead of the power cord.
- Paralleling too many power plugs to one power outlet may cause fire due to excessive power consumption.
- To avoid the risk of electric shock or fire, keep the product away from naked flames (like burning candles).

Safety Warnings and Precautions

Warning

- Do not put any container with water on the product, or water drops or splashes could cause electric shock or fire.
- To avoid the risk of short circuit, product damage and electric shock, do not put any sharp object, metal or liquid into or allow them to contact the ventilation holes or signal connectors.
- The ventilation holes in the housing are designed to protect the internal components against overheat and ensure their long-term reliable work. The product should be placed without blocking such ventilation holes. Always leave a space of at least 4" or 10cm around the product to guarantee good ventilation.
- ⊗ ● The base of the product contains an internal lithium battery. Please take care during use!
 - If the battery leaks, please stop using it immediately to avoid contact with your skin and eyes. Carelessness in this respect could result in loss of eyesight or burn injury. If any part of your body in contact with the leaking liquid shows any abnormality, please wash it with sufficient clean water, and also seek medical advices.
 - Please dispose of the battery correctly. Improper battery disposal could pose the risk of explosion or fire. The guideline for battery disposal varies with the country and region.
 - Do not expose the product (especially the lithium battery) to electricity.
 - Do not expose the product to flame, electric heater or direct sunlight. Otherwise, electric shock, injury or fire could be caused.
 - To charge the battery, do not use any power supply or circuit beyond the specified range. Otherwise, the risk of battery damage or fire will be caused.
 - Be careful when using the lithium battery since the risk of fire or explosion exists.
 - Clean the charging port using a soft cloth. If dirt or other foreign object exists on the charging port, the battery cannot be charged normally, or fire can be caused.
 - If the battery is fully discharged and left unused for a long period of time, it is possible that the battery cannot be charged or that the battery life is shortened.
 - Do not remove, disconnect, disassemble or short-circuit the battery. Otherwise, electric shock, injury or fire could be caused.
- Do not throw the battery into the fire or heating furnace, or mechanically extrude or cut the battery; otherwise, explosion could be caused.
- Do not place the battery in an environment with extremely high temperature that could result in battery explosion or leakage of flammable liquid or gas.
- Do not place the battery under extremely low atmospheric pressure that could result in battery explosion or leakage of flammable liquid and gas.

Safety Warnings and Precautions

Warning

-  To avoid the risk of electric shock, do not touch the power plug with wet hands.
-  Do not use the product during rainstorm or lightning. Disconnect the power plug immediately to protect it against lightning stroke.
-  To avoid the risk of electric shock or fire, do not disassemble the product in any way. All repairs should be referred to professional technicians.

Caution

- Please tidy the wires and cables connected to the product to avoid trip-over, pull or grab.
- Please ensure that no juveniles play, disport, chase each other, run or jump around the product, or push, drag, touch or impact the product in any way, thus to avoid topple-over or damage of the product.
- Please ensure that no pets play, disport, run or jump around the product, or push, drag, touch or impact the product in any way, thus to avoid topple-over or damage of the product.
- Do not place the product on a carpet or cushion.
- Take care to protect your hands, feet, hair or clothes from getting stuck in the wheels.
- Do not push or kick the product.
- Do not ride on the product as it was a foot rest.
- Do not use hard objects to rub or strike the screen or twist or press it forcibly.
- Disconnect the power plug before cleaning the product. Clean it with a soft cloth without using any industrial chemical. Take care to prevent the ingress of any foreign object into the product. Improper cleaning (e.g., cleaning solution, water) may cause damage to the appearance, erase the printed information or damage the internal components (if the cleaning solution or water flows into the product) and cause display failure.
- Disconnect all cables before changing the position of the product. To avoid the risk of fall, move the product slowly.
- To avoid the risk of dew and fault, do not use the product immediately after moving it from a low-temperature place to a high-temperature place.
- Please do not place the product near any strong electromagnetic field; otherwise, it will be subjected to electromagnetic interference and get damaged.
- Please do not place the product directly facing an air conditioner; otherwise, dew can be formed on the panel inside the product, further resulting in fault.
- If the leakage splashes onto your skin when the LCD screen is broken, rinse the skin with clean water for 15min and seek medical advices. Grab the four corners and hold the bottom side rather than exert pressure on the front panel when moving the product with hands.

Safety Warnings and Precautions

Caution

- If the product keeps displaying one image or there is any still text or icon in a moving image during a long time, an “afterimage” will stay on the screen and last long after the product is turned off. Such fault is not covered by the warranty.
- Watch the screen in a healthy way:
 1. Please watch the screen under proper light condition; insufficient light or long continuous use may damage your vision.
 2. Please adjust the volume to protect your hearing from being impaired by excessively high volume.
- Turn off the product and disconnect the power plug before leaving the product unused for a long time for any reason.
- The power plug or appliance coupler acting as the make-and-break device should be easy to operate.
- Insert the power plug into the power outlet reliably. A loose connection may cause sparks or fire.
- To better provide services, all technical specifications contained in this manual and on the carton are subject to change without further notice. If there is any difference between this manual and any actual operation, such actual operation shall prevail.

Android, Google Play and YouTube are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Installation Instructions


Installation of Base and Lifter

Warning


- During assembly, please lock the mount fixing screws since drop of the mount could result in product damage or personal injury.
- Since the product is somewhat heavy, the cooperation of at least two persons is needed during unpacking and installation.
- When assembling the product, do not apply any foreign matter (e.g., oil, lubricating oil) on the screws.
- After installation of the product, do not remove the cable holder and screws.
- During daily use, please grab the middle of the lifter and ensure that the product moves in upright position. Do not tilt the product since the topple-over risk will be caused, further resulting in fault of the product or personal injury.

Installation Instructions


Instructions for Installation of Lifter

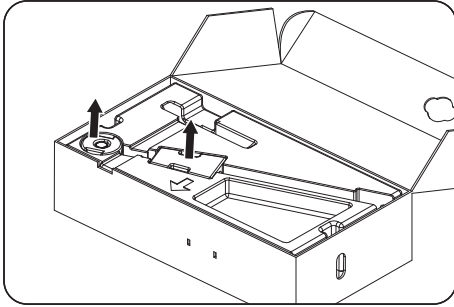


1. Unpack and take out the top protective pad.

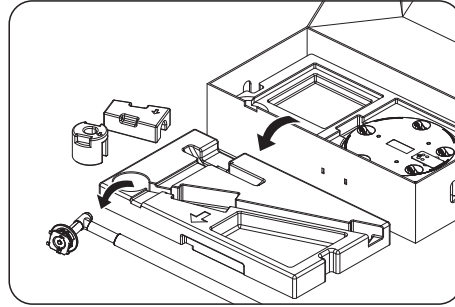


2. Take out the cushion pad and the lifter.

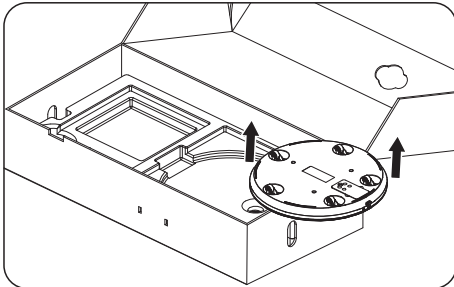


3. Take out the base.

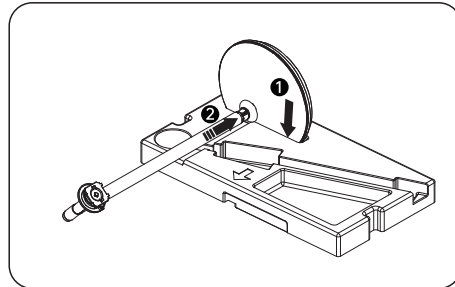

4. Place the base in the slot.

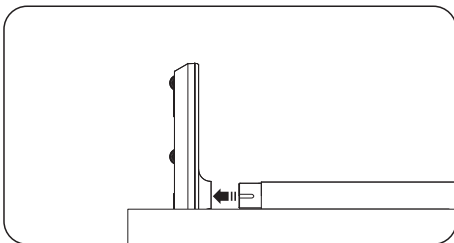


5. Install the lifter to the base by aligning it with the slot position.

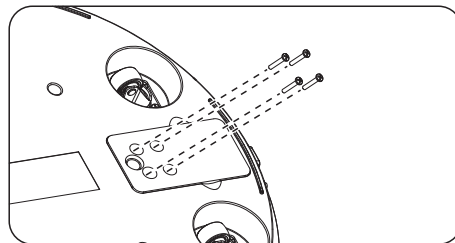





6. Align the screws with the screw holes, and then fasten the screws.

Installation Instructions

Instructions for Installation of Display Screen

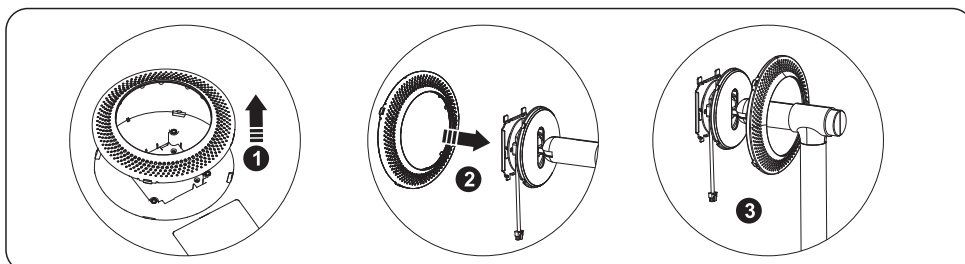

7. Before taking the display screen out of the package, first take out the trim ring at the back; then put the trim ring through the lifter.

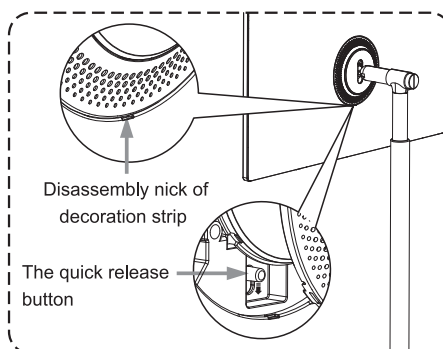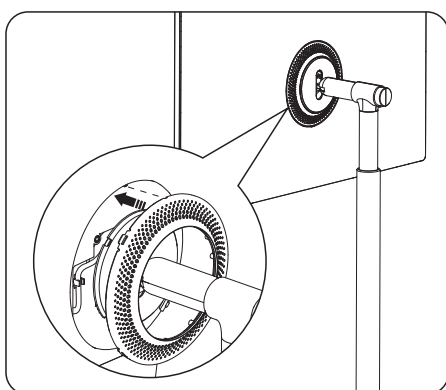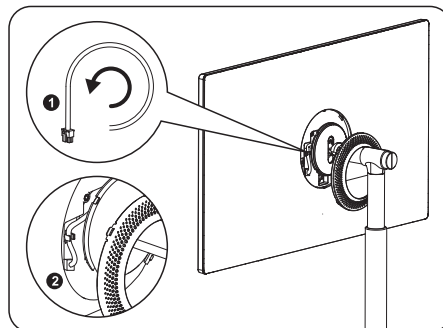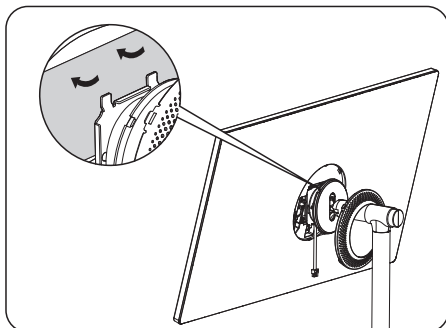

Attention: During disassembly, it is needed to press the quick release button to remove the display screen from the lifter.



Adjustment of Angle and Height

After the product is installed, you can adjust its height and angle to get a comfortable watching experience.

Release the lifter height locking


If it is the first time to use the lifting function, it is required to release the self-locking status of the lifter.

1. Unscrew the self-locking screw from the lifter and place it properly for future re-use;
2. Fit the silicone plug into the screw hole;
3. Press the lifter to unlock the height.

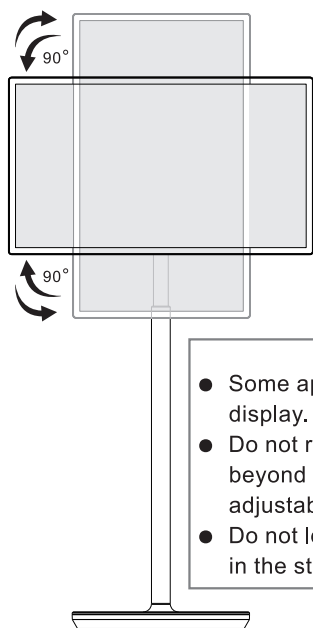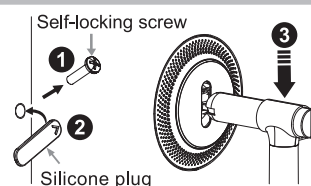


Forward angle: $20 \pm 3^\circ$
Backward angle: $20 \pm 3^\circ$

The height of the lifter is adjustable within $200 \pm 10\text{mm}$

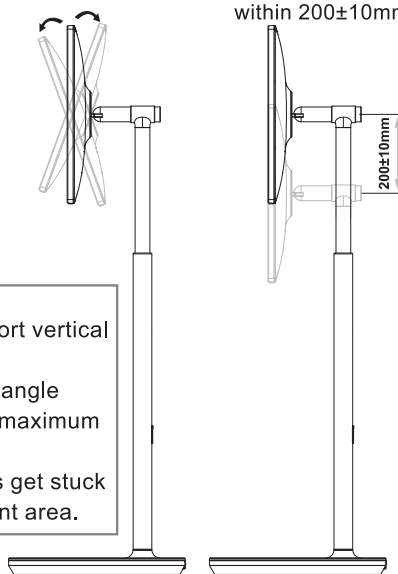


Caution

- Some applications do not support vertical display.
- Do not rotate the product at an angle beyond the limit or beyond the maximum adjustable range of height.
- Do not let your hands or fingers get stuck in the stand or height adjustment area.

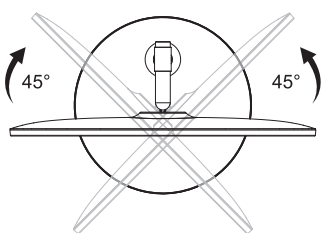

Rotate left/right: $45^\circ \pm 5^\circ$

Lock the height of lifter

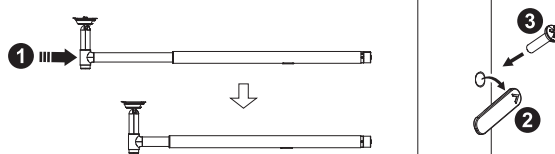

1. After removing the display screen and base, horizontally place the lifter, and exert proper force to press the top of lifter to the lowest position;
2. Pull out the upper part of silicone plug;
3. Screw the self-locking screw to lock the lifter height.


Connection of Peripherals

Warning: Cut off power supply before connecting/disconnecting any cable.

Note: The maximum resolution of HDMI 2.0 is 3840x2160@60Hz.

Attention:

- After the product has been powered off for a long time, please connect the power adapter first so that the product can be turned on normally.
- Please connect the product to the power adapter, then insert the power plug of the product to the power outlet.

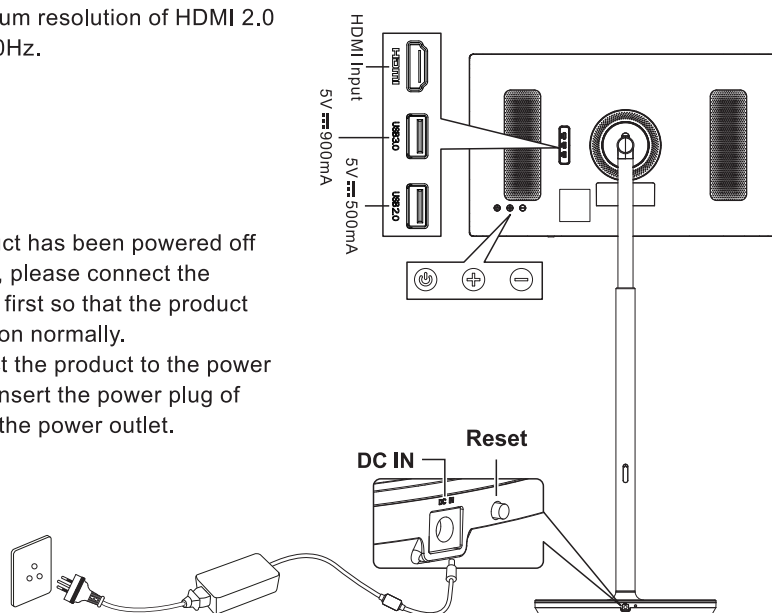

Functions of Keys

Reset: Force a shutdown and then restart the device.

⏻ Power button


- In standby/screen-off mode, press ⏻ button to turn on the product.
- During normal working, press ⏻ button to enter screen-off state;
- From the drop-down menu on screen, click "⚙️ > System > Gestures > Press & hold power button", then click "Power menu" or "Digital assistant" to set functions of "Press & hold power button" as needed.

⏮ VOL+: Increase the volume.

⏭ VOL-: Decrease the volume.

Use of Internal Battery

The base of the product contains an internal battery which can supply voltage to the product for some time when no other power supply is connected. The battery indicator light has three different colors (green, yellow and red) which change with the remaining battery capacity. The red light is on during charging or when charging is necessary.

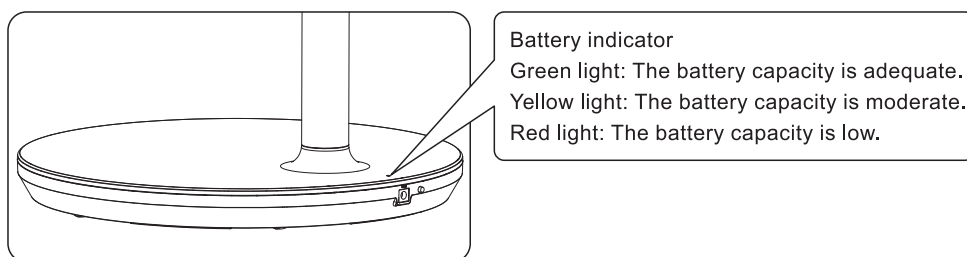

Attention:

- The battery life and service time after charging reduces in proportion to the service period of the product.
- The battery cannot be charged in extreme environments.
- In standby mode, the remaining battery capacity reduces naturally.
- To prolong the battery life, it is suggested to charge the battery after use for some time instead of keeping the battery fully charged.
- Maintaining the battery capacity at 50% helps to prolong the battery life.
- The service time may vary with various factors, such as connected devices, operating temperature, service period and user settings. Therefore, the actual time may vary with the service condition.

Basic Operations

Power-on/Standby

Connect the power cord. This product starts up automatically. When the device is turned on, swipe down from the top edge, and drop-down menu appears. Click “ >  **Power off**”, then the product enters standby state.

Touch Operation

- Click: Tap on the screen.
- Click and hold: Tap on the screen for 2s or longer.
- Swipe: Swipe on the screen up, down, left and right.
- Drag: Tap and hold the target (e.g., an application) to be moved, then swipe to the desired position.
- Open/close: Place two fingers on the screen, then open or close these fingers to zoom in or out the content displayed on the screen.

Note: After the screen is off, double click to make the screen on.

Click “**Settings > System > Gestures > System navigation**” to select the system navigation mode.

Attention:

- Whether the displayed content supports the zoom in/out function is related to the application. Please operate according to the actual condition.
- Avoid pressing the screen with force; where necessary, simply use your fingertip to tap on the desired item. If you wear gloves or use your fingernail to touch the screen, it is possible that the product cannot respond and be operated normally.
- If the screen is a little wet or too damp, the sensor cannot work normally when touching it.

Wireless Network Connection

Click “**Settings > Network & internet > Internet**”, and turn on Wi-Fi; the system will start searching and list the wireless network signals available. Click the network to be connected. The  icon beside a network indicates the network is encrypted; the product can be connected to the network only after you enter the correct password.

Remark: More system settings can be done under “**Settings**” as per need.

Important Statement on Network Service

All contents and services obtained from the product are owned by third parties and protected by copyright, patent, trademark and/or other intellectual property laws. These contents and services are only for your personal non-commercial purposes, which shall not be used in a way not authorized by the content owner or service provider.

Under no circumstance shall our Company be liable for any direct, indirect or unexpected losses or damages arising from your or any third party's access to any contents or services or any information or third-party software through this product.

Third-party services may be subject to change, removal or discontinuation without prior notice. Our Company does not represent or warrant that some services or contents will remain accessible at any time.

Our Company will not be responsible for any service related to these contents and services, or assume any liability for customer service. For any question or service request about these contents and services, please directly contact your content or service provider.

Troubleshooting

Symptom	Solution
The screen does not display anything; there is no sound, and the indicator does not turn on.	1. Check whether the product has been turned on. 2. Check whether the power cord has been connected.
The product shuts down suddenly.	1. It is possible that the internal battery runs out; please connect the power cord. 2. Press the reset button to restart this product. 3. Check whether the auto shutdown function is activated at the set time point. 4. If the battery overheats, the product will shut down automatically for self-protection.
There is no signal when an external HDMI device is connected.	1. Press the reset button to restart this product. 2. Reconnect the HDMI cable. 3. When the product is on, restart the HDMI device.
There is no sound.	Adjust the volume to a proper level.
Network cannot be connected	1. Ask the network administrator for the available network IP addresses and other parameters. 2. Check whether the network cable is connected normally. 3. Consult the network service provider.

Troubleshooting

Symptom	Solution
The network is very slow when playing videos online	1. Please upgrade your network bandwidth to a higher one. 2. Please try other VOD addresses to get better resources.
The product gets stuck, crashes or cannot be operated.	Press the reset button to restart this product.

Specifications

32"

Resolution	3840×2160
Built-in system	Powered by Android™ 13
Speaker output power	5W+5W
Power supply	19V $\overline{=}$ 4.74A, 90W
Rechargeable lithium battery	11.1V / 9000mAh (99.9Wh)
Power adapter	Input: 100-240V~, 50/60Hz Output: 19V $\overline{=}$ 4.74A
Environmental requirements	Operating temperature: 0°C ~ +40°C Storage temperature: -10°C ~ +50°C Operating humidity: 0% ~ 65%, non-condensing Storage humidity: 0% ~ 80%, non-condensing Operating altitude: ≤ 3000 m

Dimension (L×W×H) and Weight

Overall dimension (without base)	734.41×55.22×428.86mm
Overall dimension (with base)	Max.: 734.41×426.91×1332.63mm Min.: 734.41×426.91×(1142.63±10)mm
Net weight of device	18.3kg

Remark: View the product information on the label affixed to the base of the product.

Aconatic

บริษัท ไฮฟ อเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161-162 ซอยจวนจวน47(จีนเซก2) โทร. 0-2954-5281 , 0-2580-6955
แขวงทุ่งคอกองท้อง เขตหลักสี่ Core Line 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210



หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของสินค้าและรายละเอียดสินค้าโดยมิต้องแจ้งให้ทราบล่วงหน้า