

Aconatic

คู่มือการใช้งาน LED TV รุ่น 75US900AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์
เก็บคู่มือนี้ไว้ใช้อ้างอิง

คำแนะนำ

1. อ่านคู่มือการใช้งานนี้ก่อนเริ่มการตั้งค่า
2. จากนั้นปฏิบัติตามคำแนะนำอย่างเคร่งครัด และปฏิบัติตามคำเตือนทั้งหมด
3. ห้ามถอดฝาครอบด้านหลังทีวีหรือปิดกั้นช่องระบายอากาศของทีวี
4. ห้ามใช้ทีวีใกล้แหล่งน้ำหรือแหล่งความร้อน
5. ห้ามบีบหรือตัดสายไฟ

หมายเหตุ:

ผลิตภัณฑ์และภาพประกอบในคู่มือผู้ใช้เล่มนี้มีไว้เพื่ออธิบายเท่านั้น และอาจแตกต่างกันไปขึ้นอยู่กับรุ่นของสินค้า

คำเตือน


อย่าวางทีวีในตำแหน่งที่ไม่มั่นคง เพราะทีวีอาจตกลงมาจนทำให้ได้รับบาดเจ็บสาหัสหรือเสียชีวิตได้ การบาดเจ็บหลายอย่าง โดยเฉพาะเด็ก สามารถหลีกเลี่ยงได้ด้วยการป้องกันเบื้องต้นได้ เช่น:

- การใช้ตู้หรือขาตั้งตามที่คุณผลิตทีวีแนะนำ
 - ใช้เฉพาะเฟอร์นิเจอร์ที่สามารถรองรับทีวีได้อย่างปลอดภัย
 - ตรวจสอบให้แน่ใจว่าทีวีไม่ได้ยื่นเกินขอบเฟอร์นิเจอร์ที่รองรับ
 - อย่าวางทีวีบนเฟอร์นิเจอร์สูง (เช่น ตู้หรือชั้นหนังสือ) โดยไม่ยึดทั้งเฟอร์นิเจอร์และทีวีไว้กับสิ่งรองรับที่เหมาะสม
 - ไม่วางทีวีบนผ้าหรือวัสดุอื่น ๆ ที่อาจตั้งอยู่ระหว่างทีวีและเฟอร์นิเจอร์
 - การให้ความรู้แก่เด็กๆ เกี่ยวกับอันตรายจากการปีนขึ้นไปบนเฟอร์นิเจอร์เพื่อเอื้อมถึงทีวี
- หากคุณกำลังจะเก็บรักษาและย้ายทีวีเครื่องเดิมของคุณ ควรพิจารณาสิ่งเดียวกันกับข้างต้น

ปลั๊กไฟหรือตัวเชื่อมต่อเครื่องใช้ไฟฟ้าใช้เป็นอุปกรณ์ตัดการเชื่อมต่อ โดยอุปกรณ์ตัดการเชื่อมต่อจะต้องสามารถใช้งานได้ทันที

ข้อควรระวังการนำสินค้าออกจากกล่องสินค้า


1. โปรดดูคำแนะนำในการเปิดกล่องสินค้าที่ด้านบนหรือด้านล่างของกล่อง
2. ควรระวังอย่าจับหรือกด หน้าจอทีวี
3. ตรวจสอบอุปกรณ์เสริมที่ให้มาภายในกล่องและนำออกจากกล่องอย่างระมัดระวัง

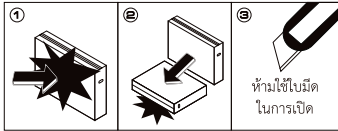

สำหรับ ทีวี 32" - 58"



สำหรับ ทีวี 65" - 75"

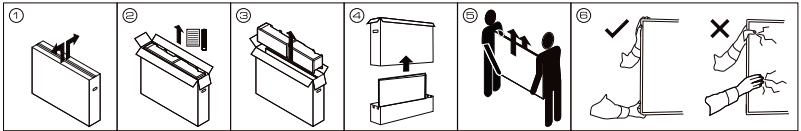


อุปกรณ์ที่จำเป็นสำหรับการติดตั้ง

- ไขควงปากแฉก
- สายเชื่อมต่ออินเทอร์เน็ต (จำเป็นสำหรับการสตรีมสมาร์ททีวี)
- เราเตอร์ (จำเป็นสำหรับการสตรีมสมาร์ททีวี)
- คอมพิวเตอร์ แท็บเล็ต หรือสมาร์ทโฟน (จำเป็นสำหรับการตั้งค่าสมาร์ททีวี)


อุปกรณ์ภายในกล่อง




ทีวี x 1 เครื่อง

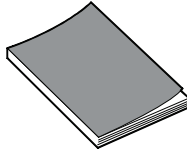

คู่มือการใช้งาน x 1 เล่ม




แบตเตอรี่ AA
สำหรับรีโมท x 2 ชิ้น



ขาตั้งทีวี x 2 ชิ้น




รีโมทคอนโทรล x 1 ชิ้น

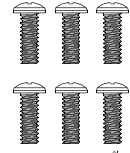

สกรู ขาทีวี x 6 ชิ้น

การติดตั้งแบบติดผนัง

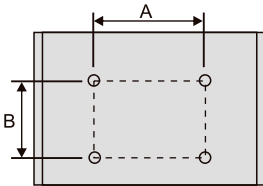

นิ้ว	รายละเอียด VESA (A * B)	จำนวน
75"	300x200	4

รูปภาพและภาพประกอบในคู่มือนี้จัดทำขึ้นเพื่อใช้เป็นข้อมูลอ้างอิงเท่านั้น และอาจแตกต่างจากรูปลักษณะจริงการออกแบบและข้อมูลจำเพาะของผลิตภัณฑ์อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า

หมายเหตุ:

1. ขาแขวนที่ยึดติดกับผนังเป็นอุปกรณ์เสริม
2. เมื่อประกอบทีวี ไม่ควรมีสสิ่งของอื่น ๆ อยู่รอบ ๆ และ โปรดเก็บให้ห่างจากสิ่งของอื่น ๆ
3. เมื่อประกอบทีวี ควรให้ช่างผู้ชำนาญทำการติดตั้งเพื่อหลีกเลี่ยงอันตราย
4. รูปภาพประกอบเป็นเพียงข้อมูลอ้างอิงเท่านั้น
5. โปรดปฏิบัติตามคู่มือผู้เกี่ยวข้องกับการประกอบขาตั้งทีวี
6. วางตำแหน่งรู VESA ทางด้านหลังเครื่องในตรงกับ ขาแขวนทีวี

การติดตั้งขาตั้งทีวี

วิธีการประกอบขาตั้ง

หากคุณจำเป็นต้องถอดหรือประกอบขาตั้ง โปรดอ่านคำแนะนำต่อไปนี้

- ก่อนที่จะติดตั้งหรือถอดขาตั้ง โปรดแน่ใจว่าได้ปิดทีวีแล้ว
- ก่อนเริ่ม ควรวางวัสดุกันกระแทกก่อน วางทีวี เพื่อป้องกันความเสียหาย

คำแนะนำในการประกอบ

ขั้นตอนที่ 1: จัดขาตั้งให้ตรงกับจุดติดตั้ง


ดังแสดงในภาพ

ขั้นตอนที่ 2: ขันสกรู (ที่ให้มา) ด้วยไขควงเพื่อยึด

ขาตั้งเข้ากับหน้าจอ ดังแสดงในภาพประกอบ

- หากต้องการถอดขาตั้งออกจากทีวี


ให้ดำเนินการตามขั้นตอนข้างต้น

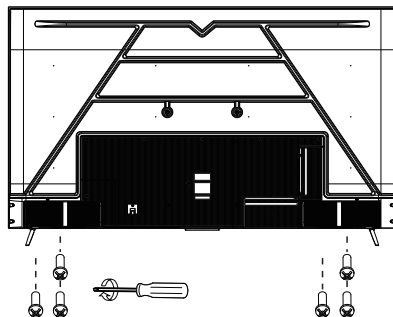

ปุ่มควบคุม

ปุ่มควบคุม พื้นฐานของทีวีของคุณ จะอยู่ตรงด้านล่าง รวมถึงเมนูการใช้งาน ด้วย


- หากต้องการใช้ฟังก์ชันที่นอกเหนือนี้ แนะนำให้ใช้ รีโมทคอนโทรล

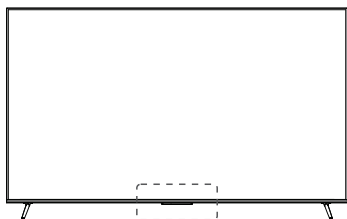

ไฟแสดงสถานะ

-หากมีไฟแสดง ทีวีจะอยู่ในโหมด สแตนด์บาย

-หากไม่มีไฟแสดง ทีวีจะอยู่ในโหมด เปิด เครื่อง



ปุ่มทีวี

ในโหมดสแตนด์บาย ให้กดปุ่มเพื่อเปิดทีวี

ในสถานะเปิดเครื่อง ให้กดปุ่มหนึ่งครั้ง เพื่อกลับไปยังโหมดสแตนด์บาย


แสดง/ซ่อน ไอคอนปุ่ม: กดปุ่มที่ต้องการหนึ่งครั้งเพื่อแสดง ไอคอน

และไอคอนจะถูกซ่อนหลังจากไม่ได้ใช้งานเป็นเวลา 10 วินาที กดปุ่ม

ค้างไว้ 3 วินาที ทีวีจะเข้าสู่โหมดสแตนด์บาย

การเลือกไอคอน: กดปุ่ม 1 ครั้ง เพื่อเลือกรายการที่ต้องการ

การเลือกฟังก์ชัน: กดปุ่มค้างไว้เพื่อเลือกรายการ



รายละเอียดผลิตภัณฑ์

รุ่นสินค้า		75US900AN
ขนาดสินค้า		75" Diagonal (max.)
ความละเอียดหน้าจอ		3840X2160
กำลังขับ ของลำโพง		15Wx2
แหล่งจ่ายไฟ		100-240V~, 50/60Hz
การใช้พลังงาน		275W
การใช้พลังงานโหมดสแตนด์บายด์		≤0.5W
ความต้านทานช่องเสาอากาศ		75 ohms
การใช้พลังงานรีโมทคอนโทรล		DC 3V (Two AA size batteries)
ขนาดสินค้า (ก x ย x ส)	ทีวีรวมขาตั้ง	1668x333x1027 มิลลิเมตร
	ทีวีไม่รวมขาตั้ง	1668x105x953 มิลลิเมตร
น้ำหนักสินค้า	ทีวีรวมขาตั้ง	23.1 kg
	ทีวีไม่รวมขาตั้ง	22.76 kg
อุณหภูมิการใช้งาน		0°C-40°C


หมายเหตุ:

- การออกแบบและข้อมูลจำเพาะอาจมีการเปลี่ยนแปลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า
- น้ำหนักและขนาดที่แสดงเป็นเพียงค่าประมาณ

การเชื่อมต่อทีวี

1. เสียบปลั๊กสายไฟเข้าที่ด้านหลังของทีวี จากนั้นเสียบปลายปลั๊ก AC เข้ากับเต้าเสียบอย่างระมัดระวัง
2. หากคุณต้องการเชื่อมต่ออุปกรณ์อื่นกับทีวี ให้ใช้สายตามประเภทการเชื่อมต่อ และเชื่อมต่อกับพอร์ตที่ด้านหลังหรือด้านข้างของทีวี


ตำแหน่งการเชื่อมต่อ



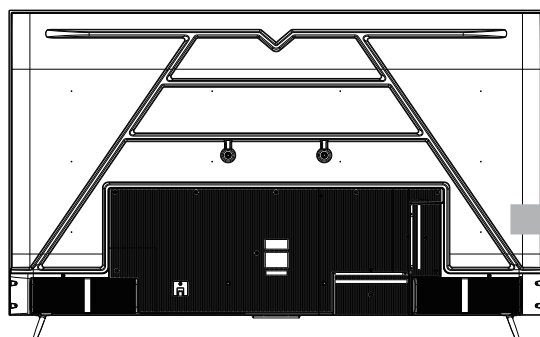


การเชื่อมต่อด้านข้าง



การเชื่อมต่อด้านหลังทีวี




ช่องเชื่อมต่อ	สายเชื่อมต่อ	อุปกรณ์เชื่อมต่อภายนอก
ANT/CABLE		 เสาอากาศ  VHF/UHF ช่องเสียบ สายเสาอากาศ
HDMI		 เครื่องเล่นวีดีโอ
AV IN	สายวีดีโอ  เหลือง	 กล่องวีดีโอ
	สายสัญญาณเสียง (ซ้าย)  ขาว	
	สายสัญญาณเสียง (ขวา)  แดง	
USB		
SPDIF		 เครื่องรับสัญญาณเสียง
HEADPHONE		
LAN 		

ทีวีสามารถเชื่อมต่อกับอุปกรณ์ต่อไปนี้ได้: กล่องเคเบิล, กล่องรับสัญญาณทีวี, เสาอากาศ, เครื่องเล่นวีดีโอ, ระบบเสียงสเตอริโอ, ซาวด์บาร์, หูฟัง, เครื่องเล่น Blu-ray, เครื่องเล่น DVD, VCR, กล่องวีดีโอ ฯลฯ


การใช้งานรีโมทคอนโทรล

การติดตั้งแบตเตอรี่

1 เปิดฝาคออบแบตเตอรี่ที่ด้านหลัง

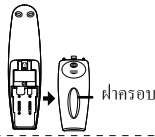

2 ใส่แบตเตอรี่ขนาด AA 1.5V จำนวน 2 ก้อน โดยให้ขั้วถูกต้อง อย่าใส่แบตเตอรี่เก่าหรือใช้แล้ว ร่วมกับแบตเตอรี่ใหม่

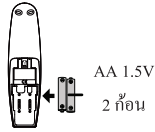

3 ปิดฝาคออบรีโมทคอนโทรล



30° 30°



- + ชี้รีโมทไปที่เซ็นเซอร์ของทีวี และใช้งานภายในระยะ 8 เมตร
- + ใส่แบตเตอรี่ที่ใช้แล้วลงในถังขยะรีไซเคิล เพราะสิ่งเหล่านี้ อาจส่งผลกระทบต่อสิ่งแวดล้อมได้

หมายเหตุ:

- 1) แบตเตอรี่ควรมีอายุการใช้งานประมาณหนึ่งปีภายใต้การใช้งานปกติ (การใช้งานจริงจะแตกต่างกันไป)
- 3) หากทีวีไม่ได้ใช้งานเป็นเวลานาน ควรถอดแบตเตอรี่ออกจากรีโมทคอนโทรลเพื่อหลีกเลี่ยงความเสี่ยงที่อาจเกิดขึ้นจากการรั่วไหล
- 3) ห้ามใช้แบตเตอรี่เก่ากับใหม่ร่วมกันหรือแบตเตอรี่ต่างประเภทกัน
- 4) ห้ามโยนแบตเตอรี่ลงในไฟหรือน้ำ
- 5) แบตเตอรี่ ไม่ควรสัมผัสกับความร้อนมากเกินไป เช่น แสงแดด ไฟ หรืออื่นๆ

การใช้งานเมจิก รีโมท (Magic Remote Control)

หากต้องการใช้ เมจิกรีโมท (Magic Remote) ให้จับคู่กับทีวีของคุณก่อน

1. ใส่แบตเตอรี่เข้ากับรีโมทคอนโทรล และเปิดทีวี

2. ชี้รีโมทคอนโทรลไปที่ทีวีของคุณแล้วกดปุ่ม (OK) บนรีโมทคอนโทรล

* หากทีวีไม่สามารถใช้งานเมจิกรีโมทได้ ให้ลองอีกครั้งหลังจากปิดทีวีแล้วเปิดใหม่อีกครั้ง


วิธีการยกเลิกการเชื่อมต่อ เมจิก รีโมท (Magic Remote)

กดปุ่ม (BACK) และ (HOME) พร้อมกันเป็นเวลา 5 วินาที เพื่อยกเลิกการจับคู่รีโมทกับทีวีของคุณ

ปุ่มบนรีโมทคอนโทรล

- POWER:** ปุ่ม เปิด / ปิด โทรี
 - STB POWER:** คุณสามารถเปิดหรือปิดกล่องรับสัญญาณทีวีของคุณได้ โดยการเพิ่มกล่องรับสัญญาณทีวีเข้ารีโมทคอนโทรล
 - Number Buttons(0-9):** ปุ่มตัวเลข
 - /≡:** เข้าถึงรายการช่องที่บันทึกไว้
 - ... (MORE ACTIONS):** แสดงฟังก์ชันรีโมทเพิ่มเติม
AD/SAP: กด 1 ครั้ง : คำบรรยายเสียง
กด ค้าง : คำอธิบายเสียง
 - QUICK ACCESS**:** การเข้าถึงอย่างรวดเร็ว
เป็นฟีเจอร์ที่ให้ผู้ใช้ดูหรือช่องรายการทีวีได้โดยตรงด้วยการกดปุ่มตัวเลขค้างไว้
 - +<=>:** เพิ่ม / ลด ระดับ เสียง
 - (MUTE):** ปิดเสียง
 - ↕:** เปลี่ยนช่องรายการ
 - 🔊 (คำสั่งเสียง):** จำเป็นต้องเชื่อมต่อเครือข่ายเพื่อใช้ฟังก์ชันการจดจำเสียงตรวจสอบเนื้อหาที่แนะนำ
(บริการบางอย่างที่แนะนำอาจไม่สามารถใช้ได้บางประเทศ)
🔊 (คำสั่งเสียง):** พูดในขณะที่กดปุ่มค้างไว้เพื่อใช้ฟีเจอร์คำสั่งเสียง
 - 🏠 (โฮม):** เข้าสู่หน้า Home
 - 🔍:** เข้าสู่เมนูการตั้งค่า
 - ⏸ (ปุ่มสกออร์):** กดปุ่มตรงกลาง เพื่อ ยืนยันทรายการ
 - ▶▶◀◀ (ขึ้น/ลง/ซ้าย/ขวา):** กดปุ่มขึ้น ลง ซ้ายหรือขวาเพื่อเลื่อนเมนู
- หากคุณกดปุ่ม ▶▶◀◀ ในขณะที่ใช้งานอยู่ ตัวพอยเตอร์ จะหายไปจากหน้าจอ และเมจิกรีโมท จะทำงานเหมือนกับรีโมทคอนโทรลทั่วไป หากต้องการแสดงตัวพอยเตอร์ บนหน้าจออีกครั้ง ให้เขย่าเมจิกรีโมทไปทางซ้ายและขวา
- ↶:** กลับไปยังหน้าจอก่อนหน้านี้
 - GUIDE:** แสดงโปรแกรมรายการ

- 1** ปุ่มบริการสตรีมมิ่ง: เปิดแอปพลิเคชัน NETFLIX , MOVIE , PRIME VIDEO
- (INPUT):** ปุ่มเลือกช่องสัญญาณ
- ⏮ ⏪ ⏩ ⏭:** ปุ่มฟังก์ชันพิเศษ สำหรับบางรายการ
- ▶, || (Control buttons):** ปุ่ม เล่น / หยุดเล่นชั่วคราว ในโหมดคัลติมิเดีย

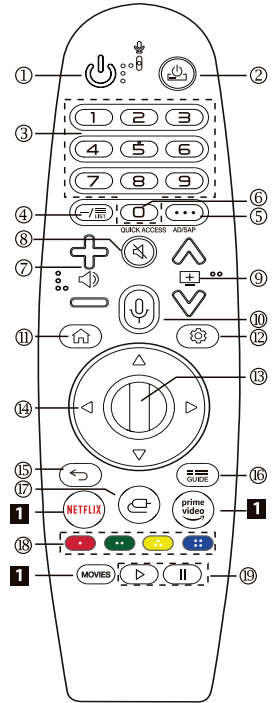

ปุ่มและบริการบางอย่างอาจไม่ได้ให้มาขึ้นอยู่กับรุ่นหรือภูมิภาค

การตั้งค่าทีวี (โดยใช้รีโมทคอนโทรล)

การตั้งค่าเริ่มต้น

- กดปุ่มเปิด/ปิด โทรี รีโมทคอนโทรล
- หมายเหตุ: ตัวปุ่มควบคุมทีวีจะอยู่ที่ด้านล่างของทีวี
- กดปุ่ม OK (สกออร์เมาส์) บนรีโมทของคุณ จากนั้นเลือกวิธีติดตั้งการตั้งค่าทีวี
- มีวิธีการติดตั้ง 2 วิธี คือ ติดตั้งผ่านอุปกรณ์พกพา และ อีกวิธีหนึ่งคือติดตั้งผ่านทีวี
- กด ▲/▼ เพื่อเลือกภาษาและตำแหน่งของระบบ กดปุ่ม OK (สกออร์เมาส์) เพื่อยืนยัน
 - กด ▲/▼ เพื่อเลือกอินเทอร์เน็ตที่จะเชื่อมต่อ กดปุ่ม OK (สกออร์เมาส์) และป้อนรหัสผ่านเพื่อยืนยันว่าการเชื่อมต่อสำเร็จ
- เชื่อมต่ออินเทอร์เน็ตเพื่อเข้าถึงเนื้อหาและแอปพลิเคชัน
- กรอกพื้นที่บริการที่ถูกต้องเพื่อตั้งค่าที่อยู่ของคุณ

การแก้ไขปัญหาเบื้องต้น

หลังจากปรับจูนอัตโนมัติแล้ว จะใช้ได้เฉพาะบางช่องเท่านั้น	ตรวจสอบว่าพื้นที่ของคุณครอบคลุมการออกอากาศแบบดิจิทัลหรือไม่ ลองปรับจูนใหม่หรือปรับจูนช่องที่หายไปด้วยตนเอง ตรวจสอบว่าคุณใช้ เสาอากาศประเภทที่ถูกต้องหรือไม่
ไม่สามารถเลือกช่องได้	ตรวจสอบว่าช่องถูกล็อกหรือไม่
USB ไม่เล่น	โปรดตรวจสอบการเชื่อมต่อสาย USB และแหล่งจ่ายไฟ หรือ USB ไม่ได้ รับการฟอร์แมตและตรวจสอบให้แน่ใจว่า USB เข้ากันได้กับรูปแบบ ข้อมูลมัลติมีเดีย
ภาพบิดเบี้ยว ภาพเป็นจุด	การบีบอัดเนื้อหาวีดีโออาจทำให้เกิดการผิดเพี้ยน โดยเฉพาะในภาพที่ เคลื่อนไหวเร็ว เช่น กีฬาและภาพยนตร์แอ็คชั่น
เสียงรบกวนจากลำโพง	ตรวจสอบการเชื่อมต่อสาย ตรวจสอบให้แน่ใจว่าใช้สายวีดีโอเชื่อมต่อ กับอินพุตเสียงหรือไม่ อาจทำให้เสียงผิดเพี้ยนได้
ทีวีปิดเครื่องอัตโนมัติ	ตัวตั้งเวลาปิดเครื่องอาจเปิดใช้งานอยู่ หากไม่มีสัญญาณจากอินพุต ประมาณ 10 นาที ทีวีจะปิด
ทีวีเปิดเครื่องอัตโนมัติ	ตรวจสอบว่าตัวตั้งเวลาเปิด ถูกตั้งค่าอยู่หรือไม่
รูปภาพไม่แสดงแบบเต็มจอ	แถบสีดำแต่ละด้านจะปรากฏบนช่อง HD เมื่อแสดงเนื้อหา SD (4:3) แถบสีดำที่ด้านบนและด้านล่างจะปรากฏในภาพยนตร์ที่มีอัตราส่วนภาพ ต่างจากทีวีของคุณปรับขนาดภาพตัวเลือกบนอุปกรณ์ภายนอกหรือทีวี ให้เต็มหน้าจอ

PREFACE

1. Read this Quick Start Guide before starting Set-up.
2. Then, carefully follow the Instructions, heeding all Warnings.
3. Do Not remove the TV back cover or block the TV ventilation openings.
4. Do Not use the TV near water or a heat Source.
5. Do not pinch or cut the Power Cord.

Note:

The product and illustrations in this user's manual is only for explanation purposes and may vary depending on model.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls

If your existing television set is being retained and relocated, the same considerations as above should be applied.


The plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Unpack the TV and Accessories from the Carton Box

1. Please see the unpacking instructions on the top of the carton box (and below).
2. As noted, be careful not to grab or put pressure on the TV screen.
3. Check the carton box carefully for all included Accessories.



DO NOT

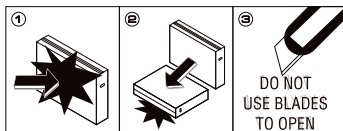

For 32" - 58"




UNPACK
WITH CARE



For 65" - 75"




UNPACK
WITH CARE

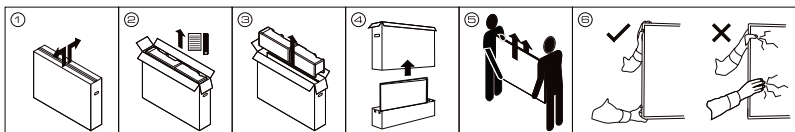


What You Will Need for Set-up (Not Included)

- Philips Head Screwdriver
- Internet Connection (Needed for Smart TV Streaming)
- Wireless Router (Needed for Smart TV Streaming)
- Computer, Tablet or Smart Phone (Needed for Smart TV Set-Up)


Package Contents

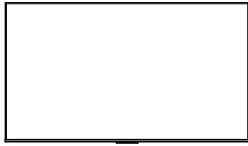

TV x 1pc

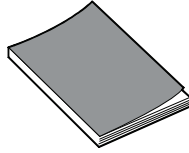

Quick Start Guide x 1pc




AA Batteries for Remote x 2pcs



Table Stands x 2 pcs




Remote Control x 1pcs

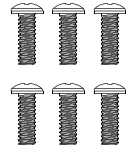

Screws for Stand

Wallmounting Installation (Optional)

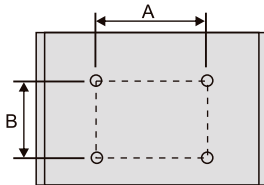

Inches	Specifications VESA (A*B)	Quantity
75"	300x200	4

The figures and illustrations in this manual are provided for reference only and may differ from their actual appearance. The product design and specifications may change without notice.

- Note:
1. The bracket fixed on the wall is an optional part.
 2. When assembling the TV, there should be no other articles around it and please keep it distant from other articles.
 3. When assembling the TV, please ask the professional worker to fix it in order to avoid danger.
 4. The fixing picture is only for reference.
 5. Please follow the user's manual about bracket assemble to fix the TV.
 6. Attach the mounting bracket with the VESA compatible wall mounting kit.

Attach the Table Stands

How to assemble the stand

If you need to remove or assemble the stand please read the following instructions.

-Before attaching/detaching the stand, make sure to turn off the TV.


-Before performing work, spread cushioning over the base area to lay the LED TV on. This will prevent it from being damaged.

Assembling instruction:

Step1: Align the stand leg to the installation point, as illustrated.


Step2: Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated.

- To disconnect the stand from the TV, perform the above steps in reverse order.

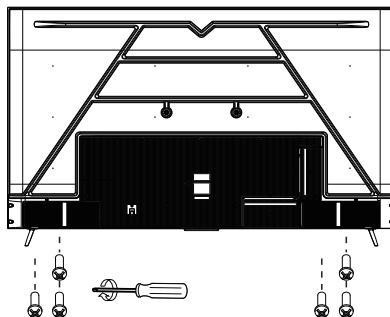


Front panel

The buttons on the lower-right panel control your TV's basic features, including the on-screen menu. To use the more advanced features, you must use the remote control.

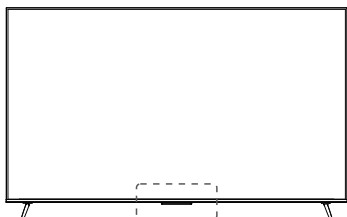

Power indicator

- Light indicates the TV is in standby mode.
- No light indicates the TV is on.

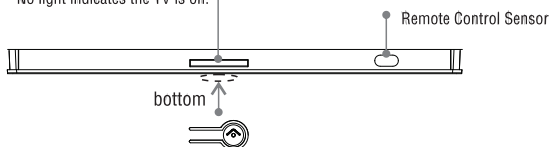


Middle key

In the standby mode, press the middle button to turn on the TV.
In the boot state, short press the middle button to shut down.

Display/Hide key icons: Press the Multifunction Button once to display the icons shown above. The icons will be hidden after 10 seconds of inactivity. Long press the key 3 seconds, the TV will enter standby mode.

Icon selection: Short press the button, move the loop to the right, select the icon.

Icon function selection: Long press the key to achieve the function of the selected icon.



Specifications

Model		75US900AN
Display size		75" Diagonal (max.)
LED panel resolution		3840x2160
Speaker output power		15Wx2
Power supply		110-240V~, 50/60Hz
Power consumption		275W
Standby consumption		≤0.5W
Antenna input		75 ohms
Controller power		DC 3V (Two AA size batteries)
Dimensions (LxWxH)	TV with stand	1668x333x1027mm
	TV without stand	1668x105x953 mm
Weight (Net weight)	TV with stand	23.1 kg
	TV without stand	22.76 kg
Work temperature		0°C-40°C


NOTES:

- Design and specifications are subject to change without notice.
- Weight and Dimension shown are approximate.


Connect The TV





1. Insert the female end of the Power Cord into the back of the TV.
Then carefully plug the standard AC plug end into a 110-240V AC outlet.
2. If you are connecting other devices to the TV, utilize the appropriate optional cables and connect to the appropriate ports on the back or side of the TV.

Location of Connections

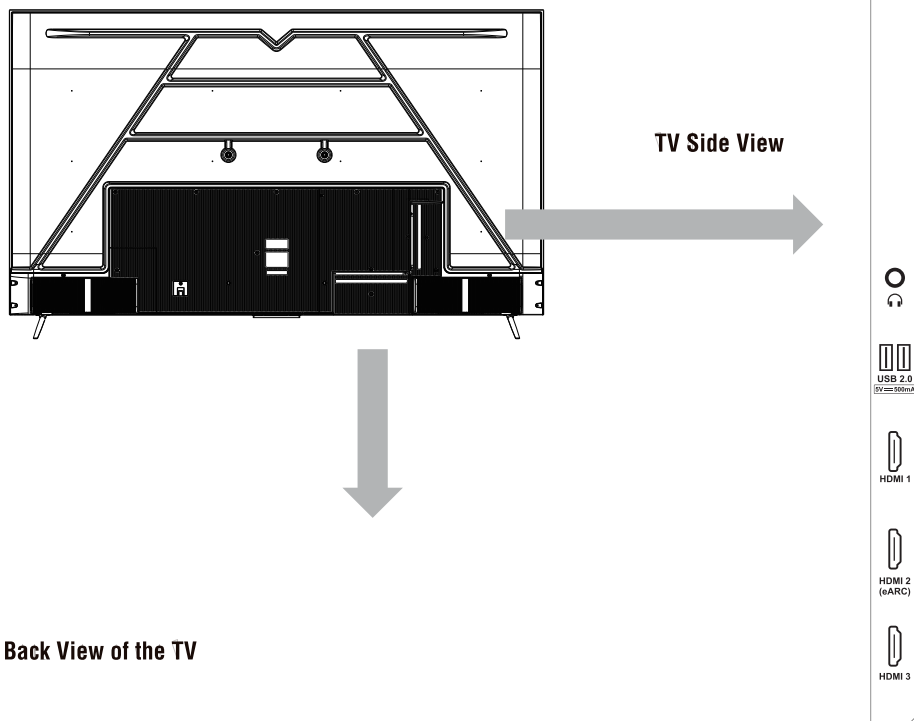

Back View of the TV




TV label	Cable	External Equipment
ANT/CABLE		 Antenna 
HDMI		VIDEO EQUIPMENT   Camcorder
AV IN	VIDEO  Yellow	
	L  White	
	R  Red	
USB		
SPDIF		 Audio Receiver
HEADPHONE		
LAN 		

The TV can be connected to the following devices: Cable Box, Satellite Box, Antenna, Video Game, Stereo System, Sound Bar, Headphones, Blu-ray Player, DVD Player, VCR, Streaming Box or Stick, Camcorder, etc.


Prepare The Remote Control

Installing Batteries


- 1 Open the battery compartment cover on the back side.

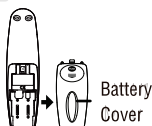

- 2 Insert two 1.5V AA size batteries in correct polarity. Don't mix old or used batteries with new ones.

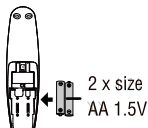

- 3 Closed the cover.

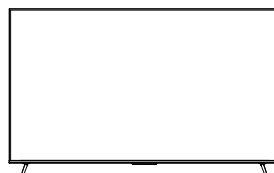

- + Point the remote towards the remote control sensor of the TV and use it within 8 meters.
- + Put the used batteries into the recycling bin since they can negatively affect the environment.

Note:

- 1) Batteries should last approximately one year under normal use (actual use will vary).
- 2) If the TV will remain inactive for an extended period of time, remove the batteries from the remote control to avoid possible damage due to leakage.
- 3) Do not mix old and new batteries or different types of batteries.
- 4) Do not throw batteries into fire or water.
- 5) The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.

Registering Magic Remote Control

How to register the Magic Remote Control (*To use the Magic Remote, first pair it with your TV)

1. Put batteries into the Magic Remote and turn the TV on.
 2. Point the Magic Remote at your TV and press the  **Wheel (OK)** on the remote control.
- * If the TV fails to register the Magic Remote, try again after turning the TV off and back on.


How to deregister the Magic Remote Control

Press the  (**BACK**) and  (**HOME**) buttons at the same time, for five seconds, to unpair the Remote with your TV.

*Press and hold the  **GUIDE** button for more than 5 seconds to disconnect and re-register and Remote at the same time.

Remote Buttons (** To use the button, press and hold for more than 1 second.)

1. **POWER**: Turn the TV on and off.
2. **STB POWER**: You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.
3. **Number Buttons(0-9)**: Enters numbers.
4. : Accesses the saved channels list.
5. **... (MORE ACTIONS)**: Displays more remote control functions.
AD/SAP: Short press: Other actions.
Long press: Audio description.
6. **QUICK ACCESS****: Edits QUICK ACCESS.
QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.
7. : Adjusts the volume level.
8. **(MUTE)**: Mutes all sounds.
 (MUTE)**: Accesses the [Accessibility] menu.
9. : Scrolls through the saved channels.
10. **(Voice Recognition)**: Network connection is required to use the voice recognition function. Check for recommended content.
(Some recommended services may not be available in some countries.)
 (Voice Recognition)**: Speak while pressing and holding the button to use the voice recognition feature.
11. **(HOME)**: Accesses the Home menu.
 (HOME)**: Shows the previous history.
12. **(Q. Settings)**: Accesses the Quick Settings.
13. **Wheel(OK)**: Press the center of the Wheel button to select a menu. You can change channels by using the wheel button.
14. **(up/down/left/right)**: Press the up, down, left or right button to scroll the menu. If you press buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.
15. **BACK**: Returns to the previous screen.
16. **GUIDE**: Displays the program event according to time scheduler.
17. **Streaming Service buttons**: Connects to the Video Streaming Service.
18. **(INPUT)**: Changes the input source.
19. : These access special functions in some menus.
20. **(Control buttons)**: Controls media contents.

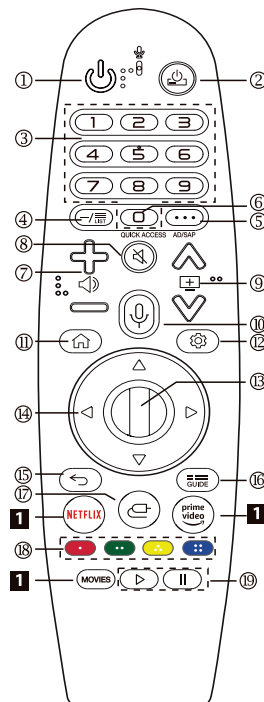

Some buttons and services may not be provided depending upon models or regions.

SET-UP THE TV (Using the Remote Control)

Initial Setup

1. Press the Power Button at the Top of the Remote.

Note: TV Controls on the TV are located on the bottom of the TV.

(If the TV is in Boot State, a long press on the Power Button under the TV might be necessary.)

2. Press the OK button (wheel) on your remote then select how to initialise TV settings.

There are two installation methods, one is mobile device and the other is TV.

3. Press ▲/▼ to select the system language and location press OK button (wheel) to confirm.
4. Press ▲/▼ to select the Internet to connect, press OK button (wheel) and enter the password to confirm the connection is successful. Connect to the internet to access useful and fun contents and applications.
5. Enter the correct service area postcode to set your address.

Navigating the ON-SCREEN MENU

In the HOME interface, press the ▲▼◀▶ key to select the icon of the circular settings menu, and press OK button (wheel) to adjust.

After finishing your adjustment, press BACK button to return to the previous menu.


Trouble Shooting

After Auto Tuning only some channels are available	Check your area is covered by Digital Video Broadcasts. Try re-tuning or manually tuning missing channels. Check that you are using the correct antenna type.
Channel cannot be selected	Check if the channel has been blocked in the main menu settings.
USB not playing	Please check connecting USB cable and power supply is connected. Hard drive has not been formatted. Please make sure USB disk is compatible and the multimedia data formats are supported.
Picture is distorted, macroblock, small block, dots, pixelization, etc	Compression of video contents may cause distortion especially on fast moving pictures such as sports and action movies.
Noise from speaker	Check cable connections, make sure a video cable is not connected to an audio input. Low signal level may cause sound distortion.
TV turns off automatically	Check if the Off Timer is set to On in the Setup menu. Sleep Timer may have been enabled. If there is no signal for about 10 minutes from an input, the TV will turn off.
TV turns on automatically	Check if the On Timer is set to On in the Setup menu.
Picture is not shown in full screen	Black bars on each side will be shown on HD channels when displaying SD (4:3) contents. Black bars on Top & Bottom will be shown on movies that have aspect ratios different from your TV. Adjust picture size option on your external device or TV to full screen.

Aconatic

บริษัท ไฮฟ โอเรียนท์ ไทย จำกัด (มหาชน)
HIFI ORIENT THAI PUBLIC COMPANY LIMITED

83/161 -162 ซอยงามวงศ์วาน47(จีนเซค2) โทร. 0-2954-5281 , 0-2580-6955
แขวงทุ่งสองห้อง จังหวัดนนทบุรี Core Line, 02-591-9444 , 02-589-5115
กรุงเทพมหานคร 10210

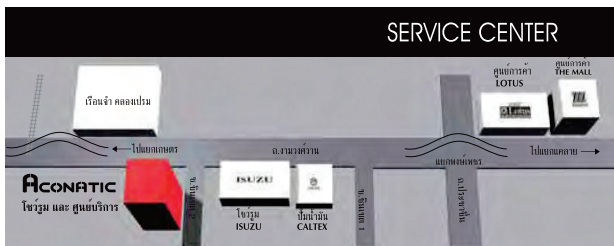

หมายเหตุ : บริษัทขอสงวนสิทธิ์ในการเปลี่ยนแปลงรายการของสภานาและรายละเอียดสินค้าโดยมีต้องแจ้งให้ทราบล่วงหน้า