

ACONATIC

ลงทะเบียนรับประกันสินค้า

SCAN QR CODE



เพื่อรับสิทธิประโยชน์สูงสุด!

ง่าย / เร็ว / ปลอดภัย

ลงทะเบียนรับประกันออนไลน์ผ่าน QR หรือ Website

www.aconatic.com/register_warranty

เงื่อนไขการรับประกัน WARRANTY CONDITION

สินค้าทุกประเภทมีระยะเวลาประกัน 1 ปี
ยกเว้นที่ระบุในตารางเงื่อนไขการรับประกันพิเศษ
1 YEAR WARRANTY PERIOD IS GIVEN TO ALL PRODUCT CATEGORIES
UNLESS STATED OTHERWISE IN THE FOLLOWING TABLE

เงื่อนไขการรับประกันพิเศษ SPECIAL WARRANTY

เฉพาะชิ้นส่วนที่รับประกันเท่านั้น ONLY THE WARRANTY PART

ประเภทสินค้า PRODUCT	ชิ้นส่วนที่รับประกัน WARRANTY PART	ระยะประกัน WARRANTY PERIOD
Digital TV		1 ปี (YRS)
SMART TV 32"up	หน้าจอ	3 ปี (YRS)
Mini Bar & Beverage cooler	ตัวเครื่อง	1 ปี (YRS)
	คอมเพรสเซอร์	3 ปี (YRS)
ตู้เย็น 5Q up และ รุ่นพิเศษ AN-FR112	ตัวเครื่อง	3 ปี (YRS)
	คอมเพรสเซอร์	10 ปี (YRS)
แอร์เคลื่อนที่ Portable Air	คอมเพรสเซอร์ COMPRESSOR	3 ปี (YRS)
พัดลมไอเย็น Air cooler	มอเตอร์ MOTOR	2 ปี (YRS)
เครื่องฟอกอากาศ		1 ปี (YRS)
Small APPLIANCE		1 ปี (YRS)
AUDIO,RADIO DVD, STB		1 ปี (YRS)
Wall mount & TV Stand wall mount		1 ปี (YRS)


May 2025

ACONATIC

Air Cooler

รุ่น AN-ACC5520

คู่มือการใช้งาน

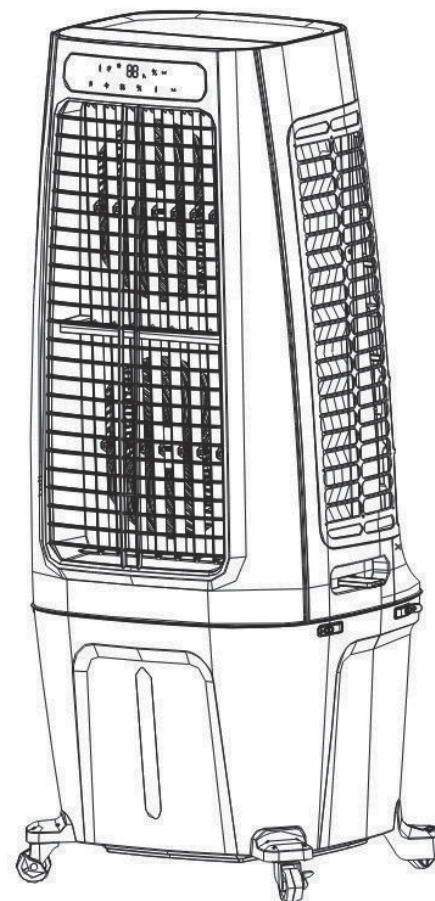

รับประกันสินค้าผ่าน QR Code

1 สแกน

สแกน QR code



2

กดลงทะเบียน

กดลงทะเบียนรับประกัน
เพื่อกรอกข้อมูล



3 รับประกัน

“สินค้า”



ขอขอบคุณสำหรับความไว้วางใจและการสนับสนุน และการซื้อพัดลมไอน้ำแบบมัลติฟังก์ชันรุ่นล่าสุดของเราเพื่อการใช้งานผลิตภัณฑ์ที่ติดตั้ง โปรดย่านคู่มือผู้ใช้อย่างละเอียดก่อนใช้งานเพื่อใช้งานอุปกรณ์ได้เต็มประสิทธิภาพ ควรเก็บคู่มือผู้ใช้นี้ไว้อย่างถูกต้องเพื่อใช้อ้างอิงในอนาคต เราหวังว่าผลิตภัณฑ์ของเราจะทำให้ชีวิตของคุณ สะดวกสบายและเพลิดเพลินยิ่งขึ้น

สารบัญ

คำเตือนและข้อควรระวังด้านความปลอดภัย	2
ฟังก์ชัน.....	4
รายละเอียดผลิตภัณฑ์.....	4
การติดตั้งและการใช้งาน.....	8
ความสะอาดและการบำรุงรักษา.....	18
ข้อมูลจำเพาะ.....	21

คำเตือนและข้อควรระวังด้านความปลอดภัย

เพื่อหลีกเลี่ยงอันตรายที่อาจเกิดจากการใช้งานผิดวิธี และเพื่อให้สามารถใช้งานเครื่องได้อย่างสะดวก กรุณาอ่านคู่มือการใช้งานผลิตภัณฑ์ก่อนใช้งาน

1. เครื่องใช้ไฟฟ้านี้ออกแบบมาเพื่อใช้งานภายในบ้านและในร่มเท่านั้น
2. ขณะใช้งาน ต้องใช้กับเต้ารับไฟฟ้าที่ได้มาตรฐานและผ่านการตรวจสอบแล้วว่าเหมาะสม โปรดตรวจสอบแรงดันไฟฟ้าให้ถูกต้องทุกครั้ง โดยเฉพาะเมื่อมีการย้ายสถานที่ใช้งาน
3. เครื่องใช้ไฟฟ้านี้ไม่ได้ออกแบบมาให้ผู้ที่มีความบกพร่องทางร่างกาย ประสาทสัมผัส หรือสติปัญญา รวมถึงผู้ที่ไม่มีประสบการณ์หรือความรู้ ใช้งานโดยลำพัง เช่น ตั้งอยู่ภายใต้การดูแล หรือได้รับคำแนะนำจากผู้รับผิดชอบด้านความปลอดภัยของพวกเขา
4. ควรดูแลเด็กให้ห่างจากเครื่อง เพื่อให้แน่ใจว่าเด็กจะไม่เล่นกับเครื่องใช้ไฟฟ้านี้ เครื่องใช้ไฟฟ้านี้สามารถใช้งานโดยเด็กอายุ 8 ปีขึ้นไป หรือผู้ที่มีข้อจำกัดทางร่างกาย ประสาทสัมผัส หรือสติปัญญาได้ หากได้รับการดูแลหรือคำแนะนำในการใช้งานอย่างปลอดภัยและเข้าใจถึงอันตรายที่อาจเกิดขึ้น เด็กต้องไม่เล่นกับเครื่อง และไม่ควรให้เด็กทำความสะอาดหรือดูแลบำรุงรักษาเครื่องโดยไม่มีผู้ใหญ่ดูแล
5. หากสายไฟชำรุด ต้องให้ผู้ผลิต ศูนย์บริการ หรือช่างผู้เชี่ยวชาญเปลี่ยนให้เท่านั้น เพื่อหลีกเลี่ยงอันตราย
6. ควรถอดปลั๊กทุกครั้งก่อนเติมน้ำหรือทำความสะอาดเครื่อง
7. ห้ามจับปลั๊กไฟด้วยมือเปียก เพราะอาจทำให้เกิดไฟฟ้าช็อตได้
8. เมื่อจะถอดปลั๊ก ห้ามดึงสายไฟ ให้จับที่หัวปลั๊กเท่านั้น
9. ห้ามพับ บิด หรือวางของหนักทับบนสายไฟ เพื่อป้องกันความเสียหายหรือการลัดวงจร
10. ห้ามนำวัตถุแปลกปลอม เช่น ไม้หรือแท่งโลหะ ใสเข้าไปในช่องลมเข้าและช่องลมออกโดยเด็ดขาด เพราะอาจทำให้เกิดกระแสไฟรั่ว ไฟฟาลัดวงจร หรือความเสียหายต่อเครื่องได้
11. ห้ามฉีดพ่นยาฆ่าแมลงหรือสเปรย์ที่ติดไฟได้บริเวณใกล้เครื่อง เนื่องจากอาจทำให้เครื่องเสียหายหรือเกิดอันตรายได้
12. หลีกเลี่ยงการให้ช่องลมออกของเครื่องเป่าลมโดยตรงไปยังเด็กเป็นเวลานาน เพราะอาจทำให้เด็กเจ็บป่วยหรือส่งผลต่อสุขภาพได้
13. ก่อนใช้งาน ควรตรวจสอบให้แน่ใจว่าปลั๊กไฟสะอาด ปราศจากวัตถุแปลกปลอมและเสียบปลั๊กให้แน่นทุกครั้ง
14. หากระหว่างการใช้งานมีกลิ่นผิดปกติ หรือมีเสียงผิดปกติจากเครื่อง ให้หยุดใช้งานทันทีและถอดปลั๊กออกจากเต้ารับ
15. หลังจากเติมน้ำในเครื่องแล้ว ห้ามเอียงหรือกระแทกขณะเคลื่อนย้าย เพื่อป้องกันการกระเด็นของน้ำ หากเครื่องล้นและมีน้ำอยู่ภายใน ให้ถอดปลั๊กทันทีและปล่อยให้แห้งอย่างน้อย 24 ชั่วโมงก่อนเปิดใช้งานอีกครั้ง
16. ระดับน้ำในถังน้ำไม่ควรเกินเส้นบอกระดับน้ำสูงสุด


17. เมื่อถึงน้ำเต็ม ห้ามยกเครื่องขึ้นโดยจับที่หูหิ้ว เพราะอาจทำให้น้ำล้นออกได้ ควรใช้วิธี ดันเครื่องจากที่จับเพื่อเคลื่อนย้าย และสามารถยกเครื่องได้ก็ต่อเมื่อยืนยันว่าในถังไม่มีน้ำหรือมีน้ำน้อยมากเท่านั้น
18. ขณะใช้งานในโหมดเพิ่มความชื้น ห้ามถอดหรือประกอบตะแกรงกรองอากาศและตัวโครงรองแผงรังผึ้ง เพราะอาจทำให้ละอองน้ำกระเด็นออกจากช่องลมได้
19. เมื่อออกจากบ้านหรือไม่ได้ใช้งานเป็นเวลานาน ต้องปิดเครื่องและถอดปลั๊กออกจากเต้ารับทุกครั้ง
20. หากเครื่องเกิดการชำรุด กรุณาส่งซ่อมที่ศูนย์บริการหรือแจ้งศูนย์บริการหลังการขาย ห้ามถอด แทะ หรือดัดแปลงเครื่องด้วยตนเอง เพราะอาจทำให้เกิดอันตรายและส่งผลต่อความปลอดภัยของผลิตภัณฑ์
21. ห้ามกลืนกินแบตเตอรี่ — อาจเกิดอันตรายจากสารเคมีได้
22. ผลิตภัณฑ์นี้มีแบตเตอรี่ชนิดเหรียญ (Coin/Button Cell) หากกลืนเข้าไปอาจทำให้เกิดการไหม้ภายในร่างกายอย่างรุนแรงภายในเวลาเพียง 2 ชั่วโมง และอาจเป็นอันตรายถึงชีวิต
23. เก็บแบตเตอรี่ใหม่และแบตเตอรี่ที่ใช้แล้วให้ห่างจากเด็ก
24. หากช่องใส่แบตเตอรี่ปิดไม่สนิท ให้หยุดใช้งานและเก็บผลิตภัณฑ์ให้ห่างจากเด็กทันที
25. หากสงสัยว่าแบตเตอรี่อาจถูกกลืนหรือใส่เข้าไปในส่วนใดของร่างกาย ให้รีบไปพบแพทย์โดยทันที
26. แบตเตอรี่มีส่วนประกอบที่เป็นอันตรายต่อสิ่งแวดล้อม ควรถอดออกจากเครื่องก่อนทิ้ง และต้องกำจัดอย่างถูกวิธี
27. โปรดทราบว่าระดับความชื้นในอากาศที่สูงอาจส่งเสริมการเจริญเติบโตของเชื้อจุลินทรีย์ในสภาพแวดล้อม
28. ห้ามปล่อยให้บริเวณรอบ ๆ เครื่องเพิ่มความชื้นมีความชื้นหรือเปียกน้ำ หากพบว่าบริเวณรอบเครื่องเริ่มมีความชื้น ควรลดระดับการทำงานของเครื่องลง หากไม่สามารถลดระดับได้ ควรเปิดเครื่องเป็นช่วง ๆ แทน ห้ามปล่อยให้วัสดุที่ดูดซับน้ำได้ เช่น พรม ผ้าปูโต๊ะ หรือผ้าปูโต๊ะ เปียกชื้นจากไอน้ำของเครื่อง
29. ห้ามปล่อยให้ น้ำค้างอยู่ในถังเก็บน้ำเมื่อไม่ได้ใช้งานเครื่อง
30. ควรเทน้ำออกและทำความสะอาดเครื่องเพิ่มความชื้นก่อนจัดเก็บ และทำความสะอาดอีกครั้งก่อนนำกลับมาใช้งานใหม่

ฟังก์ชันการทำงาน


1. ระบบควบคุมแบบสัมผัส (Touch Control)
2. ปรับระดับแรงลมได้ 3 ระดับ: แรง / ปานกลาง / เบา
3. โหมดลม: ลมปกติ / ลมธรรมชาติ / ลมขณะนอนหลับ
4. ตั้งเวลาเปิด-ปิดอัตโนมัติได้ 1-12 ชั่วโมง
5. ฟังก์ชันทำความเย็นและเพิ่มความชื้นฟังก์ชัน
6. เป่าลมแห้ง
7. ควบคุมการทำงานด้วยรีโมทคอนโทรล
8. ระบบแจ้งเตือนเมื่อน้ำในถังหมด
9. ฟังก์ชันจดจำการตั้งค่าอัจฉริยะ — เมื่อปิดเครื่องแล้วเปิดใหม่ เครื่องจะกลับไปใช้การตั้งค่าก่อนหน้านี้โดยอัตโนมัติ (เฉพาะขณะเสียบปลั๊ก)
10. ถังน้ำแบบถอดออกได้ สะดวกต่อการเติมน้ำและทำความสะอาด
11. เทคโนโลยีระบายความร้อนด้วยการหมุนเวียนน้ำแบบพ่นฝอย ปริมาณการหมุนเวียนน้ำมาก ทำให้ระบายความร้อนได้รวดเร็วขึ้น
12. ฟังก์ชันตั้งเวลาเปิดเครื่องล่วงหน้า 1-12 ชั่วโมง
13. ไฟแสดงสถานะจะหรี่ลงโดยอัตโนมัติหากไม่มีการใช้งานเกิน 1 นาที
14. มาพร้อมล้อขนาดใหญ่ เคลื่อนย้ายได้สะดวก
15. ฟังก์ชันปิดหน้าจอแสดงผล
16. ระบบเติมน้ำจากด้านบน สะดวกใช้งานฟังก์ชัน
17. สวิตช์ ช้าย-ขวา อัตโนมัติ

รายละเอียดผลิตภัณฑ์

• โครงสร้าง

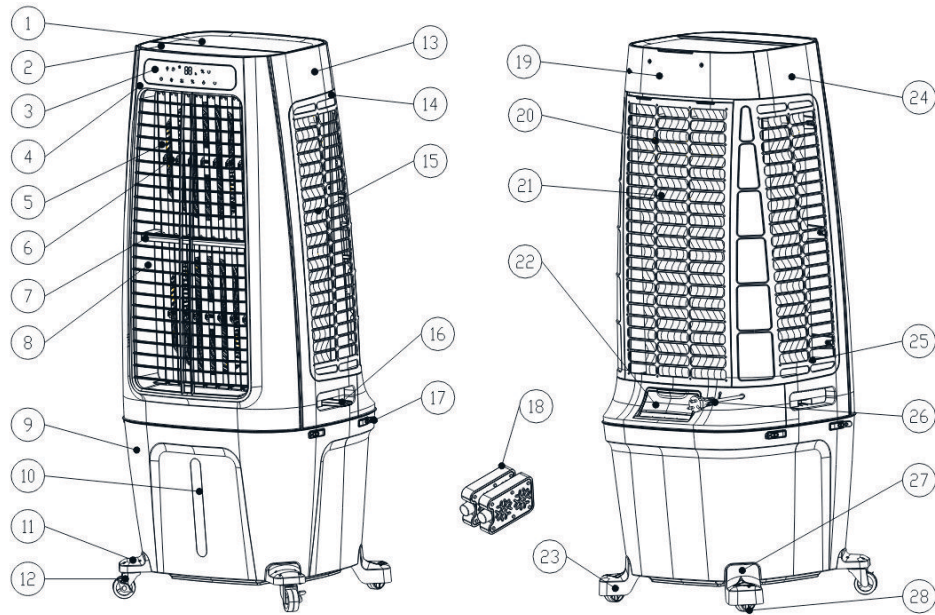


- | | | |
|-----------------------------|---------------------------|-------------------------------|
| 1. ฝาปิดช่องเติมน้ำ(ด้านบน) | 2. ฝาครอบด้านบน | 3. หน้าจอแสดงผล |
| 4. โครงด้านหน้า | 5. ใบพัดแนวตั้ง | 6. ก้านเชื่อมต่อใบพัดแนวตั้ง |
| 7. ฐานยึดใบพัดแนวตั้ง | 8. ตะแกรงช่องลม | 9. ถังเก็บน้ำ |
| 10. ชิดแสดงระดับน้ำ | 11. ฐานล้อชุดที่ 1 | 12. ล้อพร้อมระบบล็อกเบรก |
| 13. ฝาครอบด้านขวา | 14. แผ่นกรองอากาศด้านขวา | 15. แผงรังผึ้งด้านขวา |
| 16. รีโมทคอนโทรล | 17. ตัวล็อกยึดสายไฟ | 18. ถังเจลทำความเย็น(2 ชั้น) |
| 19. ฝาครอบด้านหลัง | 20. แผ่นกรองอากาศด้านหลัง | 21. แผงรังผึ้งเย็นด้านหลัง |
| 22. ช่องเติมน้ำ | 23. ฐานล้อชุดที่ 2 | 24. ฝาครอบด้านซ้าย |
| 25. แผ่นกรองอากาศด้านซ้าย | 26. สายไฟ | 27. ฐานล้อชุดที่ 3 |
| 28. ล้อเลื่อน | | |

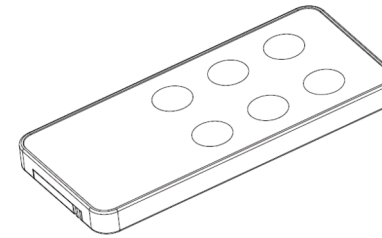

รีโมทคอนโทรล

- รูปภาพต่อไปนี้เป็นเพียงภาพควบคุมการทำงานของรุ่น AN-ACC5520 โดยแสดงเป็น คำอธิบาย ฟังก์ชันการทำงานตามรูปดังนี้

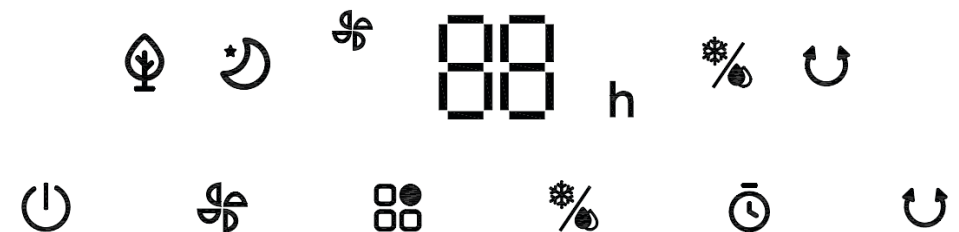


1 ปุ่ม "เปิด/ปิด" “”

2. ปุ่มสวิตช์ซ้าย-ขวา “”


3. ปุ่มทำความเย็น/ความชื้น “”

4. ปุ่ม ปรับความเร็วลมปุ่ม “”
5. ปุ่ม ตั้งเวลาการทำงาน (1-12 ชั่วโมง) “”
6. ปุ่ม เลือกโหมดการใช้งาน “”

• แผนผังแผงควบคุมของรีโมตคอนโทรล

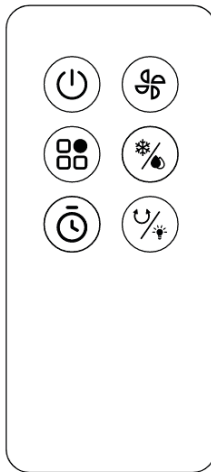

• กล้องเจลทำความเย็น

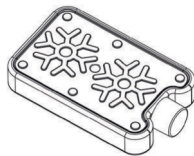

การใช้งานกล้องเจลทำความเย็น

มีคุณสมบัติในการเก็บความเย็นและรักษาอุณหภูมิ ซึ่งจะช่วยให้ลดอุณหภูมิในร่างกายให้น้ำ ทำให้น้ำในถังมีอุณหภูมิต่ำกว่าสภาพแวดล้อมเป็นเวลาหลายชั่วโมง และช่วยให้อากาศที่ออกมาจากพัดลมไอน้ำเย็นมากขึ้น

ขั้นตอนการใช้งาน

1. นำเจลทำความเย็น ใส่ในช่องแช่แข็งของตู้เย็นจนแข็งตัวเต็มที่
2. นำกล่องเจลทำความเย็นที่แข็งแล้วใส่ลงในถังน้ำ ภายในประมาณ 10 นาที อุณหภูมิของน้ำในถังจะต่ำกว่าสภาพแวดล้อม
3. เครื่องมาพร้อมกับกล่องเจลทำความเย็นจำนวน 2 ชุด เพื่อให้สามารถใช้งานได้ต่อเนื่อง
4. ห้ามเปิดฝาทรงของเจลทำความเย็น หรือรับประทานสิ่งที่อยู่ภายในเด็ดขาด

การติดตั้งและการใช้งานสินค้า

• วิธีการติดตั้ง

หลังจากนำผลิตภัณฑ์ออกจากบรรจุภัณฑ์แล้ว ให้ประกอบส่วนบนของเครื่องเข้ากับถังน้ำ จากนั้นสามารถใช้งานได้ทันที

• วิธีการใช้งานปุ่มฟังก์ชันแต่ละปุ่ม

(รายละเอียดของแต่ละปุ่มให้ดูตามหัวข้อ “แผนผังควบคุมการทำงาน” ในคู่มือ)

(1) ปุ่ม ON/OFF “”

เชื่อมต่อกับแหล่งจ่ายไฟ เครื่องจะส่งเสียง “Bi~Bi~” และเข้าสู่โหมดสแตนด์บายกดปุ่มเปิดเครื่อง  เพื่อเริ่มทำงาน เครื่องจะทำงานในโหมดลมปกติและความแรงลมต่ำโดยค่าเริ่มต้นหน้าจอดิจิทัลจะแสดงเลข 1 กดปุ่ม  อีกครั้งเพื่อปิดเครื่อง (OFF)

(2) ปุ่มปรับความเร็วลม (Wind Speed Button) “”

ในขณะที่เครื่องอยู่ในสถานะเปิด

กดปุ่ม ปรับความเร็วลม เพื่อเข้าสู่โหมดปรับระดับความแรงลมลำดับความแรงลมจะหมุนเวียนดังนี้: ลมต่ำ ลมกลาง ลมแรง ลมต่ำ ...วนตามลำดับ

ไฟบนหน้าจอดิจิทัลจะแสดงดังนี้: 1 2 3 1 ...วนตามลำดับ

เมื่อเครื่องอยู่ในสถานะเปิด กดปุ่มค้าง “” เป็นเวลา 3 วินาทีเพื่อเข้าสู่โหมดเป่าลมแห้ง เครื่องจะเริ่มทำงานที่ความแรงลมสูงโดยค่าเริ่มต้น และทำงานต่อเนื่องประมาณ 20 นาที หลังจากครบเวลา เครื่องจะเข้าสู่โหมดสแตนด์บายและไฟแสดงความเร็วลมจะกระพริบและหน้าจอดิจิทัลรวมถึงการแสดงผลอื่น ๆ จะปิดทั้งหมด

ระหว่างการทำงานของโหมดเป่าลมแห้ง นอกจากปุ่ม เปิด /ปิด แล้ว ปุ่มฟังก์ชันอื่นๆ จะไม่สามารถใช้งานได้ โหมดลดความชื้น จะปิดเครื่องโดยอัตโนมัติหลังจากการทำงานเสร็จสิ้น

(3) ปุ่ม “” ตั้งเวลา (Timing Function Button)

เมื่อเครื่องอยู่ในสถานะเปิด กดปุ่ม “” เพื่อเข้าสู่โหมดตั้งเวลา และตั้งเวลาปิดเครื่องจาก 1-12 ชั่วโมง

ไฟแสดงสถานะการตั้งเวลา “**h**” จะสว่างขึ้น และหน้าจอดิจิทัลจะแสดงเวลาที่ตั้งไว้ หน้าจอดิจิทัลจะแสดงเวลาตั้งเวลาและความเร็วลมปัจจุบันสลับกันทุก 10 วินาที

เมื่อเครื่องอยู่ในสถานะปิด กดปุ่ม “” เพื่อเข้าสู่โหมดตั้งเวลาเปิดเครื่องล่วงหน้า และตั้งเวลาเปิดเครื่องล่วงหน้าจาก 1-12 ชั่วโมง

(4) ปุ่มโหมดลม “” (Wind Mode Button)

กดปุ่ม “” เพื่อสลับโหมดลมตามลำดับดังนี้:
ลมปกติ → ลมธรรมชาติ → ลมขณะนอนหลับ → ลมปกติ ... และไฟแสดงสถานะแต่ละโหมดจะสว่างขึ้น

(1) ลมปกติ (Normal Wind): มีสามระดับความแรงลม คือ ต่ำ กลาง และสูง ที่ความเร็วคงที่

(2) ลมธรรมชาติ (Natural Wind): มีสามระดับความแรงลม คือ ต่ำ กลาง และสูง หน้าจอดิจิทัลจะแสดง 1 2 3 ตามลำดับ ความแรงลมจะลดลงตามที่ตั้งไว้ในโปรแกรม

(3) โหมดลมขณะนอนหลับ (Sleep Wind): มีสามระดับความแรงลม คือ ต่ำ กลาง และสูง หน้าจอดิจิทัลจะแสดง 1 2 3 ตามลำดับ ความแรงลมจะลดลงตามที่ตั้งไว้ในโปรแกรม เพื่อป้องกันไม่ให้ลมแรงรบกวนเวลานอน

ระดับความแรงลม	วิธีการทำงาน	การแสดงผลหน้าจอดิจิทัล
ต่ำ	ลมปกติความเร็วต่ำทำงานต่อเนื่อง	1 (ไม่เปลี่ยน)
กลาง	ลมปกติความเร็วระดับกลางทำงาน 30 นาที จากนั้นลมปกติความเร็วต่ำทำงานต่อเนื่อง	2-->1
สูง	ลมปกติความเร็วสูงทำงาน 30 นาที → ลมปกติความเร็วกลางทำงาน 30 นาที → จากนั้นลมปกติความเร็วต่ำทำงานต่อเนื่อง	3-->2-->1

(5) ปุ่มทำความเย็น/เพิ่มความชื้น :

เมื่อเครื่องอยู่ในสถานะเปิด กดปุ่ม “” เพื่อเปิดหรือปิดฟังก์ชันทำความเย็น/เพิ่มความชื้น หากน้ำในถังไม่เพียงพอ ฟังก์ชันทำความเย็น/เพิ่มความชื้น จะปิดโดยอัตโนมัติ พร้อมส่งเสียง “บีบ~ บีบ ” 10 ครั้ง และไฟแสดงสถานะจะกระพริบต่อเนื่องจนกว่าปุ่ม จะถูกกดอีกครั้ง เพื่อปิดไฟแสดงสถานะ

หมายเหตุ: เมื่อเครื่องทำงานที่ความแรงลม กลาง หรือ สูง ทุกครั้งที่เปิดฟังก์ชันนี้

ความเร็วลมจะลดลงเป็นเวลา 150 วินาที โดยลมปกติ ลมธรรมชาติ และ ลมขณะนอนหลับ จะปรับเป็นลมปกติความเร็วต่ำ หลังจากทำงานฟังก์ชันครบ 150 วินาที ความเร็วลมจะกลับสู่ความเร็วเดิม และ ปุ่มปรับความเร็วลม กับ ปุ่มโหมดลม จะไม่สามารถปรับได้ในช่วงเวลานี้

(6) ปุ่มสายซ้าย-ขวา “U”

เมื่อเครื่องอยู่ในสถานะเปิด กด ปุ่ม “U” หนึ่งครั้ง เพื่อเปิดหรือปิดฟังก์ชันสายลมซ้าย-ขวา โดยไฟแสดงสถานะจะสว่างหรือดับตามการใช้งาน

กดปุ่ม “U” ค้าง 3 วินาที เพื่อปิดหน้าจอและปิดไฟแสดงสถานะทั้งหมด กดปุ่มใดก็ได้ เพื่อเรียกคืนหน้าจอและไฟแสดงสถานะ


(7) ฟังก์ชันอื่น ๆ

- ① โหมดลดความสว่างของไฟ: หากไม่มีการกดปุ่มใด ๆ ภายใน 1 นาที หลังจากไฟแสดงสถานะติดอยู่ ไฟจะแสดงผลลดความสว่างลงเหลือ 1/3 ของความสว่างเดิม หากกดปุ่มอีกครั้ง ไฟแสดงสถานะจะสว่างขึ้นตามปกติ
- ② ฟังก์ชันจดจำสถานะก่อนปิดเครื่อง : หากไม่ใช้การเปิดเครื่องครั้งแรก เมื่อกดปุ่ม “P” ในโหมดสแตนด์บาย เครื่องจะกลับสู่สถานะก่อนปิดเครื่องหลังจากเปิดทำงาน ยกเว้นฟังก์ชัน ตั้งเวลา, ลมนอน และโหมดเป่าลมแห้ง

• การเติมน้ำ

หากต้องการใช้งานฟังก์ชัน ทำความเย็น/เพิ่มความชื้น กรุณาเติมน้ำลงในถังน้ำ มี สามวิธีการเติมน้ำ ดังนี้


วิธีการเติมน้ำที่ 1: เปิดฝาด้านบนเติมน้ำแล้วค่อย ๆ เทน้ำลงในถังน้ำ (รูปที่ 1, รูปที่ 2) หลังจากเติมน้ำเสร็จ ให้ปิดฝาด้านบน

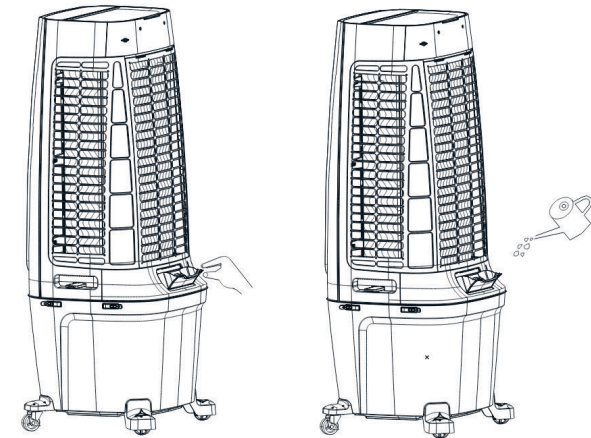

รูปที่ 1

รูปที่ 2


วิธีการเติมน้ำที่ 2 : เปิดตัวล็อกยึดถังน้ำทั้งสี่ตัวออกก่อน เพื่อแยกตัวเครื่องออกจากถังน้ำ จากนั้นค่อย ๆ เทน้ำลงในถังน้ำ (ดูรูปที่ 3 และ รูปที่ 4) เมื่อเติมน้ำเสร็จแล้ว ให้ประกอบตัวเครื่องเข้ากับถังน้ำอีกครั้ง และล็อกตัวล็อกยึดให้แน่น

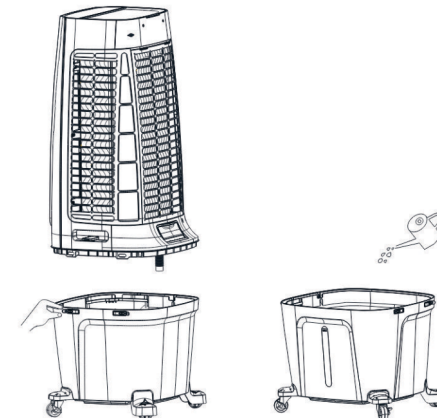

รูปที่ 3

รูปที่ 4

วิธีการเติมน้ำที่ 3: เติมน้ำจากด้านบน — ใช้มือ จับฝาปิดด้านบนเครื่อง จากนั้น ดันฝาปิดขึ้น ค้างไว้ และค่อย ๆ เทน้ำลงในถังน้ำ (ดูรูปที่ 5 รูปที่ 6, รูปที่ 7) เมื่อเติมน้ำเสร็จแล้ว ปิดฝาครอบให้เรียบร้อย

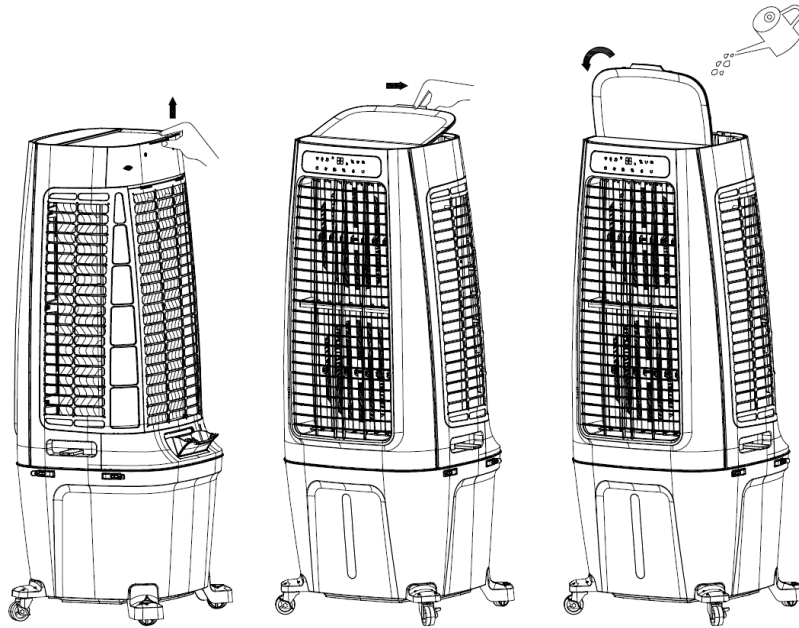


รูปที่ 5

รูปที่ 6

รูปที่ 7


เมื่อเติมน้ำด้วยตนเอง กรุณาสังเกตระดับน้ำที่แสดงบนด้านหน้าของถังน้ำของพัดลม (รูปที่ 8)

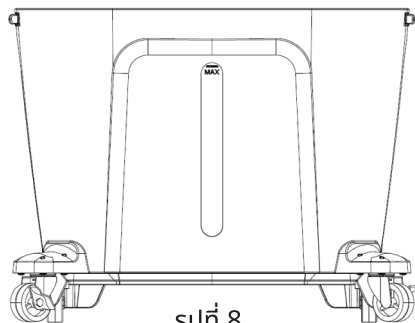

รูปที่ 8

1. เมื่อเติมน้ำ โปรดระวังอย่าให้น้ำเกินระดับสูงสุดที่กำหนด
2. ควรใช้น้ำประปาที่สะอาดเท่านั้น
3. ข้อควรทราบ: เมื่อใช้งานครั้งแรก หากมีกลิ่นเล็กน้อยหรือมีการเปลี่ยนสีของน้ำในถัง ถือเป็นเรื่องปกติ ปลอดภัย ไม่มีอันตราย และไม่ส่งผลต่อสุขภาพของคุณ

• การใช้งานปั้มน้ำ

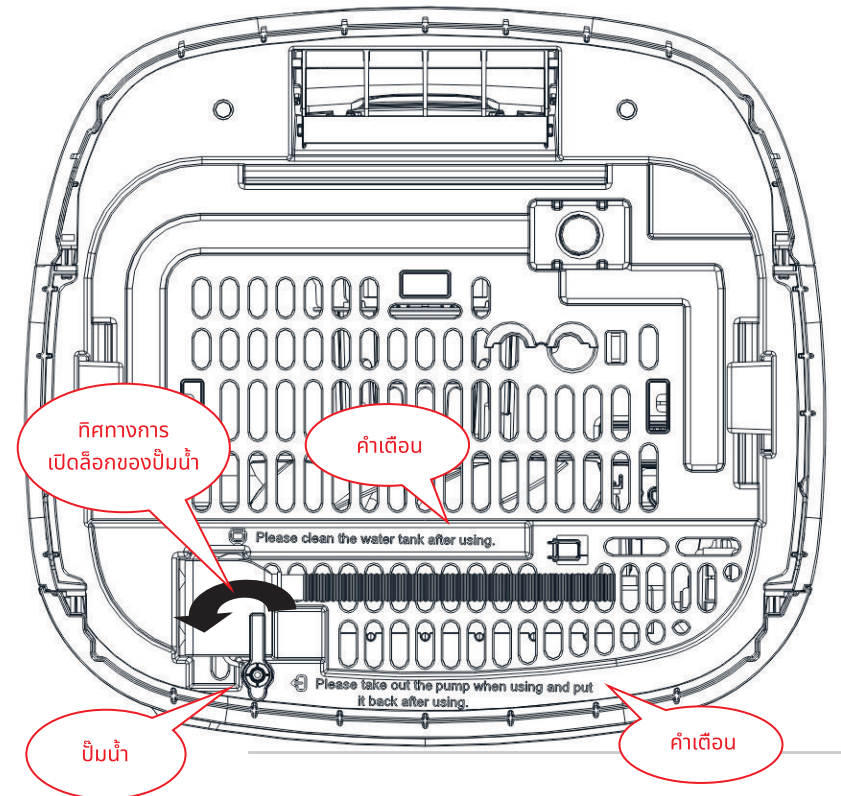

1. หลังจากนำตัวเครื่องออกจากกล่องแล้ว โปรดตรวจสอบคำแนะนำที่อยู่บริเวณด้านล่างของตัวเครื่อง (ดูรูปที่ 9 และรูปที่ 10)


 Please take out the pump when using and put it back after using.

รูปที่ 9

 Please clean the water tank after using.

รูปที่ 10


2. หมุนตัวล็อกบีมน้ำทวนเข็มนาฬิกา แล้วนำบีมน้ำและท่อน้ำออกจากช่องเก็บ (ท่อน้ำยึดไว้ด้วยตัวล็อก) จากนั้นปล่อยให้บีมน้ำและท่อน้ำระบายน้ำตกลงไปที่ก้นถังน้ำ

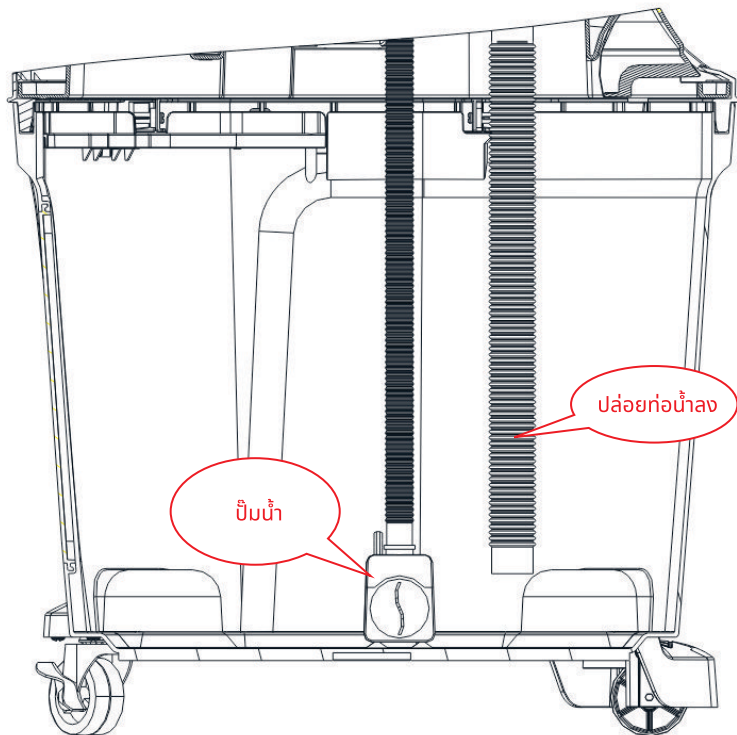

การใช้งานรีโมตคอนโทรล


เปิดฝาปิดแบตเตอรี่ที่ด้านหลังของรีโมตคอนโทรลก่อน ติดตั้งแบตเตอรี่ 3V CR2032 จากนั้นสามารถใช้งานรีโมตได้

วิธีเปิดฝาปิดแบตเตอรี่: กดตามทิศทางลูกศร 1 เพื่อปลดล็อกฝาปิด จากนั้นดึงออกตามทิศทางลูกศร 2 เมื่อใช้งาน กรุณาเปลี่ยนรีโมตไปที่ หัวรับสัญญาณ บนตัวเครื่องเมื่อแบตเตอรี่หมด ให้ดึงฝาปิดแบตเตอรี่ออกตามรูป และเปลี่ยนแบตเตอรี่ใหม่เป็น CR2032 3V ขณะเปลี่ยนแบตเตอรี่ โปรดสังเกต ขั้วบวกและขั้วลบ ของแบตเตอรี่หลังจากใส่แบตเตอรี่เรียบร้อยแล้ว ให้ใส่ฝาปิดแบตเตอรี่กลับเข้าที่ จากนั้นสามารถใช้งานได้ตามปกติ

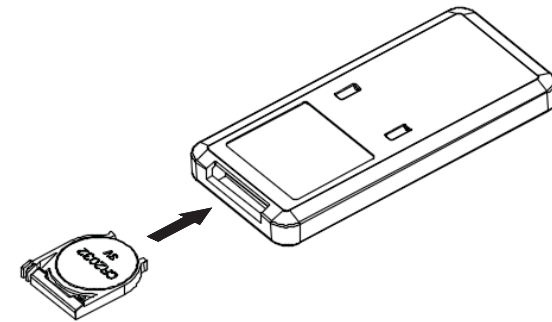


การติดตั้งล้อเลื่อน

จัดวางล้อเลื่อนตามหมายเลขที่กำหนด ติดตั้งขาล้อ “—” ที่ด้านหน้าของถังน้ำ และติดตั้งขาล้อ “二” และ “三” ที่ด้านหลังหากขาล้อ “二” และ “三” ไม่เหมือนกัน อย่าฝืนขันสกรู ให้สลับตำแหน่งขาล้อ “二” และ “三”

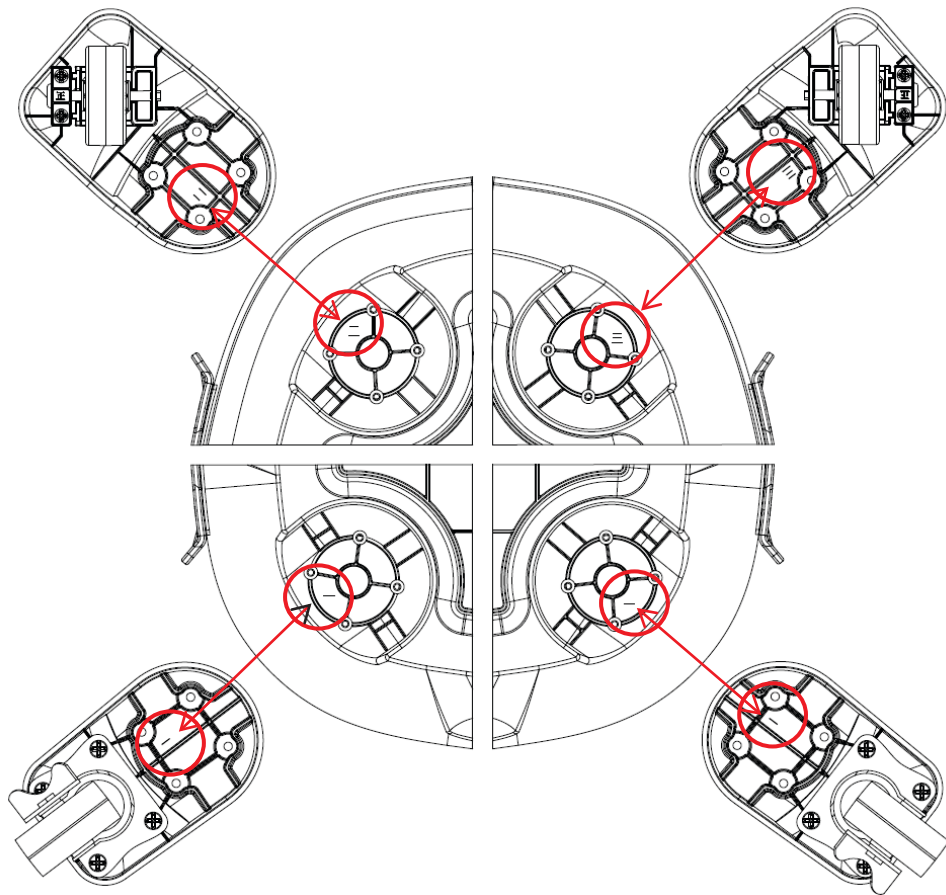

2. ขาตั้งล้อแต่ละตัวยึดกับถังน้ำโดยใช้สกรู TT4*14 จำนวนสี่ตัว

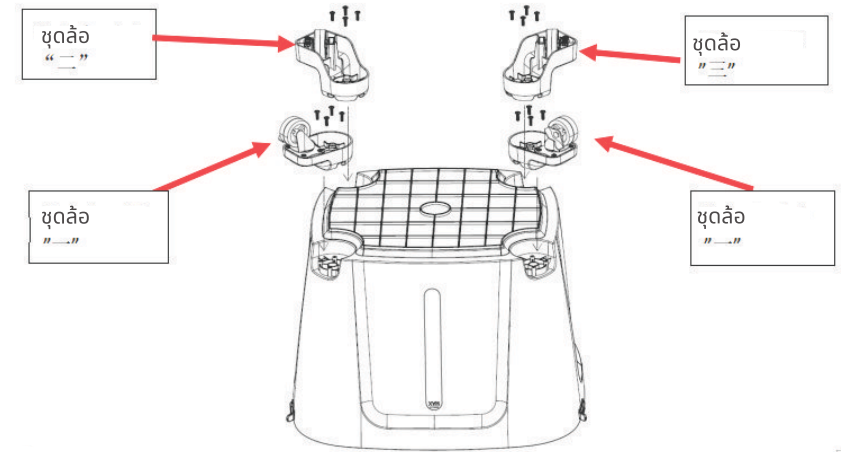

อันดับแรก ให้จับคู่แต่ละชิ้นตามหมายเลขที่ปรากฏในรูปภาพ ติดตั้งไปยังตำแหน่งที่ตรงกัน จากนั้นยึดเข้ากับถังน้ำด้วยสกรู

การทำความสะอาดและการบำรุงรักษา

• คำเตือน



ห้ามใช้สารเคมีในการทำทำความสะอาด


- ปิดสวิตช์ไฟและถอดปลั๊กไฟออก



โปรดถอดปลั๊กไฟทุกครั้งก่อนทำความสะอาด มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อตได้

- เมื่อพื้นผิวด้านนอกมีฝุ่น ให้เช็ดด้วยผ้านุ่ม หากพื้นผิวสกปรกมาก สามารถผสมน้ำที่มีอุณหภูมิต่ำกว่า 50°C กับน้ำยาทำความสะอาดชนิดอ่อน แล้วเช็ดทำความสะอาด

- ในการทำความสะอาด ห้ามใช้เบนซิน ทินเนอร์ หรือสารใด ๆ ที่อาจทำลายผิวด้านนอกได้ง่าย
- ทำความสะอาดตะแกรงกรองอากาศและชุดแผ่นทำความเย็น
หากมีสิ่งสกปรกติดอยู่ที่ตะแกรงกรองอากาศมากเกินไป จะส่งผลต่อประสิทธิภาพของการไหลของอากาศ จึงควรทำความสะอาดอย่างน้อยทุก ๆ สองเดือน
 1. ถอดปลั๊กไฟออก
 2. ดึงตะแกรงกรองอากาศขึ้นและใช้มือดึงออก เพื่อนำชุดแผ่นทำความเย็นออก (ขั้นตอนการทำงานแสดงไว้ด้านล่าง)
 3. เช็ดชุดแผ่นทำความเย็นในน้ำยาทำความสะอาดเป็นเวลาสักครู่ จากนั้นทำความสะอาดและผึ่งให้แห้ง

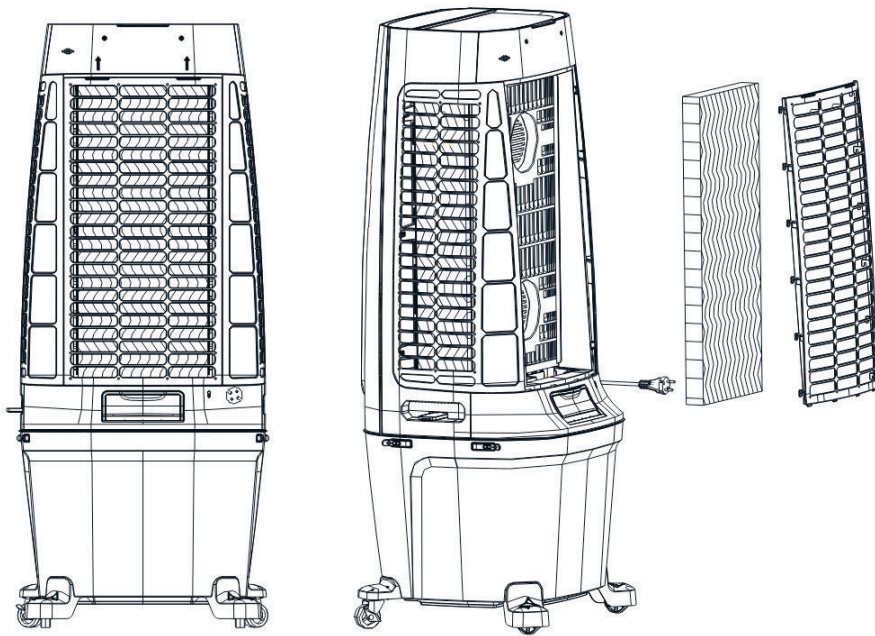

- การทำความสะอาดถังน้ำ
 1. ถอดปลั๊กไฟ หมุนปุ่มล็อกให้อยู่ในแนวนอน แล้วยกส่วนบนของเครื่องทิ้งเครื่องขึ้นเพื่อแยกถังน้ำออก
 2. ใช้ผ้าชุบน้ำยาทำความสะอาดเล็กน้อยเช็ดคราบตะกอนในถังน้ำ จากนั้นล้างด้วยน้ำ หลังจากนั้นสามารถเติมน้ำเสียทิ้งได้
- การทำความสะอาดตัวเครื่อง
 1. เครื่องทำความสะอาดพื้นผิวตัวเครื่องและเช็ดให้สะอาดด้วยผ้าชุบน้ำ ห้ามล้างโดยตรงด้วยน้ำเดือดขาด
 2. ห้ามใช้สารทำความสะอาดกัดกร่อนหรือสารละลายใด ๆ
 3. เมื่อทำความสะอาดตัวเครื่อง ให้ปิดสวิตช์ไฟและถอดปลั๊กไฟเสมอ มิฉะนั้นอาจเกิดไฟฟ้าช็อตได้
- การติดตั้งและใช้งานหลังทำความสะอาด
 1. ประกอบถังน้ำให้เรียบร้อยตามลำดับเพื่อให้ติดตั้งได้ถูกต้อง
 2. ต่อสายไฟและตรวจสอบการทำงานปกติของเครื่อง
- การบำรุงรักษา
 1. เมื่อไม่ใช้งานเครื่องเป็นเวลานาน ควรถอดปลั๊กไฟ เพื่อจัดเก็บและป้องกันฝุ่นเข้าตัวเครื่อง
 2. ก่อนจัดเก็บ ให้ตรวจสอบให้แน่ใจว่าแผ่นทำความเย็นและตะแกรงกรองแห้งสนิท และถังน้ำไม่มีน้ำค้างอยู่

ข้อมูลทางเทคนิค

รุ่นสินค้า	AN-ACC5520
แรงดันไฟฟ้าที่กำหนด	220 VAC
ความถี่ที่กำหนด	50Hz
กำลังไฟฟ้าที่กำหนด	200W
ระดับเสียง (ความเร็วสูง)	≤68dB
ปริมาณลมที่กำหนด	3600m³/h
ปริมาณความชื้นที่เพิ่มได้	3500mL/h
ERP	7W/W
ขนาดสินค้า	กว้าง 523 มม. × ลึก 476 มม. × สูง 1252 มม.
น้ำหนักสินค้า	16.3 กก.
น้ำหนักรวมบรรจุภัณฑ์	20.1 กก.
สภาพแวดล้อมที่เหมาะสม:	ความชื้นสัมพัทธ์ไม่เกิน 95% (25°C)

การคุ้มครองสิ่งแวดล้อม




เครื่องหมายนี้ระบุว่าสินค้านี้ไม่ควรถูกทิ้งรวมกับขยะในครัวเรือนทั่วไปในสหภาพยุโรป เพื่อป้องกันความเสียหายต่อสิ่งแวดล้อมหรือสุขภาพของมนุษย์จากการทิ้งขยะอย่างไม่ควบคุม ควรรีไซเคิลอย่างถูกวิธีเพื่อส่งเสริมการใช้ทรัพยากรอย่างยั่งยืน ในการส่งคืนอุปกรณ์ที่ใช้แล้ว กรุณาใช้ระบบรับคืนและเก็บรวบรวม หรือสอบถามผู้จำหน่ายที่ซื้อสินค้า พวกเขาสามารถรับสินค้านี้ เพื่อนำไปรีไซเคิลอย่างปลอดภัยต่อสิ่งแวดล้อม

Air Cooler

AN-ACC5520

User's Instruction

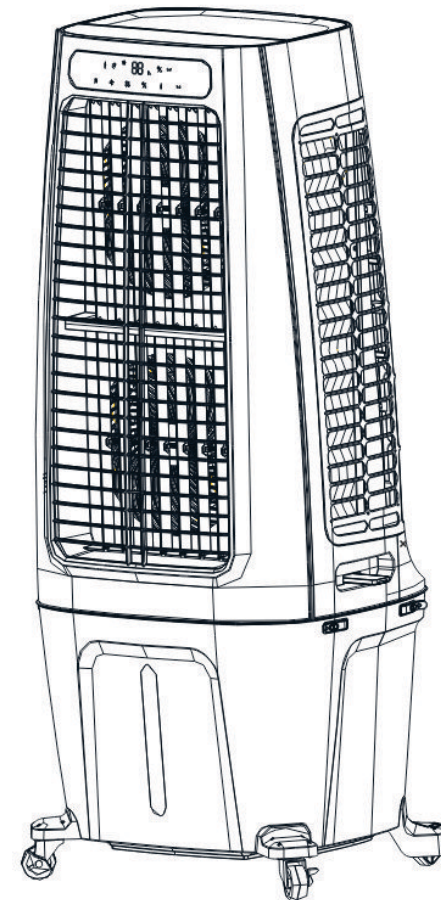

Thank you for your trust and support, and buying our latest multifunctional luxury air cooler. For your better use of this product, please read the User Guide carefully before use, in order to play the best performance of the device and keep this User Guide properly for future reference. We hope that our product can give your life convenience and fun.

CONTENT

I. SAFETY WARNINGS AND PRECAUTIONS	2
II. FUNCTIONS.....	4
III. COMPONENTS.....	5
IV. INSTALLATION.....	8
V. CLEANNESS AND MAINTENANCE.....	19
VI. SPECIFICATION.....	21

Safety Warnings and Precautions

The appliance is only for household and indoor use.

1. When using this machine, you must use a qualified power outlet that has been checked and met the requirements. Please confirm the voltage used when relocating.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the appliance. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Unplug the appliance during filling and cleaning.
6. Do not touch the power cord plug with wet hands, there is a danger of electric shock.
7. When unplugging the power cord, do not pull the wire.
8. Do not fold or place heavy objects on the power cord.
9. It is strictly forbidden to insert foreign objects such as wooden sticks and metal sticks into the air inlet and outlet, which will cause leakage, short circuit and the possibility of product damage.
10. Do not spray pesticides and flammable sprays around the product, which may damage the product.
11. Avoid blowing the product air outlet directly to children for a long time, which may cause children to get sick or affect their health.
12. When using, make sure that the plug of the power cord is free of foreign objects, and insert the plug completely.
13. Abnormal handling. When the product has peculiar smell and abnormal sound during use, please stop using it immediately and unplug the power supply.

14. After adding water to the machine, do not tilt or collide when placing or moving it to prevent splashing. If the product has been dumped and there is water in the machine, unplug it immediately and wait for 24 hours to dry before turning it on.
15. The water level of the water tank should not exceed the maximum water level line.
16. When the water tank of the product is full of water, do not grab the handle to lift the whole machine, otherwise the water in the water tank will overflow, you can only push the handle to move the product, and only when it is confirmed that there is no water or very little water in the water tank, you can grab the handle to move the product. Lift the whole machine.
17. When humidifying, it is strictly forbidden to disassemble and assemble the air filter net and the cooling pad bracket, which will cause water droplets to spray out of the air outlet.
18. When going out or not using the machine for a long time, you must turn off the machine and pull out the power cord plug from the socket.
19. If the product fails, please send it to the repair station or notify the after-sales service center, and do not disassemble or replace the parts without authorization. Arbitrary disassembly and modification will affect the safety of the product.
20. Do not ingest battery, Chemical Burn Hazard;
21. This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death;
22. Keep new and used batteries away from children.
23. If the battery compartment does not close securely, stop using the product and keep it away from children.
24. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
25. The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and that they are disposed of safely
26. Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
27. Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.


28. Never leave water in the reservoir when the appliance is not in use.
29. Empty and clean the humidifier before storage. Clean the humidifier before next use.

FUNCTIONS


- (1) Touch Control;
- (2) 3 Wind speeds: high, medium, low;
- (3) Wind mode: normal /natural/sleep wind ;
- (4) Timing function: timing is 1-12H;
- (5) Cooling/humidifying function;
- (6) Dry air function;
- (7) Remote control function;
- (8) Water shortage alarm function;
- (9) In plug in state, when you turn off the machine, then turn on again, it would have smart memory function, which is back to your setting before;
- (10) Removable water tank for easy storage;
- (11) Spray water circulation refrigeration technology, large water circulation volume, faster cooling;
- (12) 1-12 hours scheduled ON function;
- (13) The indicator light turns dark after 1 minute of no operation ;
- (14) Large casters, easy to move;
- (15) Screen off function ;
- (16) Top water filling;
- (17) Left and right swing;

COMPONENT

• Structure

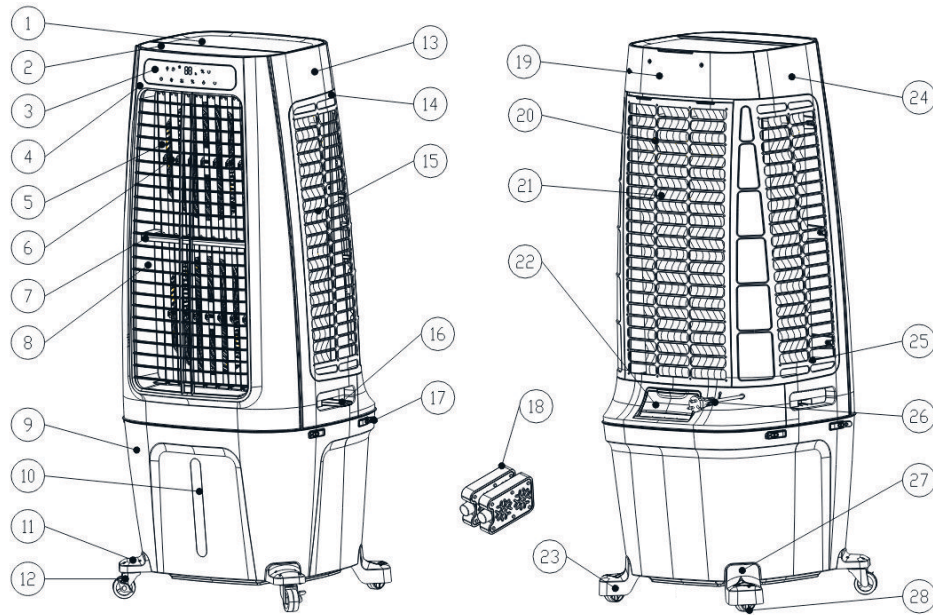


- | | | |
|----------------------------------|----------------------|----------------------------------|
| 1. Sink cover | 2. Top cover | 3. Display window |
| 4. Front shell | 5. Vertical blade | 6. Vertical blade connecting rod |
| 7. Vertical blade fixing bracket | 8. Air grille | 9. Water tank |
| 10. Water gauge | 11. Caster bracket 1 | 12. Casters with brakes |
| 13. Right side shell | 14. Right filter net | 15. Side cooling pad |
| 16. Remote control | 17. Fixed buckle | 18. Ice packs (2pcs) |
| 19. Back shell | 20. Left filter net | 21. Back cooling pad |
| 22. Water refilling gate | 23. Caster bracket 2 | 24. Left side shell |
| 25. Left filter net | 26. Power cord | 27. Caster bracket 3 |
| 28. Casters | | |

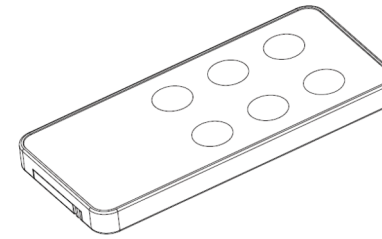

Remote control

- The following picture is AN-ACC5520 operation panel diagram. It is express in English here. When delivered, the function should be described in official language of the importing country.

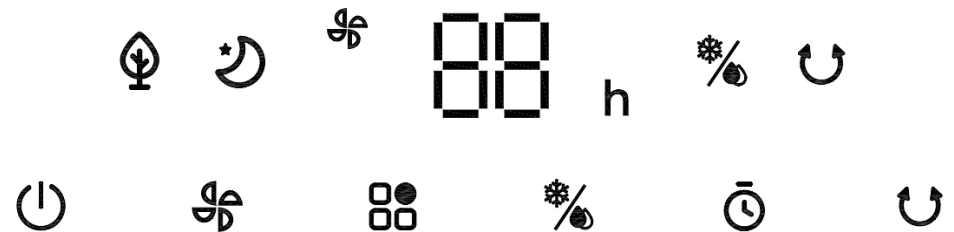

1.ON/OFF“”

2. Left & Right Swing“”


3. Cooler/Humidifier“”

4. Wind speed button “”


5. Timer (1-12H) “”

6. Wind mode “”

- Diagram for operation panel of remote control shall be subject to words in the language of the country

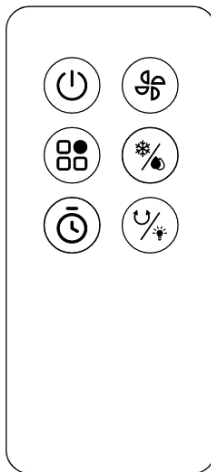

- Affix : Ice pack

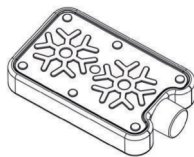

- Usage of ice packs:

Ice packs have a cold storage and heat preservation characteristics, which can absorb the heat in the water, keep the water temperature in the water tank lower than the ambient temperature for several hours, and make the wind from the air cooling fan cooler.

- Put the ice pack into the refrigerator until it freezes completely.
- Put the frozen ice pack into the water tank. After about 10 minutes, the water temperature in the water tank will be lower than the ambient temperature.
- The appliance is equipped with two ice packs to ensure continuous use.
- Do not open the cover of the ice box or swallow its contents.

Product installation and usage

- Method of installation

After the product takes out the packaging, assemble the upper part of the machine and the water tank can be used.

- The use method of each function button

(1) “” ON/OFF button:

Connect the power supply, it will emit Bi~Bi~ sound and enter the standby state. Press the  ON button to start the machine, the machine will default to normal wind and low wind operation, and the digital tube displays: 1 ; and then press  again to OFF.

(2) “” Wind speed button:

In the power-on state, press the “” button, wind speed button enters the wind speed adjustment mode: Low wind→ medium wind→ high wind→ low wind... cycle in sequence

Digital tube indicator light: Press "1" → "2" → "3" → "1"... cycle in sequence

In power on state, Press and hold the “” button for 3s to enter the dry wind function, the default high wind, and continue to run for 20 minutes. Enter the standby state. In dry air mode, the wind speed indicator light flashes, and the digital tube and other displays are turned off.

During the operation of the dry air function, except for the “” ON/OFF button, other function keys are invalid. The dry air function will automatically shut down after the operation is completed.

(3) “” Timing function button:

In power on state, Press the “” Timing button to enter the timing mode and set the shutdown timer from 1-12H.

The timing indicator light “” lights up and the digital tube displays the set timing.

The digital tube displays the timing time and current wind speed alternately at 10-second intervals.

In power-off state, press the “” Timing button to enter the scheduled power-on mode and set the scheduled power-on time from 1-12H.

(4) “” Wind mode button:

Press the “” Wind mode button to make the wind modes are switched: normal wind → natural wind → sleeping wind → normal wind..., and the corresponding indicator lights are on.

(1) Normal wind: three wind speed levels: low, medium and high, running at a fixed speed.

(2) Natural wind: low, medium and high wind speed level, the digital tube displays 1 → 2 → 3, and runs according to the speed change rule preset by the program. Imitate the blowing effect of nature.

(3) Sleep wind: There are three wind speed gears: low, medium and high. The digital tube displays 1→2 →3 accordingly. The wind level are downshifted according to the rules preset by the program. This prevents people from feeling uncomfortable due to excessive wind after falling asleep.

Level	Operating way	Changes of digital tube
Low	Low-speed normal wind is always running	1 (No change)
Medium	30 minutes of medium-speed normal wind operation → low-speed normal wind operation all the time.	2-->1
High	30 minutes of high-level normal wind operation → 30 minutes of medium-level normal wind operation → low-level normal wind operation all the time.	3-->2-->1

(5) “” Cooler/Humidifier button:

In the power-on state, press the “” Cooler/Humidifier button can turn on and off the Cooler/Humidifier function. When there is a lack of water, the Cooler/Humidifier function will

be automatically turned off, and the "Bi~ Bi~" alarm will sound 10 times, and the indicator light will keep flashing until the Cooler/Humidifier button is pressed again to turn off the indicator light.

Note: When the machine is running at medium or high wind speed, each time the cooling/humidification function is turned on, the wind speed will be reduced for 150 seconds. Normal wind and natural wind will be switched to normal wind low gear, and sleep wind will be switched to low gear. After running humidification for 150 seconds, the original gear will be restored. The wind speed key and mode wind key cannot be adjusted during this period.

(6) “↺↻” Left & Right Swing button:

In the power-on state, short press the “↺↻” Left & Right Swing button can turn on or off the wind swing function, and the indicator light will turn on or off:

Long press the “↺↻” Left & Right Swing button for 3 seconds to turn off the screen and all indicator lights will turn off. Press any key to restore.

(7) Other functions:

① Dimming mode: If no button is pressed within 1 minute after any indicator light is on, the indicator light will dim (1/3 of the original brightness). If the button is pressed again, the indicator light will brighten.

② Non-stop power-off memory function: If it is not the first time to start the machine,

press the “⏻” button in standby mode, and the machine will maintain the state before shutdown after startup, except for the timing, sleep air and dry air functions.

- Refilling water:

If you need to turn on the Cooler/Humidifier function, please add water to the water tank. There are three ways of refilling water as below:

Refilling method 1: First open the water filling gate and slowly pour water into the water tank (Figure 1, Figure 2): After adding water, close the water door again.

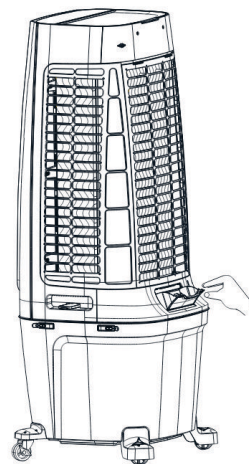


Figure 1

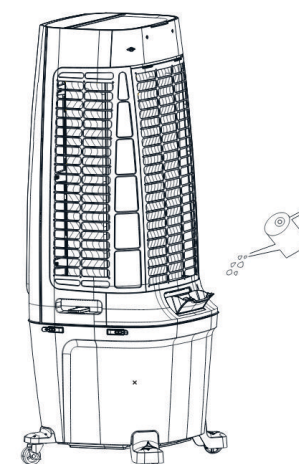


Figure 2

Refilling method 2: First open the four fixing buckles of the water tank to separate the machine body from the water tank, and slowly inject water into the water tank (Figure 3, Figure 4): After adding water, assemble the machine body and the water tank and fasten the fixing buckles.

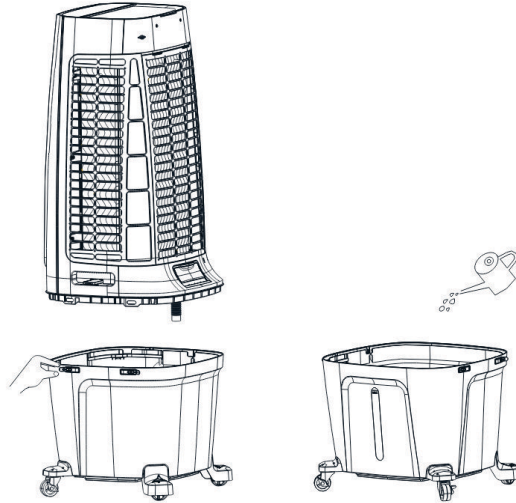


Figure 3

Figure 4

Refilling method 3: Top refilling water, hold the raised part of the sink cover with your hand, gently pull it up, then gently pull it back to the bottom, flip the sink cover over until it is fully open, and slowly pour water into the water tank (Figure 5, Figure 6, Figure 7). After adding water, close the sink cover.

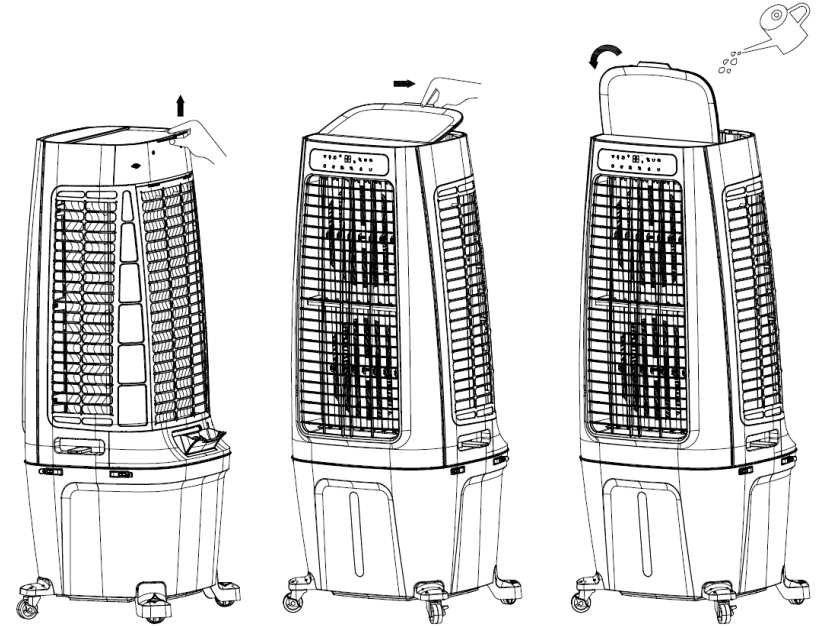


Figure 5

Figure 6

Figure 7

When adding water manually, please pay attention to the water level display on the front of the air conditioner fan water tank (Figure 8).


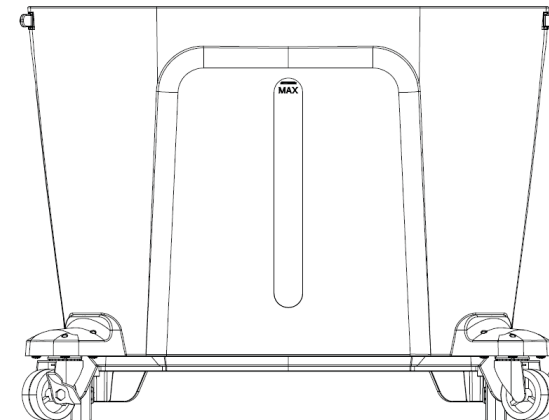


Figure 8

1. When adding water, please be careful not to exceed the highest water level.
 2. Be sure to use clean tap water.
 3. Warm reminder: When the machine is used for the first time, if there is a slight odor and the water in the water tank has a slight discoloration, it is normal, non-toxic and harmless, and will not affect your health.
- Use of water pump:

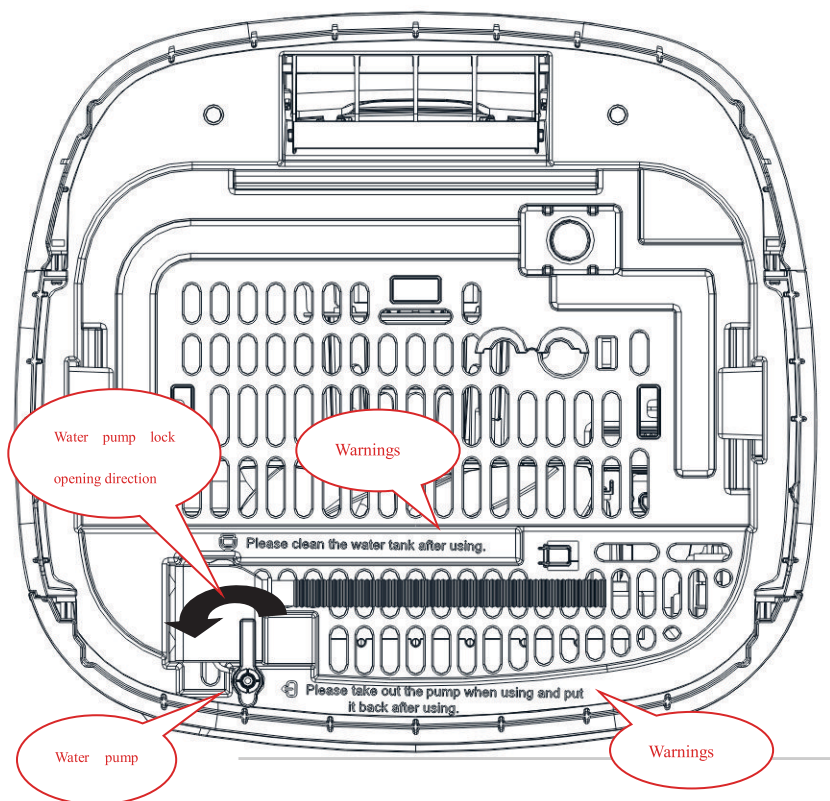

1. After taking out the body, please check the instructions on the bottom (Figure 9, Figure 10)


 Please take out the pump when using and put it back after using.

Figure 9

 Please clean the water tank after using.

Figure 10

2. Rotate the water pump lock counterclockwise and remove the water pump and water pipe from the storage slot (the water pipe is fixed by the buckle), so that the water pump and drain pipe can naturally fall to the bottom of the water tank.

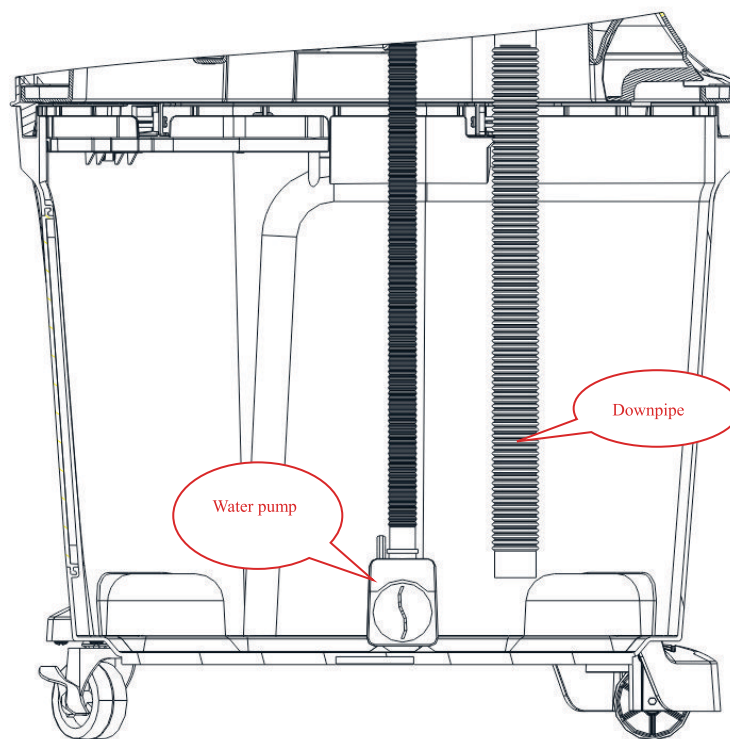


Use of remote control:

1. First open the battery cover on the back of the remote control, install a 3V CR2032 battery, and you can use it.

Way to open the battery cover: First press in the direction of arrow 1 in the figure to disengage the buckle on the battery cover, and then pull it out in the direction of arrow 2


2. When using, please align it with the receiving head in the machine body.

3. When the battery is exhausted, pull out the battery cover as shown in the figure and replace it with a new battery (CR2032 3V). When replacing the battery, please pay attention to the positive and negative poles of the battery; then put the battery cover back into place and it can be used.

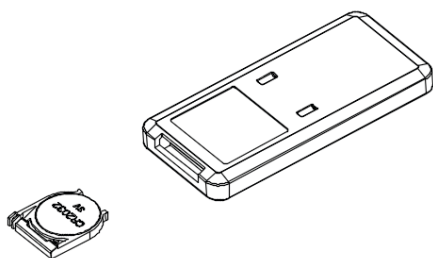


• Installation of casters:

1. Place the casters according to their corresponding numbers. Install caster bracket “一” in front of the water tank, and caster brackets “二” and “三” behind it. If brackets “二” and “三” are uneven, do not force them with screws. Swap brackets “二” and “三”.

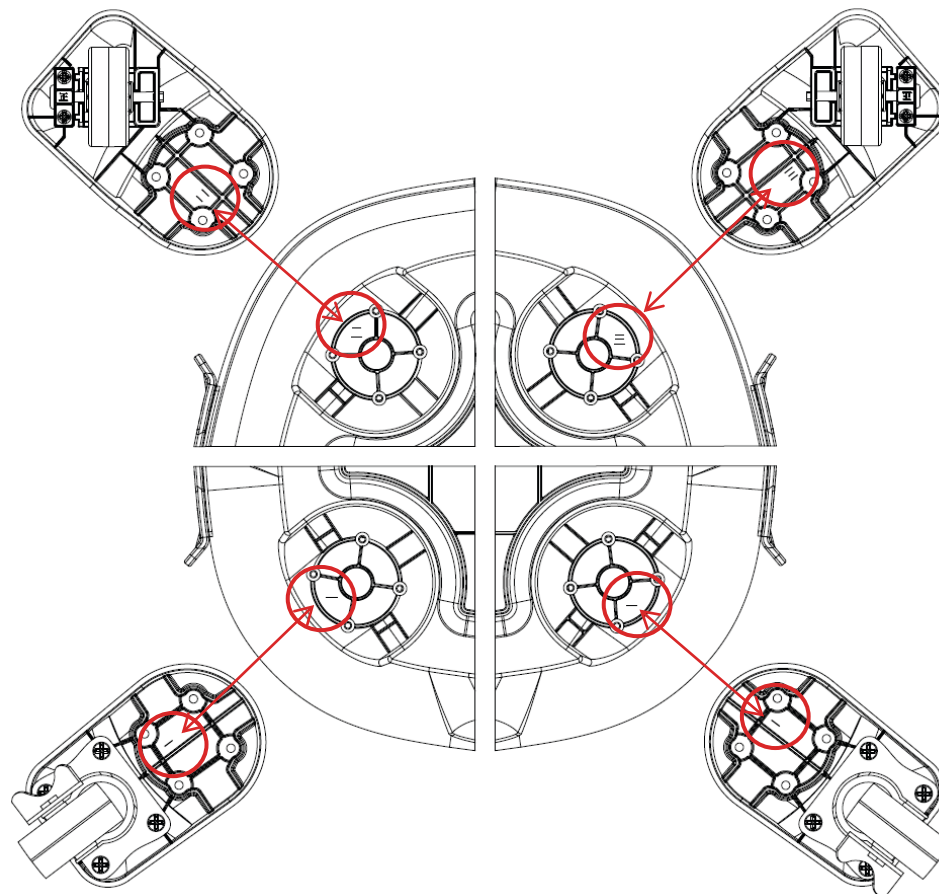

- Each caster bracket is fixed to the water tank with four TT4*14 screws.

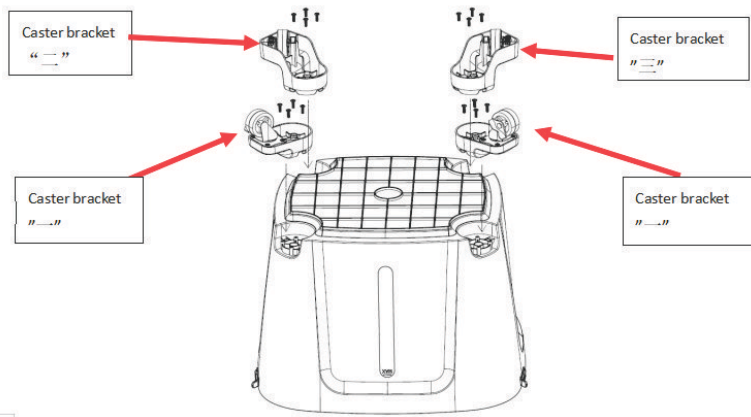

First, match them one by one according to the serial numbers in the picture, install them to the corresponding positions, and then fix them on the water tank with screws.

V. Cleanness and Maintenance

• Reminder



Don't use chemicals during cleaning.

- Turn off the power and unplug the power plug.



Please be sure to unplug the power line during cleaning, otherwise it may cause electric shock.


- When the outer surface is dusty, wipe it with a soft cloth; when the surface is too dirty, it can be mixed with water below 50 degrees Celsius and a neutral detergent, then wiped with a soft cloth and dried.

- When cleaning, do not use gasoline, thinner, thinner and any substances that can easily damage the outer surface

• Clean the air filter net and cooling pad components

If excessive foreign matter is attached to the air filter net, it will affect the air effect, so clean it at least every other month.

- Plug out the power cord
- Pull up the net and pull the hand, take out the cooling pad assembly (the operation is shown below).
- Soak the cooling pad components with detergent for a few minutes, clean and dry them.

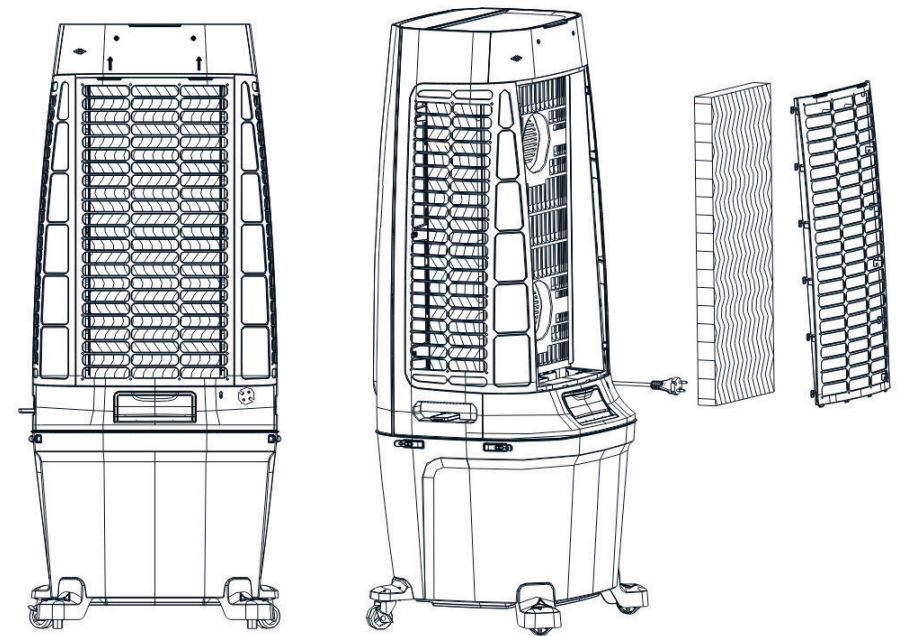

• Water tank cleaning

- Unplug the power supply, rotate the fixed button knob to the horizontal direction, and lift the upper part of the whole machine to separate the water tank away.
- With a towel with a little detergent to wipe the scale in the water tank, and then clean with water after the sewage can be pour out.

- Body surface cleaning

1. Clean the surface of the body and wipe it clean with a wet cloth. Direct washing with water is strictly prohibited.
2. Do not use corrosive detergent or solvent cleaning.
3. When cleaning the body, always turn off the power switch and unplug the power cord, otherwise there is the possibility of electric shock.

- Install and use after cleaning

1. Assemble the water tank in order to ensure the correct installation.
2. Connect to the power supply to confirm the normal operation of the product.

- Maintenance

1. When the product is not in use for a long time, the power plug should be unplugged to package the product and prevent dust from entering the body.
2. Before packaging, please ensure that the cooling pad and filter screen are dry, and there is no water in the water tank.

VI. Specification

Product Model	AN-ACC5520
Rated voltage	220 VAC
Rated frequency	50Hz
Rated power	200W
Noise level (Hi-speed)	≤68dB
Rated air flow	3600m ³ /h
Rated humidification	3500mL/h
ERP	7W/W
Product size	L523mm×W476mm×H1252mm
Products weight	16.3Kg
Packing weight	20.1Kg
Applicable environment	Relatively humidity less than 95% (25°C)

Environmental Protection



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

