

Aconatic

คู่มือการใช้งาน
MOVE SCREEN
SMART MONITOR
32SMU8000AN PRO

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งาน
เก็บคู่มือนี้ไว้ใช้อย่างถึง

สารบัญ

รายการบรรจุภัณฑ์	1
คำเตือนด้านความปลอดภัยและข้อควรระวัง.....	2
คำแนะนำในการติดตั้ง.....	6
การปรับมุมและความสูง.....	9
การเชื่อมต่ออุปกรณ์ต่างๆ	10
การทำงานของปุ่มต่างๆ.....	10
การใช้งานแบบเดือรี	11
การใช้งานเบื้องต้น	12
การเปิด/ปิดเครื่อง.....	12
การสั่งงานด้วยระบบสัมผัส	12
การเชื่อมต่อเครือข่ายไร้สาย.....	12
คำชี้แจงสำคัญเกี่ยวกับบริการเครือข่าย.....	13
การแก้ไขปัญหาเบื้องต้น.....	14
ข้อมูลจำเพาะ.....	15


รายการบรรจุภัณฑ์




หน้าจอแสดงผล




ฝาหลัง



ฐานรอง

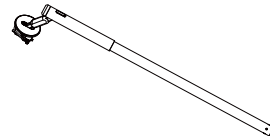


เสายึดหน้าจอ



คู่มือใช้งาน



สายไฟ



อะแดปเตอร์



สกรู

หากไม่พบอุปกรณ์ตามรายการด้านบน กรุณาติดต่อตัวแทนจัดจำหน่าย

คำเตือนด้านความปลอดภัยและข้อควรระวัง

ปัจจัยด้านความปลอดภัยส่วนบุคคลได้รับการพิจารณาในระหว่างการออกแบบผลิตภัณฑ์ และทดสอบผลิตภัณฑ์ อย่างเคร่งครัดก่อนส่งมอบ อย่างไรก็ตาม การติดตั้งและใช้งานอย่างไม่ถูกต้องอาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้ หรืออันตรายอื่นๆ เพื่อให้แน่ใจว่าจะใช้งานได้อย่างปลอดภัยและยืดอายุการใช้งานให้เกิดประสิทธิภาพสูงสุด โปรดอ่านและทำความเข้าใจคำแนะนำการใช้งานทั้งหมด และปฏิบัติตามข้อควรระวังด้านความปลอดภัยต่อไปนี้อย่างละเอียดถี่ถ้วน ก่อนใช้ผลิตภัณฑ์ และเก็บคู่มือนี้ไว้เพื่อใช้เป็นข้อมูลในอนาคต



เพื่อลดความเสี่ยงจากไฟฟ้าช็อต โปรดอย่าถอดแผ่นปิด (หรือแผ่นด้านหลัง) ออก ผลิตภัณฑ์ไม่มีส่วนประกอบใดๆ ที่ผู้ใช้สามารถซ่อมบำรุงเองได้ โปรดปรึกษากับเจ้าหน้าที่บริการที่มีคุณสมบัติเหมาะสมเพื่อจัดเตรียมบริการ



ระวังอันตรายจากแรงดันไฟฟ้า หากไม่มีการป้องกันจนวนในตัวเรือนผลิตภัณฑ์ และความแรงของแรงดันไฟฟ้าสูงเพียงพอที่จะก่อให้เกิดความเสี่ยงต่อการเกิดไฟฟ้าช็อต



คำเตือน

อาจส่งผลให้เกิดการเสียชีวิตหรือบาดเจ็บรุนแรง



แสดงถึงพฤติกรรมหรือการกระทำที่พึงหลีกเลี่ยงหรือห้ามกระทำโดยเด็ดขาด



ข้อควรระวัง

มีความเสี่ยงต่อการบาดเจ็บเล็กน้อยหรือเกิดความเสียหายต่อทรัพย์สิน



แสดงถึงขั้นตอนหรือวิธีการปฏิบัติที่จำเป็นต้องดำเนินการอย่างเคร่งครัด

- หากเกิดสถานการณ์ต่อไปนี้ ให้ปิดเครื่องทันที ถอดปลั๊กไฟออกจากเต้าเสียบ และติดต่อเจ้าหน้าที่เพื่อทำการซ่อมแซม
 - เครื่องมีเสียงหรือกลิ่นที่ผิดปกติหรือมีอาการผิดปกติอื่นๆ ที่ชัดเจน
 - สายไฟหรือปลั๊กไฟชำรุด
 - เครื่องได้รับความเสียหายจากการตก กระแทก หรือถูกกระแทก ของเหลวหรือสิ่งแปลกปลอมตก ลงไปบนเครื่อง
- ในกรณีที่มีการรั่วไหลของก๊าซไวไฟ ห้ามเสียบ/ถอดปลั๊กไฟของเครื่องหรือเครื่องใช้ไฟฟ้าอื่นๆ แต่ให้ปิดวาล์วที่รั่วไหล และเปิดประตูและหน้าต่างทันที



คำเตือน



- ผลิตภัณฑ์นี้สามารถใช้ได้กับแหล่งจ่ายไฟที่ระบุไว้บนป้ายชื่อเท่านั้น หาก你不แน่ใจเกี่ยวกับชนิดของแหล่งจ่ายไฟที่ใช้อยู่ กรุณาปรึกษาผู้จำหน่ายผลิตภัณฑ์ในพื้นที่ของคุณ
- ห้ามถอดแยกอะแดปเตอร์หรือสายไฟ เนื่องจากอาจทำให้เกิดไฟไหม้หรือไฟฟ้าช็อตได้
- กรุณาวางอะแดปเตอร์อย่างระมัดระวัง เพื่อหลีกเลี่ยงการตกหล่นหรือการกระแทก
- การกระแทกอาจทำให้ผลิตภัณฑ์เสียหายได้

คำเตือนด้านความปลอดภัยและข้อควรระวัง



คำเตือน

- โปรดวางผลิตภัณฑ์บนพื้นเรียบ อย่าวางผลิตภัณฑ์ในตำแหน่งที่ไม่มั่นคงหรือเอียง มิฉะนั้น อาจเกิดการตกและเสียหายได้ ซึ่งอาจทำให้ได้รับบาดเจ็บหรือเสียชีวิตได้
- ควรใช้ขาตั้งและวิธีการติดตั้งตามที่แนะนำเสมอ
- ห้ามให้เด็กปีนขึ้นไปบนผลิตภัณฑ์ มิเช่นนั้น ผลิตภัณฑ์จะล้มลงมา และอาจได้รับบาดเจ็บได้
- เพื่อหลีกเลี่ยงความเสี่ยงในการกลืน ควรเก็บอุปกรณ์ขนาดเล็กให้พ้นจากการเข้าถึงของเด็ก
- ห้ามวางผ้าหรือวัสดุอื่นใดระหว่างผลิตภัณฑ์และพื้น
- ห้ามวางสิ่งของใดๆ ลงบนผลิตภัณฑ์
- ห้ามวางผลิตภัณฑ์:
 1. ในสภาพแวดล้อมที่มีความชื้น ร้อน หนาว หรือมีฝุ่นละอองมากเกินไป หรือได้รับแสงแดด
 2. ในสภาพแวดล้อมที่มีการเก็บหรือใช้สารไวไฟหรือวัตถุระเบิด
 3. ในสภาพแวดล้อมที่มีก๊าซติดไฟหรือกัดกร่อน
 4. ภายในหรือใกล้ห้องน้ำ ห้องครัว หรือสภาพแวดล้อมการทำงานอื่นที่มีความชื้นสูง หรือมีแหล่งกำเนิดความร้อน ใยหินหรือควันน้ำมัน
- ห้ามใช้เตารีดไฟฟ้าที่ชำรุดหรือไม่เหมาะสม ควรเสียบปลั๊กไฟกับเตารีดไฟฟ้าให้สนิท
- หลีกเลี่ยงปลั๊กไฟและเตารีดไฟฟ้าจากฝุ่นละออง
- อย่าทำให้สายไฟได้รับความเสียหาย:
 1. ห้ามดัดแปลงสายไฟ
 2. ห้ามวางสิ่งของหนักทับสายไฟ
 3. เก็บสายไฟให้ห่างจากแหล่งความร้อน
 4. ห้ามดึงสายไฟขณะถอดปลั๊กไฟ โปรดจับที่ปลั๊กไฟแทนสายไฟ
- การใช้ปลั๊กไฟจำนวนมากเกินไปกับเตารีดไฟฟ้าเพียงเตาเดียวอาจทำให้เกิดไฟไหม้เนื่องจากกินไฟมากเกินไป
- เพื่อหลีกเลี่ยงความเสี่ยงจากไฟฟ้าช็อตหรือไฟไหม้ โปรดเก็บเครื่องให้ห่างจากเปลวไฟ (เช่น เทียนที่จุดอยู่)
- ห้ามเทภาชนะที่มีน้ำลงบนผลิตภัณฑ์ หรือให้หยดน้ำหรือกระเซ็นใส่ เพราะอาจทำให้เกิดไฟฟ้าช็อตหรือไฟไหม้ได้
- เพื่อหลีกเลี่ยงความเสี่ยงต่อการเกิดไฟฟ้าลัดวงจร และไฟฟ้าช็อต อย่าใส่ของมีคม โลหะ หรือของเหลวเข้าไป หรือให้สิ่งเหล่านี้สัมผัสตู้ระบายอากาศหรือข้อต่อสัญญาณ
- ช่องระบายอากาศในตัวเครื่องได้รับการออกแบบมาเพื่อป้องกันไม่ให้ภายในร้อนเกินไปและช่วยให้ทำงานได้อย่างมีประสิทธิภาพในระยะยาว ควรวางเครื่องโดยไม่ปิดกั้นช่องระบายอากาศดังกล่าว ควรเว้นระยะห่างรอบ ๆ ผลิตภัณฑ์อย่างน้อย 4 นิ้วหรือ 10 ซม. เพื่อรับประกันการระบายอากาศที่ดี
- ฐานของผลิตภัณฑ์มีแบตเตอรี่ในตัว โปรดใช้งานด้วยความระมัดระวัง

คำเตือนด้านความปลอดภัยและข้อควรระวัง



คำเตือน

- หากแบตเตอรี่รั่ว ให้หยุดใช้ทันทีเพื่อหลีกเลี่ยงการสัมผัสกับผิวหนังและดวงตา การไม่ระมัดระวังอาจส่งผลให้สูญเสียการมองเห็นหรือได้รับบาดเจ็บจากการถูกไฟไหม้ หากส่วนใดส่วนหนึ่งของร่างกายของคุณสัมผัสกับของเหลวที่รั่วออกมาแล้วมีอาการผิดปกติ โปรดล้างด้วยน้ำสะอาดที่เพียงพอ และปรึกษาแพทย์
- โปรดทิ้งแบตเตอรี่อย่างถูกต้อง การกำจัดแบตเตอรี่อย่างไม่ถูกต้องอาจมีความเสี่ยงต่อการระเบิดหรือไฟไหม้
- อย่าให้ผลิตภัณฑ์ (โดยเฉพาะแบตเตอรี่) ถูกกับไฟฟ้า
- ห้ามให้เครื่องถูกปลวไฟ เครื่องทำความร้อนไฟฟ้า หรือแสงแดดโดยตรง มิฉะนั้นอาจทำให้เกิดไฟฟ้าช็อต บาดเจ็บ หรือเกิดเพลิงไหม้ได้
- ในการชาร์จแบตเตอรี่ อย่าใช้แหล่งจ่ายไฟหรือวงจรใดๆ เกินช่วงที่กำหนด มิฉะนั้นอาจทำให้แบตเตอรี่เสียหายหรือเกิดไฟไหม้ได้
- ควรระมัดระวังในการใช้แบตเตอรี่เนื่องจากมีความเสี่ยงต่อการเกิดไฟไหม้หรือการระเบิดได้
- ทำความสะอาดช่องเสียบที่ชาร์จด้วยผ้าเนื้อนุ่ม หากมีสิ่งสกปรกหรือสิ่งแปลกปลอมอื่น ๆ อยู่ แบตเตอรี่จะไม่สามารถชาร์จได้ตามปกติ มิฉะนั้นอาจเกิดไฟไหม้ได้
- หากแบตเตอรี่หมดและไม่ได้ใช้งานเป็นเวลานาน อาจเป็นไปได้ว่าไม่สามารถชาร์จแบตเตอรี่ได้หรือแบตเตอรี่อาจมีอายุการใช้งานสั้นลง
- ห้ามถอด ประกอบ หรือทำให้แบตเตอรี่เกิดไฟฟ้าลัดวงจร มิฉะนั้น อาจทำให้เกิดไฟฟ้าช็อต บาดเจ็บ หรือเกิดเพลิงไหม้ได้
- ห้ามทิ้งแบตเตอรี่ลงในกองไฟหรือเตาเผา หรือห้ามบีบหรือดัดแบตเตอรี่โดยเด็ดขาด มิฉะนั้นอาจทำให้เกิดการระเบิดได้
- ห้ามวางแบตเตอรี่ไว้ในสภาพแวดล้อมที่มีอุณหภูมิสูงเกินไป เพราะอาจทำให้แบตเตอรี่ระเบิดหรือเกิดการรั่วไหลของของเหลวหรือก๊าซที่ติดไฟได้
- อย่าวางแบตเตอรี่ไว้ในที่ที่มีความกดอากาศต่ำมากเกินไป เพราะอาจทำให้แบตเตอรี่ระเบิดหรือของเหลวและก๊าซที่ติดไฟได้รั่วไหลได้
- ⚡ เพื่อหลีกเลี่ยงความเสี่ยงจากการถูกไฟฟ้าช็อต อย่าสัมผัสปลั๊กไฟด้วยมือเปียก
- ⚠ ห้ามใช้งานผลิตภัณฑ์ขณะฝนตกหนักหรือฟ้าผ่า ควรถอดปลั๊กออกเพื่อป้องกันฟ้าผ่า
- ⊘ เพื่อหลีกเลี่ยงความเสี่ยงจากไฟฟ้าช็อตหรือไฟไหม้ ห้ามถอดประกอบผลิตภัณฑ์ด้วยวิธีการต่างๆ ควรส่งต่อการซ่อมแซมทั้งหมดไปยังช่างผู้เชี่ยวชาญ

คำเตือนด้านความปลอดภัยและข้อควรระวัง



ข้อควรระวัง

- โปรดจัดสายไฟและสายเคเบิลที่เชื่อมต่อกับเครื่องให้เรียบร้อยเพื่อหลีกเลี่ยงการสะดุด ดึง หรือคว่ำ
- โปรดตรวจสอบให้แน่ใจว่าไม่มีเด็กเล่นผลิตภัณฑ์ เพื่อหลีกเลี่ยงการพลิกคว่ำหรือความเสียหายของผลิตภัณฑ์
- โปรดตรวจสอบให้แน่ใจว่าไม่มีสัตว์เลี้ยงเล่นผลิตภัณฑ์เพื่อหลีกเลี่ยงการพลิกคว่ำของผลิตภัณฑ์
- ห้ามวางเครื่องบนพรมหรือเบาะ
- ควรดูแลมือ เท้า เส้นผม หรือเสื้อผ้าไม่ให้ติดอยู่ในล้อ
- ห้ามผลักหรือเตะตัวเครื่อง
- ห้ามเหยียบบนเครื่องเพื่อใช้เป็นที่พักเท้า
- ห้ามใช้วัตถุของแข็งหรือกดลงบนหน้าจอ
- ถอดปลั๊กไฟก่อนทำความสะอาดเครื่อง ทำความสะอาดด้วยผ้าเนื้อนุ่ม โดยไม่ใช่สารเคมีใดๆ ระวังอย่าให้สิ่งแปลกปลอมเข้าไปในเครื่อง การทำความสะอาดที่ไม่เหมาะสม (เช่น น้ำยาทำความสะอาด น้ำ) อาจทำให้เครื่องเสียหาย หรือทำให้ส่วนประกอบภายในเสียหาย (หากน้ำยาทำความสะอาดหรือน้ำไหลเข้าไปในเครื่อง) และทำให้จอภาพทำงานผิดปกติ
- ถอดสายเคเบิลทั้งหมดออกก่อนเปลี่ยนตำแหน่งของเครื่อง เพื่อหลีกเลี่ยงความเสี่ยงในการตก ควรเคลื่อนย้ายเครื่องอย่างระมัดระวัง
- เพื่อหลีกเลี่ยงความเสี่ยงจากน้ำค้างในเครื่อง อย่าใช้เครื่องทันทีหลังจากย้ายจากสถานที่ที่มีอุณหภูมิต่ำไปยังสถานที่ที่มีอุณหภูมิสูง
- โปรดอย่าวางเครื่องใกล้พื้นที่ที่มีสนามแม่เหล็กไฟฟ้าสูง มิฉะนั้น เครื่องอาจจะได้รับสัญญาณรบกวนจากคลื่นแม่เหล็กไฟฟ้าและได้รับความเสียหาย
- โปรดอย่าวางเครื่องไว้ด้านหลังเครื่องปรับอากาศ มิฉะนั้น อาจทำให้เกิดน้ำค้างบนแผงภายในเครื่อง และอาจทำให้เกิดความเสียหายได้
- หากของเหลวที่รั่วไหลกระเด็นใส่ผิวหน้าของคุณเมื่อหน้าจอ LCD แดก ให้ล้างผิวหน้าด้วยน้ำสะอาดเป็นเวลา 15 นาทีและไปพบแพทย์ จับที่มุมทั้งสี่และด้านล่างไว้ เมื่อต้องเคลื่อนย้ายเครื่องด้วยมือ
- หากหน้าจอแสดงผลภาพเค็มๆ หรือมีข้อความหรือไอคอนค้างอยู่บนภาพเคลื่อนไหวเป็นเวลานาน จะทำให้เกิด "ภาพติด" บนหน้าจอ ซึ่งอาจยังคงปรากฏอยู่แม้หลังจากปิดเครื่องไปแล้ว ความเสียหายลักษณะนี้ไม่อยู่ในเงื่อนไขการรับประกัน
- การดูแลหน้าจออย่างถูกวิธี
 1. โปรดรับชมภายใต้แสงที่เหมาะสม หากแสงไม่เพียงพอหรือการใช้งานเป็นเวลานานต่อเนื่อง อาจทำให้สายตาเสียได้
 2. โปรดปรับระดับเสียงเพื่อป้องกันการได้ยินจากระดับเสียงที่ดังเกินไป

คำเตือนด้านความปลอดภัยและข้อควรระวัง



ข้อควรระวัง

- กรุณาปิดเครื่องและถอดปลั๊กไฟออกทุกครั้ง หากไม่ใช้งานผลิตภัณฑ์เป็นเวลานาน
- ปลั๊กไฟหรือขั้วต่อของอุปกรณ์ที่ทำหน้าที่เป็นอุปกรณ์ตัดกระแสไฟ ควรใช้งานได้ง่าย
- เสียบปลั๊กไฟเข้ากับเต้ารับให้สนิท การเชื่อมต่อที่หลวมอาจทำให้เกิดประกายไฟหรือไฟไหม้ได้
- เพื่อให้การให้บริการที่ดียิ่งขึ้น ข้อมูลทางเทคนิคทั้งหมดที่ระบุไว้ในคู่มือนี้และบนกล่องบรรจุภัณฑ์ อาจมีการเปลี่ยนแปลงโดยไม่ได้แจ้งให้ทราบล่วงหน้า หากมีความแตกต่างระหว่างข้อมูลในคู่มือกับการใช้งานจริง ให้ถือการใช้งานจริงเป็นหลัก

Android, Google Play and YouTube are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

คำแนะนำในการติดตั้ง

วิธีการติดตั้งฐานรองและเสายึดหน้าจอ




คำเตือน


- ขณะประกอบ กรุณาลือกสกรูยึดตัวยึดให้แน่น เพราะหากตัวยึดหลุด อาจทำให้เกิดความเสียหายแก่เครื่องหรืออุบัติเหตุ
- เนื่องจากผลิตภัณฑ์มีน้ำหนักพอสมควร ควรใช้อย่างน้อย 2 คนในการแกะกล่องและติดตั้ง
- ระหว่างการประกอบ ห้ามใส่สารแปลกปลอมใดๆ (เช่น น้ำมัน หรือจาระบี) บนสกรู
- หลังจากติดตั้งเสร็จแล้ว ห้ามถอดตัวยึดสายเคเบิลและสกรูออก
- ขณะใช้งานตามปกติ ควรจับที่กึ่งกลางของตัวเสายึดจอ และยกขึ้นในแนวตรง ห้ามเอียงเครื่อง เพราะอาจทำให้ล้มลง ซึ่งอาจก่อให้เกิด ความเสียหายต่อเครื่องหรือเป็นอันตรายต่อผู้ใช้ได้

คำแนะนำในการติดตั้ง


วิธีการติดตั้งเสายึดจอ

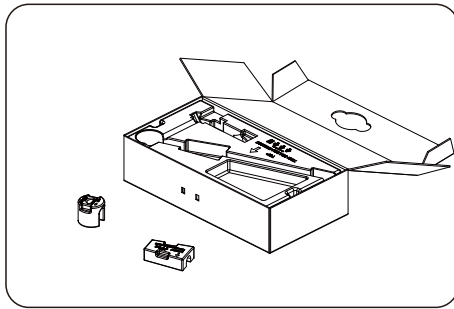


1. แกะกล่องและนำแผ่นรองกันกระแทกด้านหลังมอนิเตอร์ออก

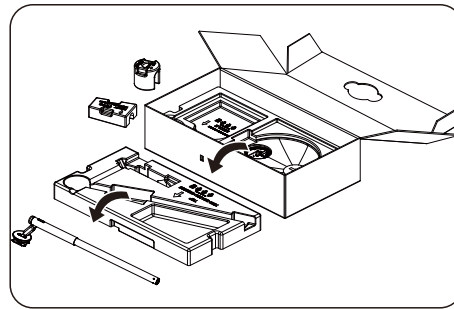


2. นำแผ่นกันกระแทกและเสายึดจอออก

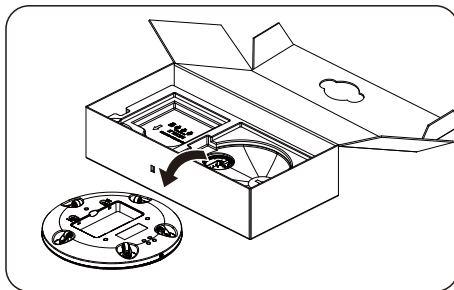


3. นำฐานรองจอออก

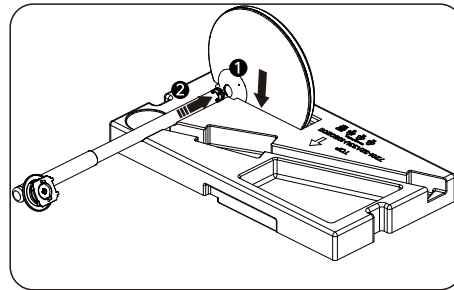

4. วางฐานลงในตำแหน่งช่องล็อกที่กำหนดไว้

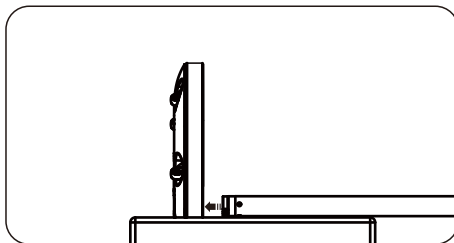


5. ติดตั้งเสาธงบนฐาน โดยจัดตำแหน่งให้ตรงกับช่องล็อก

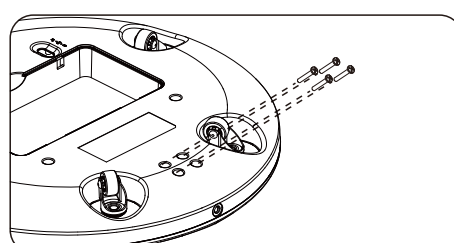


6. จัดตำแหน่งสกรูให้ตรงกับรู จากนั้นขันสกรูให้แน่น

คำแนะนำในการติดตั้ง


วิธีการติดตั้งหน้าจอ

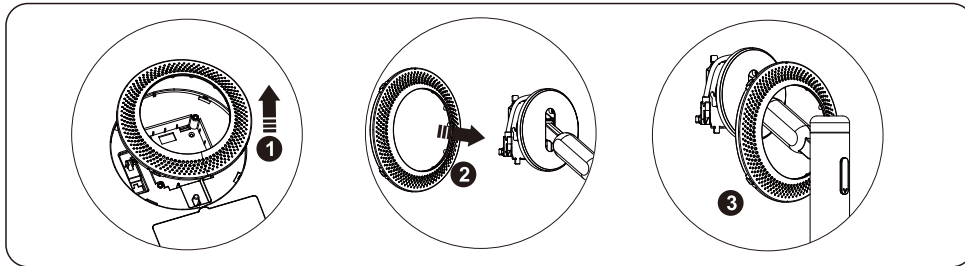


7. ก่อนนำหน้าจอออกจากบรรจุภัณฑ์ ให้ถอดฝาหลังออกก่อน จากนั้นค่อยใส่ฝาหลังผ่านเสายึดจอ

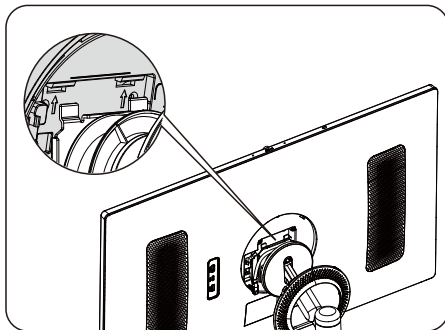


8. หันหน้าจอ ไปด้านหน้า แล้วติดตั้งโดยใส่หน้าจอให้ตรงกับจุดล็อก

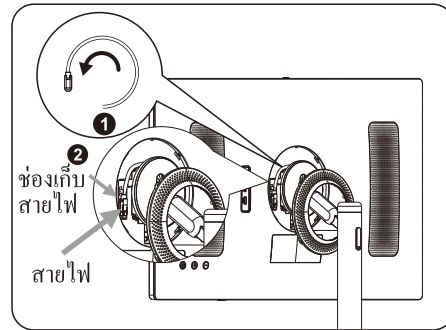

9. ม้วนสายไฟทวนเข็มนาฬิกา แล้วเสียบในช่องเสียบสาย จากนั้นจัดสายไฟให้เรียบร้อย และใส่สายเข้าในช่องยึดสาย

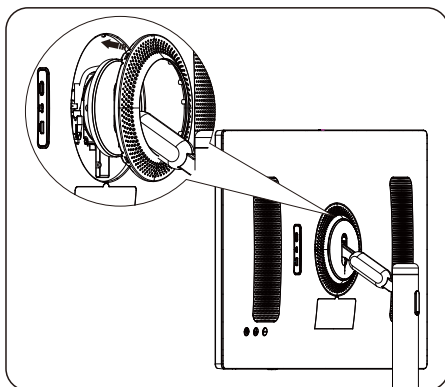

10. จัดตำแหน่งรูล็อกของฝาหลังให้ตรงกับหมุดล็อกที่อยู่ด้านหลังตัวจอ แล้วกดเบาๆ เพื่อให้ติดตั้งเสร็จสมบูรณ์

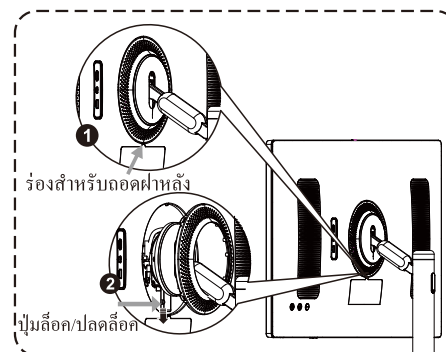

คำเตือน: ขณะถอดชิ้นส่วน กรุณากดปุ่มล็อกเพื่อถอดหน้าจอออกจากเสายึดจอ



การปรับมุมและความสูง

หลังจากติดตั้งผลิตภัณฑ์แล้ว คุณสามารถปรับความสูงและมุมของจอได้ เพื่อให้เหมาะสมกับการรับชม

ปรับความสูงของเสายึดจอ


หากต้องการปรับความสูง จำเป็นต้องถอดสกรูล็อกของตัวเสาก่อน

1. คลายสกรูล็อกออกจากเสายึดจอ และเก็บไว้เพื่อใช้งานในภายหลัง
2. ใ้ส่จุกปิดลงในรูสกรู
3. ขยับเสายึดจอเพื่อปรับความสูง

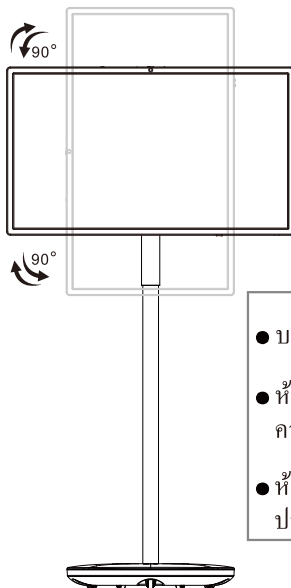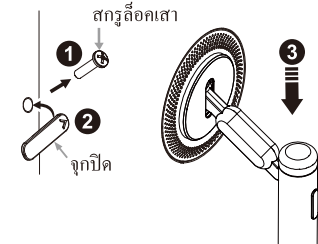

มุมก้ม : $20^{\circ} \pm 3^{\circ}$
มุมเงย : $20^{\circ} \pm 3^{\circ}$


สามารถปรับความสูงของเสายึดจอ
ได้ประมาณ 200 ± 10 mm

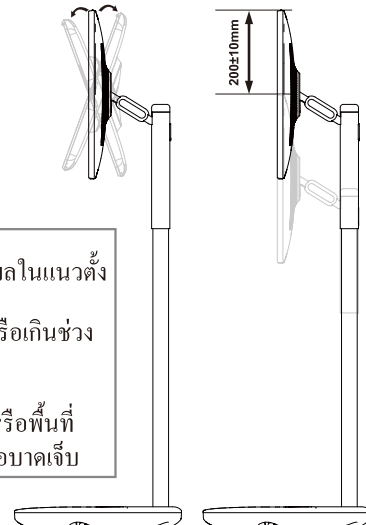

ข้อควรระวัง

- บางแอปพลิเคชัน ไม่รองรับการแสดงผลในแนวตั้ง
- ห้ามหมุนผลิตภัณฑ์เกินมุมที่กำหนดหรือเกินช่วงความสูงที่สามารถปรับได้สูงสุด
- ห้ามวางมือหรือนิ้วไว้ในบริเวณขาตั้งหรือพื้นที่ปรับความสูง เพื่อป้องกันการหนีบหรือบาดเจ็บ

ล็อกความสูงของเสายึดจอ

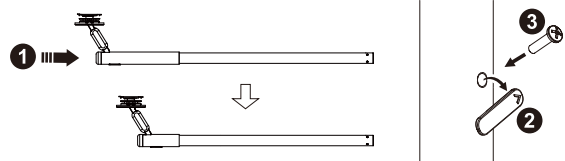


1. หลังจากถอดจอกและฐานออกแล้ว ให้วางเสาในแนวนอน จากนั้นกดบริเวณด้านบนของเสาจนถึงตำแหน่งต่ำสุด
2. ดึงจุกซิลิโคนออก;
3. ขันสกรูล็อกเพื่อล็อกความสูงของตัวเสายึดจอ

การเชื่อมต่ออุปกรณ์ต่างๆ




คำเตือน: กรุณาปิดเครื่องก่อนเชื่อมต่อหรือถอดสายเคเบิล

หมายเหตุ: ความละเอียดสูงสุดของ HDMI 2.0 คือ
3840 × 2160 @60 Hz

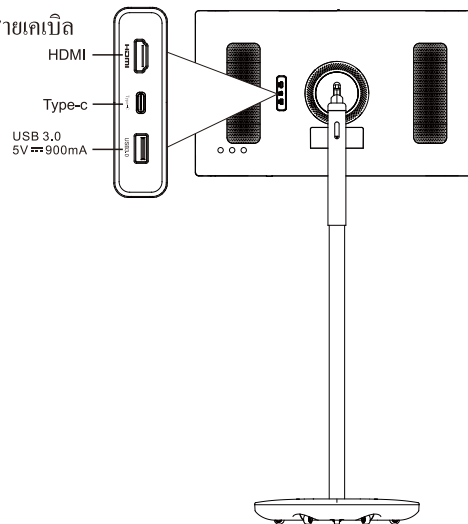

คำเตือน:

- หลังจากที่ไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน กรุณาเชื่อมต่ออะแดปเตอร์ไฟฟ้าก่อน เพื่อให้สามารถเปิดเครื่องได้ตามปกติ
- กรุณาเชื่อมต่อผลิตภัณฑ์เข้ากับอะแดปเตอร์ก่อน จากนั้นจึงเสียบปลั๊กไฟของผลิตภัณฑ์กับเต้ารับไฟฟ้า

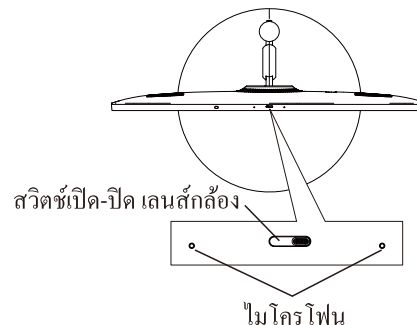

การทำงานของปุ่มต่างๆ

Ⓢ ปุ่มเปิด/ปิดเครื่อง


- ในโหมดสแตนด์บาย/ปิดหน้าจอ กดปุ่ม Ⓢ เพื่อเปิดใช้งาน
- ขณะใช้งาน กดปุ่ม Ⓢ เพื่อเข้าสู่โหมดปิดหน้าจอ
- จากเมนูบนหน้าจอ ให้กด > ระบบ > ทำทางสัมผัส > กดปุ่มเปิด/ปิดค้างไว้ จากนั้นเลือกเมนูเปิด/ปิด หรือ ผู้ช่วยดิจิทัล เพื่อกำหนดฟังก์ชันของ” กดปุ่มเปิด/ปิดค้างไว้” ตามต้องการ

⊕ VOL+: เพิ่มระดับเสียง

⊖ VOL-: ลดระดับเสียง

การใช้งานแบตเตอรี่

ภายในฐานรองจะมีแบตเตอรี่อยู่ภายใน โดยสามารถจ่ายแรงดันไฟฟ้าให้กับผลิตภัณฑ์ได้ เมื่อไม่มีแหล่งจ่ายไฟอื่นเชื่อมต่ออยู่ โดยจะมีไฟแสดงสถานะแบตเตอรี่

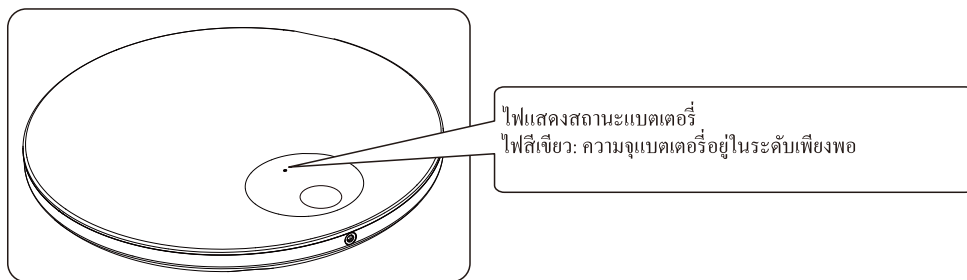

หมายเหตุ:

- อายุการใช้งานของแบตเตอรี่และระยะเวลาการใช้งานหลังการชาร์จจะลดลงตามระยะเวลาการใช้งานของผลิตภัณฑ์
- แบตเตอรี่ไม่สามารถชาร์จได้ในสภาพแวดล้อมที่ไม่เหมาะสม
- ในโหมดสแตนด์บาย ความจุของแบตเตอรี่ที่เหลืออยู่จะลดลงตามธรรมชาติ
- เพื่อยืดอายุการใช้งานของแบตเตอรี่ แนะนำให้ชาร์จแบตเตอรี่หลังจากใช้งานไปสักระยะ แทนที่จะชาร์จจนเต็มตลอดเวลา

การรักษาความจุแบตเตอรี่ไว้ที่ประมาณ 50% จะช่วยยืดอายุการใช้งานของแบตเตอรี่

- ระยะเวลาการใช้งานอาจแตกต่างกันขึ้นอยู่กับหลายปัจจัย เช่น อุปกรณ์ที่เชื่อมต่อ อุณหภูมิขณะใช้งาน ระยะเวลาการใช้งาน และการตั้งค่าของผู้ใช้ ดังนั้นระยะเวลาใช้งานจริงอาจแตกต่างกันไปตามสภาพการใช้งาน

การใช้งานเบื้องต้น

เปิดเครื่อง/สแตนด์บาย

เสียบสายไฟต่อกับแหล่งจ่ายไฟ ตัวเครื่องจะเริ่มทำงานโดยอัตโนมัติเมื่ออุปกรณ์เปิดอยู่ ให้ปิดหน้าจอลงจากขอบด้านบน จะมีเมนูจะปรากฏขึ้น และที่ “>> ปิดเครื่อง” จากนั้นอุปกรณ์จะเข้าสู่โหมดสแตนด์บาย

การใช้งานด้วยระบบสัมผัส

- คลิก: แตะที่หน้าจอ
- คลิกค้าง: แตะที่หน้าจอค้างไว้เป็นเวลา 2 วินาที
- บิดหน้าจอ: บิดหน้าจอขึ้น ลง ซ้าย หรือขวา
- ลาก: แตะค้างที่เป้าหมาย (เช่น แอปพลิเคชัน) ที่ต้องการย้าย จากนั้นบิดไปยังตำแหน่งที่ต้องการ
- ชูมหน้าจอ ใช้สองนิ้วแตะที่หน้าจอ จากนั้นกางหรือหุบนิ้วเพื่อชูมหน้าจอเข้าหรือออก

หมายเหตุ: หลังจากหน้าจอดับ ให้แตะหน้าจอสองครั้งเพื่อเปิดหน้าจอ

ไปที่ “การตั้งค่า > ระบบ > ทำทางสัมผัส > โหมดการไปยังส่วนต่างๆ ” เพื่อเลือกโหมดการนำทางของระบบ.

ข้อควรระวัง:

- การรองรับฟังก์ชันการซูมเข้าหรือซูมออกขึ้นอยู่กับแอปพลิเคชันที่ใช้งาน โปรดใช้งานตามระบบของแอป
- หลีกเลี่ยงการกดหน้าจอแรง ๆ หากจำเป็น ให้ใช้นิ้วกดเบา ๆ บริเวณที่ต้องการ หากสวมถุงมือหรือใช้เล็บสัมผัสหน้าจอ อาจทำให้ไม่สามารถใช้งานได้ตามปกติ
- หากหน้าจอเปียกหรือมีความชื้นมาก เช่น เซอร์อาจไม่สามารถทำงานได้ตามปกติเมื่อต้องสัมผัสหน้าจอ

การเชื่อมต่อเครือข่ายไร้สาย

ไปที่ “การตั้งค่า > เครือข่ายและอินเทอร์เน็ต > อินเทอร์เน็ต” แล้วเปิด Wi-Fi ระบบจะเริ่มค้นหาและ

แสดงรายการเครือข่ายไร้สายที่มีสัญญาณอยู่ คลิกเลือกเครือข่ายที่ต้องการเชื่อมต่อ โดยไอคอน  จะแสดงว่า

เครือข่ายนั้นมีการเข้ารหัสหรือไม่ หากมีการเข้ารหัส จะสามารถเชื่อมต่อได้ก็ต่อเมื่อคุณใส่รหัสผ่านที่ถูกต้องเท่านั้น

หมายเหตุ: สามารถตั้งค่าระบบเพิ่มเติมได้ในเมนู “การตั้งค่า” ตามความต้องการ

คำชี้แจงสำคัญเกี่ยวกับบริการเครือข่าย

เนื้อหาและบริการทั้งหมดที่ได้รับจากผลิตภัณฑ์นี้ เป็นทรัพย์สินของบุคคลที่สาม และได้รับความคุ้มครองภายใต้กฎหมายลิขสิทธิ์ สิทธิบัตร เครื่องหมายการค้า และ/หรือกฎหมายทรัพย์สินทางปัญญาอื่นๆ เนื้อหาและบริการเหล่านี้ มีไว้สำหรับการใช้งานส่วนบุคคล ที่ไม่ใช่เชิงพาณิชย์ และไม่อนุญาตให้นำไปใช้ในลักษณะที่ไม่ได้รับอนุญาตจากเจ้าของเนื้อหาหรือผู้ให้บริการ

ในทุกกรณี ทางบริษัทจะไม่รับผิดชอบต่อความสูญเสียหรือความเสียหายใด ๆ ไม่ว่าจะโดยตรง ทางอ้อม หรือที่ไม่คาดคิด ซึ่งเกิดจากการที่คุณหรือบุคคลที่สามเข้าถึงเนื้อหาบริการ ข้อมูล หรือซอฟต์แวร์ของบุคคลที่สามผ่านผลิตภัณฑ์นี้

บริการของบุคคลที่สามอาจมีการเปลี่ยนแปลง ยกเลิก หรือยุติลงโดยไม่ต้องแจ้งให้ทราบล่วงหน้า บริษัทของเราไม่มีข้อผูกพันหรือรับประกันว่าบริการหรือเนื้อหาบางอย่างจะสามารถเข้าถึงได้ตลอดเวลา

ทางบริษัทจะไม่รับผิดชอบต่อบริการใด ๆ ที่เกี่ยวข้องกับเนื้อหาและบริการเหล่านี้ และจะไม่รับผิดชอบในการให้บริการลูกค้า หากมีคำถามหรือต้องการขอรับบริการเกี่ยวกับเนื้อหาและบริการเหล่านี้ โปรดติดต่อผู้จำหน่ายหรือผู้ให้บริการโดยตรง

การแก้ไขปัญหาเบื้องต้น

อาการ	วิธีแก้ไข
หน้าจอไม่แสดงผล ไม่มีเสียง และไฟแสดงสถานะไม่ติด	1. ตรวจสอบว่าได้เปิดเครื่องแล้วหรือไม่ 2. ตรวจสอบว่าสายไฟได้เชื่อมต่อเรียบร้อยแล้วหรือไม่
เครื่องปิดเองโดยอัตโนมัติ	1. เป็นไปได้ว่าแบตเตอรี่อาจจะหมด กรุณาเสียบสายไฟ 2. กดปุ่มรีเซ็ตเพื่อเริ่มต้นการทำงานของเครื่องใหม่ 3. ตรวจสอบว่าฟังก์ชันปิดเครื่องอัตโนมัติทำงานอยู่หรือไม่ตามเวลาที่ตั้งไว้ 4. หากแบตเตอรี่ร้อนเกินไป เครื่องจะปิดตัวเองโดยอัตโนมัติเพื่อป้องกันความเสียหาย
ไม่มีสัญญาณเมื่อเชื่อมต่ออุปกรณ์ HDMI ภายนอก	1. กดปุ่มรีเซ็ตเพื่อเริ่มต้นการทำงานของเครื่องใหม่ 2. เชื่อมต่อสาย HDMI อีกครั้ง 3. ขณะเครื่องเปิดอยู่ ให้รีเซ็ตพอร์ตอุปกรณ์ HDMI
ไม่มีเสียง	ปรับระดับเสียงให้อยู่ในระดับที่เหมาะสม
ไม่สามารถเชื่อมต่อเครือข่ายได้	1. ติดต่อผู้ดูแลระบบเครือข่ายเพื่อขอที่อยู่ IP และพารามิเตอร์อื่น ๆ ที่สามารถใช้งานได้ 2. ตรวจสอบว่าสายเครือข่ายเชื่อมต่ออย่างถูกต้องหรือไม่ 3. ติดต่อผู้ให้บริการเครือข่ายอินเทอร์เน็ต
เครือข่ายช้ามากขณะเล่นวิดีโอ	1. อัปเดตแบนด์วิดท์เครือข่ายของคุณให้สูงขึ้น 2. ลองใช้ที่อยู่ VOD อื่นเพื่อให้ได้แหล่งวิดีโอที่ดียิ่งขึ้น

ข้อมูลจำเพาะ

32"

ความละเอียดหน้าจอ	3840×2160
ระบบปฏิบัติการ	Android 14 OS
กำลังขับลำโพง	2×8W
แหล่งจ่ายไฟ	19V $\approx$ 4.74A, 90W
แบตเตอรี่	8550mAh/11.1V
อะแดปเตอร์	Input: 100-240V~, 50/60Hz Output: 19V $\approx$ 4.74A
ข้อกำหนดด้านสิ่งแวดล้อม	Operating temperature: 0°C ~ +40°C Charging temperature: -10°C ~ +50°C Operating humidity: 0% ~ 65% RH non-condensing Storage humidity: 0% ~ 80% RH non-condensing Operating altitude: ≤ 3000 m

ขนาดและน้ำหนัก


ขนาดโดยรวม (ไม่รวมฐาน)	734.4×55.2×430 mm
ขนาดโดยรวม (รวมฐาน)	Max.: 734.4×426.23×1332.5 mm Min.: 734.4×426.23×1132.5 mm
น้ำหนักตัวเครื่อง	23 kg

หมายเหตุ: โปรดดูข้อมูลผลิตภัณฑ์บนฉลากที่ติดอยู่บริเวณฐานของเครื่อง

Contents

Packing List	1
Safety Warnings and Precautions.....	2
Installation Instructions.....	6
Adjustment of Angle and Height.....	9
Connection of Peripherals.....	10
Functions of Keys.....	10
Use of Internal Battery.....	11
Basic Operations.....	12
Power-on/Standby.....	12
Touch Operation.....	12
Wireless Network Connection.....	12
Important Statement on Network Service.....	13
Troubleshooting.....	14
Specifications.....	15

Packing List

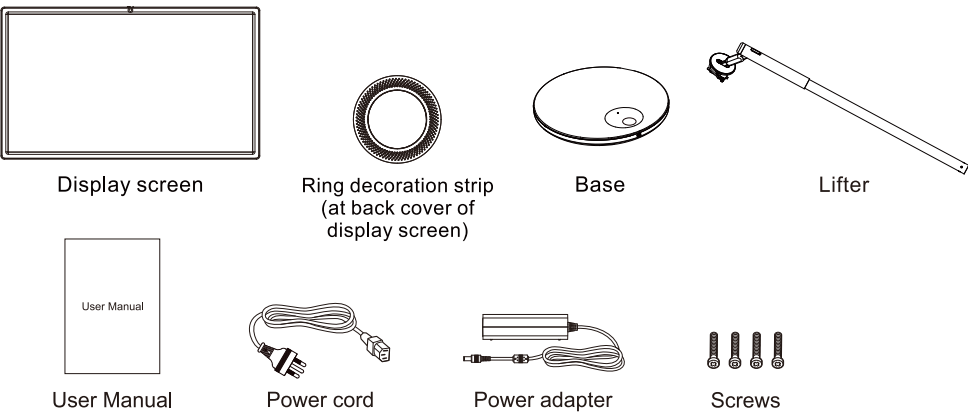

If any of the above items is missing, please contact your product dealer.

Safety Warnings and Precautions

Personal safety factors have been taken into account during design of the product, and the product has been tested strictly before delivery. However, improper installation and use could result in electric shock, fire or other hazards. To ensure its safe use, prolong its service life and bring its best performance into full play, please read and understand all operating instructions and nameplate indications and observe the following safety precautions carefully before using the product, and keep this manual properly for future reference.



Caution: In order to reduce the risk of electric shock, please do not remove the cover plate (or back plate). The product does not contain any user-serviceable components. Please consult qualified service personnel for service arrangement.



There is “dangerous voltage” without insulation protection in the product housing, and the voltage strength is high enough to pose the risk of electric shock.

	Warning	May result in casualties		Indicate the behaviors that must be prohibited
	Caution	May result in personal injury or property losses		Indicate the operations that must be performed

- In any of the following situations, turn off the product immediately, disconnect the power plug from the power socket and contact authorized professional service personnel for repair.
 1. The product produces abnormal sound or smell or has any other obvious abnormality.
 2. The power cord or power plug is damaged or worn.
 3. The product gets damaged due to fall, strike or impact. Any liquid flows or foreign object falls into the product.
- In case of any flammable gas leakage, do not connect/disconnect the power plug of the product or any other electrical appliance but close the leaky valve and open the doors and windows immediately.

Warning

- This product can only use the power supply of the type indicated on its nameplate. If you are not sure about the type of power supply in use, please consult your product dealer or the local power supply bureau.
- Do not disassemble the adapter or power cord, which may cause fire or electric shock.
- Please place the adapter carefully to avoid drop or impact.
- Impact could cause damage of the product.

Safety Warnings and Precautions

Warning

- Please place the product on an even ground. Do not place the product at an unstable or inclined position; otherwise, drop and damage or even fire could be caused, further resulting in severe personal injury or death.
- Always use the stand and installation method recommended by the manufacturer.
- Never allow children to climb up the product; otherwise, the product will topple over, resulting in severe injury.
- To avoid the risk of swallow, keep small accessories beyond the reach of children.
- Do not put any fabric or other material between the product and the ground.
- Do not place any article on the product.
- Do not place the product:
 1. in an environment that is too damp, hot, cold or dusty or exposed to direct sunlight;
 2. in an environment where flammable or explosive substances are stored or used;
 3. in an environment where there are combustible or corrosive gases;
 4. in or near a bathroom, kitchen or other working environment with high humidity or with source of heat, steam or oil fume.
- Do not use any damaged or inappropriate power outlet. Keep a good contact between the power plug and the power outlet.
- Protect the power plug and the power outlet against dust and metal attachments.
- Do not damage the power cord:
 1. Do not remodel the power cord;
 2. Do not put heavy objects on the power cord;
 3. Keep the power cord away from heat sources;
 4. Do not pull the power cord when disconnecting the power plug. Please hold the power plug instead of the power cord.
- Paralleling too many power plugs to one power outlet may cause fire due to excessive power consumption.
- To avoid the risk of electric shock or fire, keep the product away from naked flames (like burning candles).
- Do not put any container with water on the product, or water drops or splashes could cause electric shock or fire.
- To avoid the risk of short circuit, product damage and electric shock, do not put any sharp object, metal or liquid into or allow them to contact the ventilation holes or signal connectors.
- The ventilation holes in the housing are designed to protect the internal components against overheat and ensure their long-term reliable work. The product should be placed without blocking such ventilation holes. Always leave a space of at least 4" or 10cm around the product to guarantee good ventilation.
- The base of the product contains an internal lithium battery. Please take care during use!

Safety Warnings and Precautions

Warning

- ⊘ ● If the battery leaks, please stop using it immediately to avoid contact with your skin and eyes. Carelessness in this respect could result in loss of eyesight or burn injury. If any part of your body in contact with the leaking liquid shows any abnormality, please wash it with sufficient clean water, and also seek medical advices.
- Please dispose of the battery correctly. Improper battery disposal could pose the risk of explosion or fire. The guideline for battery disposal varies with the country and region.
- Do not expose the product (especially the lithium battery) to electricity.
- Do not expose the product to flame, electric heater or direct sunlight. Otherwise, electric shock, injury or fire could be caused.
- To charge the battery, do not use any power supply or circuit beyond the specified range. Otherwise, the risk of battery damage or fire will be caused.
- Be careful when using the lithium battery since the risk of fire or explosion exists.
- Clean the charging port using a soft cloth. If dirt or other foreign object exists on the charging port, the battery cannot be charged normally, or fire can be caused.
- If the battery is fully discharged and left unused for a long period of time, it is possible that the battery cannot be charged or that the battery life is shortened.
- Do not remove, disconnect, disassemble or short-circuit the battery. Otherwise, electric shock, injury or fire could be caused.
- Do not throw the battery into the fire or heating furnace, or mechanically extrude or cut the battery; otherwise, explosion could be caused.
- Do not place the battery in an environment with extremely high temperature that could result in battery explosion or leakage of flammable liquid or gas.
- Do not place the battery under extremely low atmospheric pressure that could result in battery explosion or leakage of flammable liquid and gas.
- ⊘ To avoid the risk of electric shock, do not touch the power plug with wet hands.
- ⚠ Do not use the product during rainstorm or lightning. Disconnect the power plug immediately to protect it against lightning stroke.
- ⊘ To avoid the risk of electric shock or fire, do not disassemble the product in any way. All repairs should be referred to professional technicians.

Safety Warnings and Precautions



Caution

- Please tidy the wires and cables connected to the product to avoid trip-over, pull or grab.
- Please ensure that no juveniles play, disport, chase each other, run or jump around the product, or push, drag, touch or impact the product in any way, thus to avoid topple-over or damage of the product.
- Please ensure that no pets play, disport, run or jump around the product, or push, drag, touch or impact the product in any way, thus to avoid topple-over or damage of the product.
- Do not place the product on a carpet or cushion.
- Take care to protect your hands, feet, hair or clothes from getting stuck in the wheels.
- Do not push or kick the product.
- Do not ride on the product as it was a foot rest.
- Do not use hard objects to rub or strike the screen or twist or press it forcibly.
- Disconnect the power plug before cleaning the product. Clean it with a soft cloth without using any industrial chemical. Take care to prevent the ingress of any foreign object into the product. Improper cleaning (e.g., cleaning solution, water) may cause damage to the appearance, erase the printed information or damage the internal components (if the cleaning solution or water flows into the product) and cause display failure.
- Disconnect all cables before changing the position of the product. To avoid the risk of fall, move the product slowly.
- To avoid the risk of dew and fault, do not use the product immediately after moving it from a low-temperature place to a high-temperature place.
- Please do not place the product near any strong electromagnetic field; otherwise, it will be subjected to electromagnetic interference and get damaged.
- Please do not place the product directly facing an air conditioner; otherwise, dew can be formed on the panel inside the product, further resulting in fault.
- If the leakage splashes onto your skin when the LCD screen is broken, rinse the skin with clean water for 15min and seek medical advices. Grab the four corners and hold the bottom side rather than exert pressure on the front panel when moving the product with hands.
- If the product keeps displaying one image or there is any still text or icon in a moving image during a long time, an “afterimage” will stay on the screen and last long after the product is turned off. Such fault is not covered by the warranty.
- Watch the screen in a healthy way:
 1. Please watch the screen under proper light condition; insufficient light or long continuous use may damage your vision.
 2. Please adjust the volume to protect your hearing from being impaired by excessively high volume.

Safety Warnings and Precautions

Caution

- Turn off the product and disconnect the power plug before leaving the product unused for a long time for any reason.
- The power plug or appliance coupler acting as the make-and-break device should be easy to operate.
- Insert the power plug into the power outlet reliably. A loose connection may cause sparks or fire.
- To better provide services, all technical specifications contained in this manual and on the carton are subject to change without further notice. If there is any difference between this manual and any actual operation, such actual operation shall prevail.

Android, Google Play and YouTube are trademarks of Google LLC.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Installation Instructions


Installation of Base and Lifter

Warning


- During assembly, please lock the mount fixing screws since drop of the mount could result in product damage or personal injury.
- Since the product is somewhat heavy, the cooperation of at least two persons is needed during unpacking and installation.
- When assembling the product, do not apply any foreign matter (e.g., oil, lubricating oil) on the screws.
- After installation of the product, do not remove the cable holder and screws.
- During daily use, please grab the middle of the lifter and ensure that the product moves in upright position. Do not tilt the product since the topple-over risk will be caused, further resulting in fault of the product or personal injury.

Installation Instructions


Instructions for Installation of Lifter

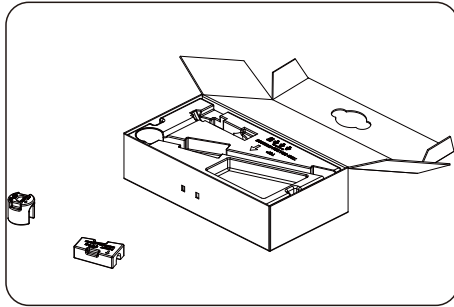


1. Unpack and take out the top protective pad.

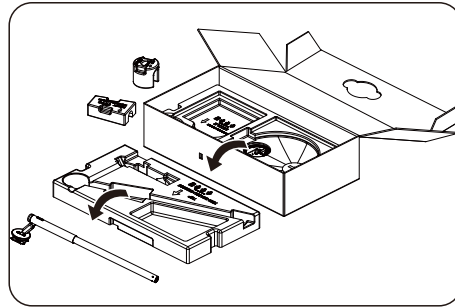


2. Take out the cushion pad and the lifter.

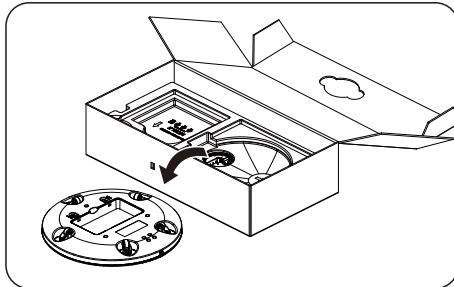


3. Take out the base.

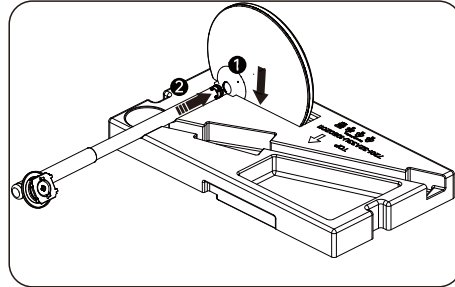

4. Place the base in the slot.

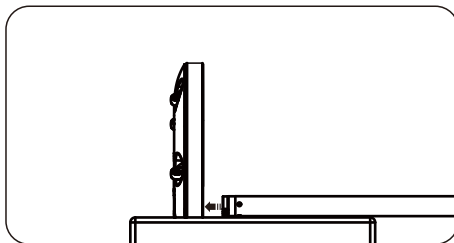


5. Install the lifter to the base by aligning it with the slot position.

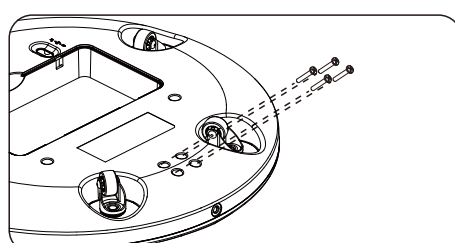


6. Align the screws with the screw holes, and then fasten the screws.

Installation Instructions


Instructions for Installation of Display Screen

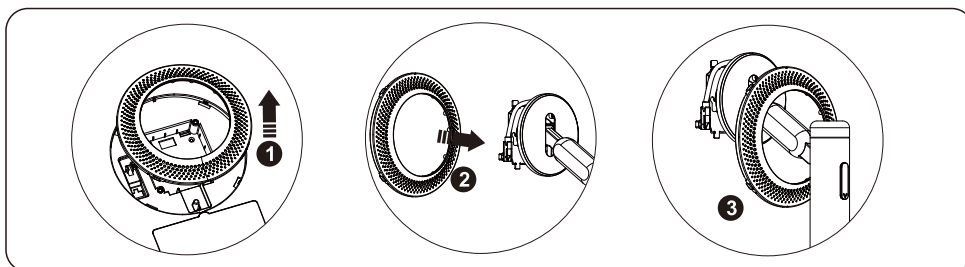


7. Before taking the display screen out of the package, first take out the trim ring at the back; then put the trim ring through the lifter.

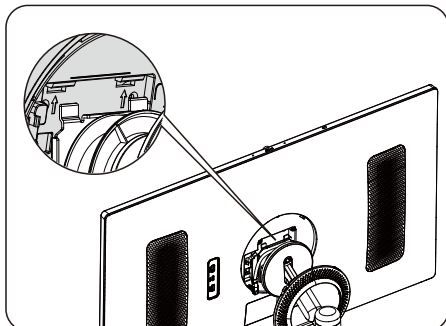


8. Tilt the display screen face up, and install it by alignment with the clipping position.

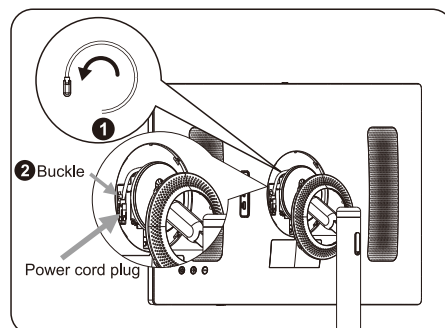

9. Wind the power cord counterclockwise, and insert the plug; then tidy the power cord and insert it in the fixing slot.

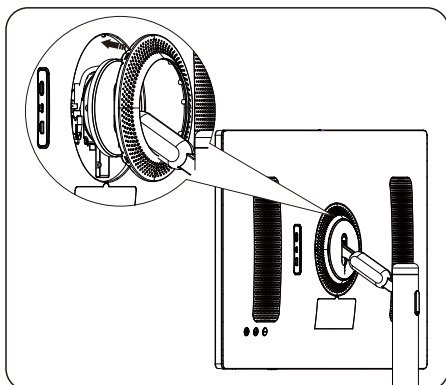

10. Align the locating hole of trim ring with the locating stud on the rear shell of the screen, and simply press to finish installation.

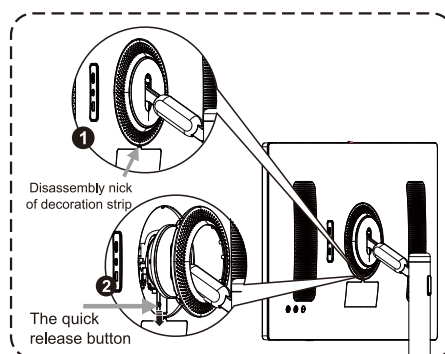

Attention: During disassembly, it is needed to press the quick release button to remove the display screen from the lifter.



Adjustment of Angle and Height

After the product is installed, you can adjust its height and angle to get a comfortable watching experience.

Release the lifter height locking


If it is the first time to use the lifting function, it is required to release the self-locking status of the lifter.

1. Unscrew the self-locking screw from the lifter and place it properly for future re-use;
2. Fit the silicone plug into the screw hole;
3. Press the lifter to unlock the height.

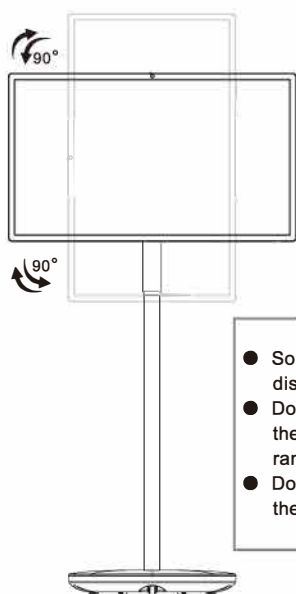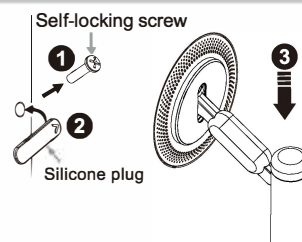

Forward angle: $20^{\circ} \pm 3^{\circ}$
Backward angle: $20^{\circ} \pm 3^{\circ}$


The height of the lifter is adjustable within $200 \pm 10\text{mm}$

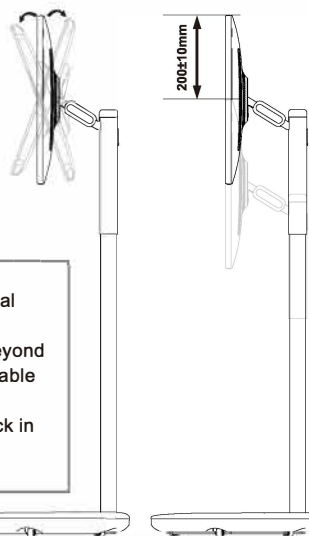

Caution

- Some applications do not support vertical display.
- Do not rotate the product at an angle beyond the limit or beyond the maximum adjustable range of height.
- Do not let your hands or fingers get stuck in the stand or height adjustment area.

Lock the height of lifter

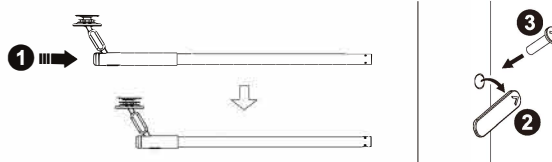


1. After removing the display screen and base, horizontally place the lifter, and exert proper force to press the top of lifter to the lowest position;
2. Pull out the upper part of silicone plug;
3. Screw the self-locking screw to lock the lifter height.

Connection of Peripherals

Warning: Cut off power supply before connecting/disconnecting any cable.


Note:

1. Open the port dust cover, and connect to the corresponding port as per need.
2. The maximum resolution of HDMI 2.0 is 3840x2160P@60Hz.

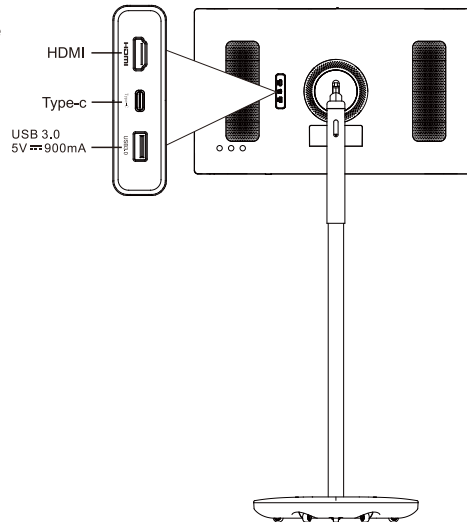

Attention:

- After the product has been powered off for a long time, please first connect the power adapter so that the product can be turned on normally.
- Please connect the product to the power adapter, then insert the power plug of the product to the power outlet.

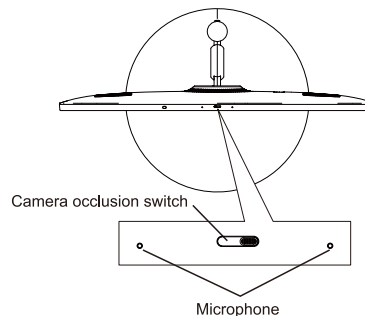

Functions of Keys

⏻ Power button


- In standby/screen-off mode, press ⏻ button to turn on the product.
- During normal working, press ⏻ button to enter screen-off state;
- From the drop-down menu on screen, click "⚙️ > System > Gestures > Press & hold power button", then click "Power menu" or "Digital assistant" to set functions of "Press & hold power button" as needed.

⏮ VOL+: Increase the volume.

⏭ VOL-: Decrease the volume.

Use of Internal Battery

The base of the product contains an internal battery which can supply voltage to the product for some time when no other power supply is connected. The base also includes a battery status indicator light.

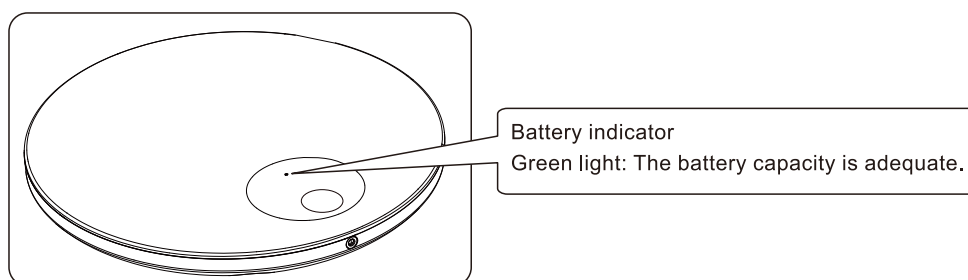

Attention:

- The battery life and service time after charging reduces in proportion to the service period of the product.
- The battery cannot be charged in extreme environments.
- In standby mode, the remaining battery capacity reduces naturally.
- To prolong the battery life, it is suggested to charge the battery after use for some time instead of keeping the battery fully charged.
- Maintaining the battery capacity at 50% helps to prolong the battery life.
- The service time may vary with various factors, such as connected devices, operating temperature, service period and user settings. Therefore, the actual time may vary with the service condition.

Basic Operations

Power-on/Standby

Connect the power cord, in turn-off state, press and hold the "⏻" button of this product to turn on; During normal working, swipe down from the top edge, and drop-down menu appears. Click "⏻ > ⏻ Power off", then the product enters standby state.

Touch Operation

- Click: Tap on the screen.
- Click and hold: Tap on the screen for 2s or longer.
- Swipe: Swipe on the screen up, down, left and right.
- Drag: Tap and hold the target (e.g., an application) to be moved, then swipe to the desired position.
- Open/close: Place two fingers on the screen, then open or close these fingers to zoom in or out the content displayed on the screen.

Note: After the screen is off, double click to make the screen on.

Click "**Settings > System > Gestures > Navigation mode**" to select the system navigation mode.

Attention:

- Whether the displayed content supports the zoom in/out function is related to the application. Please operate according to the actual condition.
- Avoid pressing the screen with force; where necessary, simply use your fingertip to tap on the desired item. If you wear gloves or use your fingernail to touch the screen, it is possible that the product cannot respond and be operated normally.
- If the screen is a little wet or too damp, the sensor cannot work normally when touching it.

Wireless Network Connection

Click "**Settings > Network & internet > Internet**", and turn on Wi-Fi; the system will start searching and list the wireless network signals available. Click the network to be connected. The  icon beside a network indicates the network is encrypted; the product can be connected to the network only after you enter the correct password.

Remark: More system settings can be done under "**Settings**" as per need.

Important Statement on Network Service

All contents and services obtained from the product are owned by third parties and protected by copyright, patent, trademark and/or other intellectual property laws. These contents and services are only for your personal non-commercial purposes, which shall not be used in a way not authorized by the content owner or service provider.

Under no circumstance shall our Company be liable for any direct, indirect or unexpected losses or damages arising from your or any third party's access to any contents or services or any information or third-party software through this product.

Third-party services may be subject to change, removal or discontinuation without prior notice. Our Company does not represent or warrant that some services or contents will remain accessible at any time.

Our Company will not be responsible for any service related to these contents and services, or assume any liability for customer service. For any question or service request about these contents and services, please directly contact your content or service provider.

Troubleshooting

Symptom	Solution
The screen does not display anything; there is no sound, and the indicator does not turn on.	1. Check whether the product has been turned on. 2. Check whether the power cord has been connected.
The product shuts down suddenly.	1. It is possible that the internal battery runs out; please connect the power cord. 2. Check whether the auto shutdown function is activated at the set time point. 3. If the battery overheats, the product will shut down automatically for self-protection.
There is no signal when an external HDMI device is connected.	1. Reconnect the HDMI cable. 2. When the product is on, restart the HDMI device.
There is no sound.	Adjust the volume to a proper level.
Short remote control distance, malfunction of remote control	1. Move the object away to avoid blocking the remote receiver. 2. Replace the battery.
Network cannot be connected	1. Ask the network administrator for the available network IP addresses and other parameters. 2. Check whether the network cable is connected normally. 3. Consult the network service provider.
The network is very slow when playing videos online	1. Please upgrade your network bandwidth to a higher one. 2. Please try other VOD addresses to get better resources.

Specifications

32"

Resolution	3840×2160
Built-in system	Android 14 OS
Speaker output power	2×8W
Power supply	19V $\overline{=}$ 4.74A, 90W
Rechargeable lithium battery	8550mAh/11.1V
Power adapter	Input: 100-240V~, 50/60Hz Output: 19V $\overline{=}$ 4.74A
Environmental requirements	Operating temperature: 0°C ~ +40°C Charging temperature: -10°C ~ +50°C Operating humidity: 0% ~ 65% RH non-condensing Storage humidity: 0% ~ 80% RH non-condensing Operating altitude: ≤ 3000 m
Dimension (L×W×H) and Weight	
Overall dimension (without base)	734.4×55.2×430 mm
Overall dimension (with base)	Max.: 734.4×426.23×1332.5 mm Min.: 734.4×426.23×1132.5 mm
Net weight of device	23 kg

Remark: View the product information on the label affixed to the base of the product.

Aconatic

ลงทะเบียนรับประกันสินค้า

SCAN QR CODE



เพื่อรับสิทธิประโยชน์สูงสุด!

ง่าย / เร็ว / ปลอดภัย

ลงทะเบียนรับประกันออนไลน์ผ่าน QR หรือ Website
www.aconatic.com/register_warranty

เงื่อนไขการรับประกัน WARRANTY CONDITION

สินค้าทุกประเภทมีระยะรับประกัน 1 ปี
ยกเว้นที่ระบุในตารางเงื่อนไขการรับประกันพิเศษ
1 YEAR WARRANTY PERIOD IS GIVEN TO ALL PRODUCT CATEGORIES
UNLESS STATED OTHERWISE IN THE FOLLOWING TABLE

เงื่อนไขการรับประกันพิเศษ SPECIAL WARRANTY

เฉพาะชิ้นส่วนที่รับประกันเท่านั้น ONLY THE WARRANTY PART

ประเภทสินค้า PRODUCT	ชิ้นส่วนที่รับประกัน WARRANTY PART	ระยะประกัน WARRANTY PERIOD
Digital TV SMART TV 32" up	หน้าจอ	1 ปี (YRS) 3 ปี (YRS)
Mini Bar & Beverage cooler	ตัวเครื่อง คอมเพรสเซอร์	1 ปี (YRS) 3 ปี (YRS)
ตู้เย็น 5Q up และ รุ่นพิเศษ AN-FR112	ตัวเครื่อง คอมเพรสเซอร์	3 ปี (YRS) 10 ปี (YRS)
แอร์เคลื่อนที่ Portable Air	คอมเพรสเซอร์ COMPRESSOR	3 ปี (YRS)
พัดลมไอเย็น Air cooler	มอเตอร์ MOTOR	2 ปี (YRS)
เครื่องฟอกอากาศ		1 ปี (YRS)
Small APPLIANCE		1 ปี (YRS)
AUDIO,RADIO DVD, STB		1 ปี (YRS)
Wall mount & TV Stand wall mount		1 ปี (YRS)

May 2025

รับประกันสินค้าผ่าน QR Code

1 สแกน
สแกน QR code



2 กดลงทะเบียน
กดลงทะเบียนรับประกัน
เพื่อกรอกข้อมูล



3 รับประกัน
“สินค้า”

