ACONATIC

คู่มือการใช้งาน
QLED TV
32HS2000AN
43HS2000AN

คำแนะนำ

กรุณาศึกษาคู่มืออย่างละเอียด ก่อนทำการติดตั้งและใช้งานโทรทัศน์

เก็บคู่มือนี้ไว้ใช้อ้างอิง

สารบัญ

คำเตือนและประกาศด้านความปลอดภัย.....1
รายการอุปกรณ์ในกล่อง.....3
การเชื่อมต่ออุปกรณ์ภายนอก.....3
ปุ่มควบคุม.....4
รีโมตคอนโทรล.....4
การใช้งานเบื้องต้น.....6
การเปิดเครื่อง/สแตนด์บาย.....6
การเลือกสัญญาณเข้า.....6
คำอธิบายการใช้งานเมนู.....6
การตั้งค่าภาษา OSD.....6
การค้นหาช่องสัญญาณ.....6
การตั้งค่าเครือข่าย.....6
เปิดเครื่องด้วยมือถือ (Power On with Mobile).....6
ตัวเล่นมัลติมีเดีย.....6
ข้อความสำคัญเกี่ยวกับบริการเครือข่าย.....7
การแก้ไขปัญหาเบื้องต้น.....8
คำแนะนำการติดตั้งขาตั้ง.....8
การใช้ขาแขวนผนัง.....9

คำเตือนและประกาศด้านความปลอดภัย

การออกแบบผลิตภัณฑ์นี้ได้คำนึงถึงปัจจัยที่มีผลต่อความปลอดภัยส่วนบุคคล และผลิตภัณฑ์นี้ได้ผ่านการทดสอบอย่างเข้มงวดก่อนส่งมอบ อย่างไรก็ตาม การใช้งานที่ไม่ถูกต้องอาจก่อให้เกิดไฟฟ้าช็อตหรืออัคคีภัยได้ เพื่อความปลอดภัยและยืดอายุการใช้งานของผลิตภัณฑ์นี้ โปรดอ่านคู่มือและฉลากคำเตือนอย่างละเอียดก่อนใช้งาน และปฏิบัติตามข้อควรระวังด้านความปลอดภัยต่อไปนี้ กรุณาเก็บคู่มือผู้ใช้นี้ไว้เพื่อใช้อ้างอิงในภายหลัง

⚠ **คำเตือน**	อาจก่อให้เกิดการบาดเจ็บร้ายแรงถึงชีวิต
⚠ **ข้อควรระวัง**	อาจก่อให้เกิดการบาดเจ็บ หรือทรัพย์สินเสียหาย
⊘	หมายถึงพฤติกรรมที่ต้องห้ามกระทำ
●	หมายถึงการปฏิบัติที่ต้องกระทำ

- หากมีก๊าซหุงต้มหรือก๊าซไวไฟอื่นรั่วไหล ห้ามถอดปลั๊กไฟของผลิตภัณฑ์หรือเครื่องใช้ไฟฟ้าอื่น ให้ปิดวาล์วแก๊สทันทีและเปิดประตูหน้าต่างเพื่อระบายอากาศ
- ในกรณีต่อไปนี้ โปรดถอดปลั๊กไฟออกทันทีและติดต่อช่างผู้เชี่ยวชาญที่ได้รับอนุญาตเพื่อทำการซ่อมแซม
  - ไฟฟ้าดับหรือแรงดันไฟฟ้าไม่คงที่
  - มีเสียงหรือกลิ่นผิดปกติจากเครื่อง
  - สายไฟชำรุด
  - ผลิตภัณฑ์ได้รับความเสียหายจากการตกหล่น การกระแทก หรือถูกชน
  - มีของเหลวหรือสิ่งแปลกปลอมเข้าไปในผลิตภัณฑ์

⚠ คำเตือน

- ใช้ไฟฟ้า 100-240 V~, 50/60 Hz เท่านั้น
- เสียบปลั๊กไฟให้แน่นสนิทกับเต้าเสียบ หากเสียบไม่แน่นอาจเกิดประกายไฟหรือแม้แต่ไฟไหม้ได้
- ถอดปลั๊กไฟของผลิตภัณฑ์นี้เพื่อตัดไฟฟ้า
- สายไฟทุกเส้นควรเชื่อมต่อหรือถอดออก หลังจากถูกตัดไฟแล้วเท่านั้น
- วางสายอากาศภายนอกให้ห่างจากสายไฟฟ้าแรงสูงเพื่อป้องกันไฟฟ้าช็อต
- ห้ามวางผลิตภัณฑ์ในตำแหน่งที่ไม่มั่นคง มิฉะนั้นอาจตกหล่นจนก่อให้เกิดการบาดเจ็บหรือแม้แต่เสียชีวิตได้ การบาดเจ็บโดยเฉพาะในเด็กสามารถหลีกเลี่ยงได้ด้วยข้อควรระวังง่าย ๆ เช่น
  - ใช้เฟอร์นิเจอร์หรือขาตั้ง/ที่ยึดที่ผู้ผลิตแนะนำเท่านั้น
  - ใช้เฟอร์นิเจอร์ที่สามารถรองรับน้ำหนักโทรทัศน์ได้อย่างปลอดภัยเท่านั้น
  - ตรวจสอบให้แน่ใจว่าผลิตภัณฑ์ไม่ยื่นล้ำขอบเฟอร์นิเจอร์ที่รองรับ
  - ห้ามวางผลิตภัณฑ์บนเฟอร์นิเจอร์สูง (เช่น ตู้หรือชั้นหนังสือ) โดยไม่ยึดทั้งเฟอร์นิเจอร์และผลิตภัณฑ์ให้มั่นคงกับส่วนรองรับที่เหมาะสม
  - ห้ามวางผลิตภัณฑ์บนผ้าหรือวัสดุอื่นที่อาจอยู่ระหว่างผลิตภัณฑ์กับเฟอร์นิเจอร์รองรับ
  - ให้ความรู้แก่เด็กเกี่ยวกับอันตรายจากการปีนป่ายเฟอร์นิเจอร์เพื่อเอื้อมถึงผลิตภัณฑ์หรือปุ่มควบคุม
  - ห้ามวางสิ่งของที่ล่อใจให้เด็กปีนป่าย เช่น ของเล่นหรือรีโมตคอนโทรลไว้บนตัวผลิตภัณฑ์หรือเฟอร์นิเจอร์ที่วางผลิตภัณฑ์
  - หากต้องย้ายผลิตภัณฑ์เดิมไปยังตำแหน่งใหม่ ควรพิจารณาปัจจัยเดียวกันข้างต้น
- ห้ามวางผลิตภัณฑ์ในบริเวณที่มีการสั่นสะเทือนทางกล

⚠ คำเตือน

- ห้ามวางผลิตภัณฑ์ในสภาพแวดล้อมต่อไปนี้
  - ที่มีแสงแดดส่องโดยตรง ความชื้น ความร้อนสูงหรือต่ำเกินไป หรือมีฝุ่นมาก
  - ที่มีสารไวไฟหรือวัตถุระเบิด
  - ที่มีก๊าซไวไฟหรือก๊าซกัดกร่อน
  - ในห้องน้ำ ห้องครัว ฯลฯ
- ห้ามใช้ปลั๊กไฟหรือเต้าเสียบที่ชำรุด และตรวจสอบให้แน่ใจว่าปลั๊กและเต้าเสียบเชื่อมต่อกันอย่างแน่นหนา
- ดูแลปลั๊กไฟและเต้าเสียบให้ปราศจากฝุ่นและเศษโลหะ ห้ามทำให้สายไฟชำรุด
  - ห้ามดัดแปลงสายไฟ
  - ห้ามวางของหนักทับสายไฟ
  - วางสายไฟให้ห่างจากแหล่งความร้อน
  - ห้ามลากสายไฟขณะถอดปลั๊ก
- ห้ามเชื่อมต่อเครื่องใช้ไฟฟ้าหลายเครื่องเข้ากับปลั๊กพ่วงเดียวกัน มิฉะนั้นอาจเกิดไฟไหม้จากการใช้กระแสไฟฟ้าสูงเกินไป
- ห้ามนำเปลวไฟ (เช่น เทียนที่จุดอยู่) เข้าใกล้ผลิตภัณฑ์ มิฉะนั้นอาจก่อให้เกิดไฟฟ้าช็อตหรือไฟไหม้
- ห้ามวางภาชนะที่บรรจุน้ำบนผลิตภัณฑ์ เพื่อหลีกเลี่ยงไฟฟ้าช็อตหรือไฟไหม้ที่เกิดจากน้ำหกหรือกระเซ็น
- ห้ามให้วัตถุมีคม โลหะ หรือของเหลวเข้าไปในขั้วต่อสัญญาณหรือช่องระบายอากาศ เพื่อป้องกันไฟฟ้าลัดวงจรและความเสียหายต่อผลิตภัณฑ์ รวมถึงไฟฟ้าช็อต
- ช่องระบายอากาศบนตัวเครื่องออกแบบมาเพื่อระบายความร้อน เพื่อให้ชิ้นส่วนภายในไม่ร้อนจัดเกินไปและสามารถทำงานได้ตามปกติเป็นเวลานาน กรุณาอย่าปิดกั้นช่องระบายอากาศขณะวางเครื่อง
- เพื่อการระบายอากาศที่เพียงพอ ควรเว้นระยะห่างอย่างน้อย 30 ซม. ระหว่างผลิตภัณฑ์กับวัตถุอื่น พื้นที่ระบายอากาศไม่เพียงพออาจทำให้เกิดความร้อนสะสมและก่อให้เกิดความเสียหายหรือไฟไหม้ได้
- ห้ามวางผลิตภัณฑ์ในพื้นที่จำกัด เช่น ชั้นหนังสือหรือตู้แบบฝังผนัง เว้นแต่จะมีการระบายอากาศที่เหมาะสม

ห้ามสัมผัสปลั๊กไฟด้วยมือที่เปียก มิฉะนั้นอาจเกิดไฟฟ้าช็อต

ห้ามเปิดผลิตภัณฑ์ขณะเกิดพายุฝนฟ้าคะนอง ให้ถอดปลั๊กไฟและขั้วต่อสายอากาศออก เพื่อป้องกันฟ้าผ่า

ห้ามถอดแยกชิ้นส่วนผลิตภัณฑ์ด้วยตนเอง มิฉะนั้นอาจก่อให้เกิดไฟฟ้าช็อตหรือไฟไหม้ กรุณาติดต่อช่างผู้ชำนาญเพื่อบำรุงรักษา

⚠ ข้อควรระวัง

- เก็บอุปกรณ์เสริมชิ้นเล็กให้พ้นมือเด็ก เพื่อป้องกันการกลืนกิน
- ห้ามติดตั้งผลิตภัณฑ์ใกล้เครื่องปรับอากาศ มิฉะนั้นแผงจอภายในอาจเกิดการควบแน่นของความชื้นและทำให้เสียหาย
- ห้ามวางผลิตภัณฑ์ในบริเวณที่มีสนามแม่เหล็กแรงสูง มิฉะนั้นอาจถูกรบกวนและเสียหายจากคลื่นแม่เหล็กไฟฟ้า
- หากไม่ได้ใช้งานผลิตภัณฑ์เป็นเวลานาน กรุณาปิดเครื่องและถอดปลั๊กไฟออก
- ก่อนทำความสะอาดผลิตภัณฑ์ ให้ถอดปลั๊กไฟและเช็ดด้วยผ้านุ่ม ห้ามใช้สารเคมีและหลีกเลี่ยงไม่ให้สิ่งแปลกปลอมเข้าสู่ผลิตภัณฑ์ การทำความสะอาดที่ไม่ถูกวิธี (เช่น การใช้น้ำยาทำความสะอาด น้ำ ฯลฯ) อาจทำให้ลักษณะภายนอกของผลิตภัณฑ์เสียหาย ข้อความสกรีนบนผลิตภัณฑ์ลบเลือน หรือของเหลวไหลเข้าเครื่องจนชิ้นส่วนเสียหายและจอไม่แสดงผล
- ในการปรับตำแหน่งหรือมุมของผลิตภัณฑ์ กรุณาถอดสายทั้งหมดออกก่อน และเคลื่อนย้ายอย่างช้า ๆ เพื่อป้องกันการตกหล่น
- ห้ามขัดถูด้วยวัตถุแข็ง เคาะ งอ หรือบีบหน้าจอ LCD
- ห้ามใช้งานผลิตภัณฑ์ทันทีหลังจากย้ายจากที่ที่มีอุณหภูมิต่ำไปยังที่ที่มีอุณหภูมิสูง เพราะจะทำให้เกิดฝ้าภายในและความเสียหาย
- หากหน้าจอ LCD แตกและของเหลวกระเซ็นถูกผิวหนัง กรุณาล้างด้วยน้ำสะอาดทันทีเป็นเวลา 15 นาที และไปพบแพทย์
- ห้ามออกแรงกดที่แผงจอเมื่อยกผลิตภัณฑ์ด้วยมือ
- การแสดงภาพเดิมซ้ำเป็นเวลานานหรือภาพที่มีตัวอักษร/ไอคอนคงที่อาจทำให้เกิด "ภาพค้าง" บนหน้าจอซึ่งจะไม่หายไปแม้ปิดเครื่องเป็นเวลานาน ความเสียหายลักษณะนี้ไม่อยู่ในความคุ้มครองของการรับประกัน
- รับชมในสภาพแสงที่เหมาะสม แสงน้อยเกินไปหรือรับชมเป็นเวลานานอาจเป็นอันตรายต่อดวงตา
- ปรับระดับเสียงให้เหมาะสมเพื่อไม่ให้เป็นอันตรายต่อการได้ยิน
- หากใช้ปลั๊กไฟหรือขั้วต่ออุปกรณ์เป็นอุปกรณ์ตัดการเชื่อมต่อ ควรให้สามารถใช้งานได้สะดวก
- ข้อมูลจำเพาะทางเทคนิคในคู่มือผู้ใช้และบนบรรจุภัณฑ์อาจเปลี่ยนแปลงได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้า หากมีความคลาดเคลื่อนเล็กน้อยระหว่างคู่มือผู้ใช้กับการใช้งานจริง ให้ยึดถือการใช้งานจริงเป็นหลัก


รายการอุปกรณ์ในกล่อง

1.เครื่องโทรทัศน์

2.คู่มือผู้ใช้

3.รีโมตคอนโทรล

4.สายไฟ

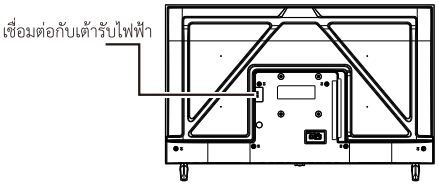


การเชื่อมต่ออุปกรณ์ภายนอก

หมายเหตุ

1. ชนิด ตำแหน่ง การจัดวาง และจำนวนช่องเชื่อมต่อจะแตกต่างกันไปตามรุ่น อินเทอร์เฟซของรุ่นที่ระบุนี้ให้ยึดตามสภาพจริงของผลิตภัณฑ์

2.ขั้วต่อ HDMI สามารถทำหน้าที่เป็นขั้วต่อ DVI ได้ เมื่อใช้ร่วมกับตัวแปลงสัญญาณ HDMI/DVI ภายนอก

3.อุปกรณ์ต่อพ่วงและสายเคเบิลที่กล่าวถึงในคู่มือนี้ต้องซื้อแยกต่างหาก

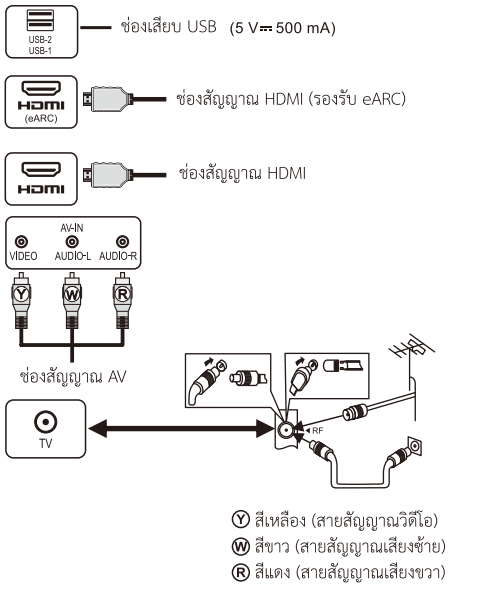

⚠ คำเตือน

เมื่อเชื่อมต่อสายอากาศภายนอกเข้ากับช่องสัญญาณของผลิตภัณฑ์ กรุณาปิดสวิตช์หลักของผลิตภัณฑ์ก่อน ห้ามวางสายอากาศภายนอกใกล้กับสายไฟฟ้าแรงสูงเพื่อป้องกันไฟฟ้าช็อต สายอากาศเครือข่ายแบบมีสายที่เชื่อมต่อกับผลิตภัณฑ์นี้ต้องแยกออกจากสายดินป้องกันมิฉะนั้นอาจก่อให้เกิดไฟไหม้หรืออันตรายอื่น ๆ


HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby
AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

ปุ่มควบคุม

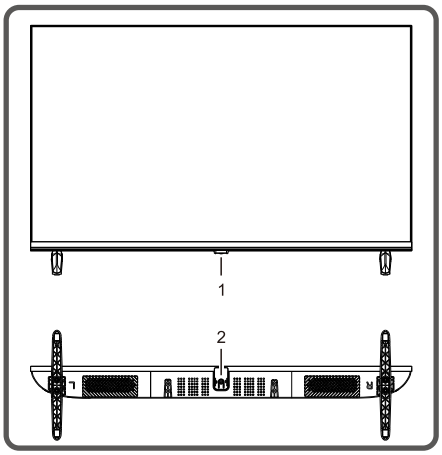

1.ไฟแสดงสถานะ (LED) และช่องรับสัญญาณรีโมตคอนโทรล

2.ปุ่ม (เปิด/ ปิด): ⏻

①.เมื่อเสียบปลั๊กไฟเข้ากับเต้าเสียบไฟฟ้า ให้กดปุ่ม ⏻ เพื่อเปิดเครื่อง

②.ในสถานะเปิดเครื่อง กดปุ่ม ⏻ ค้างไว้เพื่อแสดงเมนูฟังก์ชัน แล้วกดปุ่ม ⏻ เพื่อเลือกรายการถัดไป จากนั้นกดปุ่ม ⏻ ค้างไว้เพื่อยืนยัน

③.ในเมนูฟังก์ชัน กดปุ่ม ⏻ เพื่อเลือกไอคอนปิดเครื่อง แล้วกดปุ่ม⏻ ค้างไว้เพื่อปิดเครื่อง

หมายเหตุ

①. รูปลักษณ์อาจแตกต่างกันไปตามรุ่น กรุณายึดตามผลิตภัณฑ์จริง

②. กรุณาใช้รีโมตคอนโทรลสำหรับการใช้งานเพิ่มเติม

รีโมตคอนโทรล


วิธีการใส่ถ่านรีโมตคอนโทรล

ถอดฝาช่องใส่ถ่านออก แล้วใส่ถ่าน AAA (เบอร์ 7, 1.5 V) จำนวน 2 ก้อน โดยตรวจสอบให้ขั้ว "+" และ "-" ของถ่านตรงกับเครื่องหมายขั้วในช่องใส่ถ่านของรีโมตคอนโทรล

ข้อควรระวังในการใช้รีโมตคอนโทรล

- ห้ามวางวัตถุกีดขวางระหว่างรีโมตคอนโทรลกับช่องรับสัญญาณของเครื่อง
- แสงจ้าอาจรบกวนช่องรับสัญญาณรีโมตคอนโทรล กรุณาปรับมุมของแสงหรือของผลิตภัณฑ์ หรือใช้งานรีโมตใกล้กับช่องรับสัญญาณมากขึ้น
- ห้ามให้ถ่านสัมผัสกับสภาพแวดล้อมที่ร้อนจัด เช่น แสงแดดหรือไฟ หรือทำการชาร์จ ให้ความร้อน บดขยี้ หรือตัดถ่าน เพราะอาจก่อให้เกิดการระเบิด
- ห้ามวางถ่านในสภาพแวดล้อมที่มีอุณหภูมิสูงมากหรือความดันอากาศต่ำมาก ซึ่งอาจทำให้ถ่านระเบิดหรือรั่วไหลของของเหลว/ก๊าซไวไฟ
- หากไม่ได้ใช้รีโมตคอนโทรลเป็นเวลานานหรือถ่านหมด กรุณาถอดถ่านออก
- ห้ามใช้ถ่านต่างชนิดปะปนกัน และห้ามใช้ถ่านเก่ากับถ่านใหม่ปะปนกัน ควรเปลี่ยนถ่านเป็นคู่
- ถ่านที่ใช้แล้วเป็นอันตรายต่อสิ่งแวดล้อม กรุณาทิ้งถ่านที่ใช้แล้วตามข้อกำหนดด้านสิ่งแวดล้อมที่เกี่ยวข้อง

ปุ่มต่าง ๆ บนรีโมตคอนโทรล

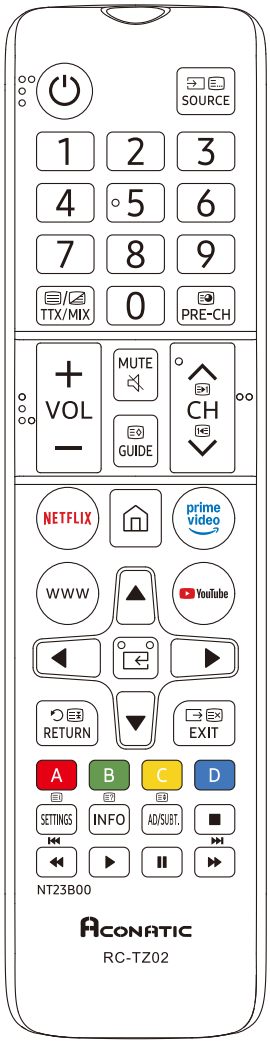

ปุ่ม	ฟังก์ชัน
Power (⏻)	สลับระหว่างสถานะทำงานและสแตนด์บาย
SOURCE	แสดงและเลือกแหล่งสัญญาณวิดีโอที่มีอยู่
0~9	เลือกหมายเลขช่องหรือหมายเลขอินพุต
TTX/MIX	สลับโหมด Teletext / Full TTX / Double TTX / Mix / Live TV ไปตามลำดับ
PRE-CH	กลับไปยังช่องก่อนหน้า
VOL +/−	ปรับระดับเสียง
MUTE	เปิด/ปิดเสียง
GUIDE	แสดงหน้าจอผังรายการ (Guide)
CH ∧/∨	เปลี่ยนช่องรายการ
⌂	แสดงหน้าจอโฮม
NETFLIX prime video YouTube	เปิดแอปพลิเคชัน (แอปที่ใช้งานได้อาจแตกต่างกันไปตามพื้นที่ทางภูมิศาสตร์หรือผู้ให้บริการเนื้อหา)
WWW	คลิกเพื่อเปิดเบราว์เซอร์
▲,▼,◀,▶	เลือกรายการหรือปรับค่า
↵	– ยืนยันการทำงาน – ขณะรับชมรายการออกอากาศ กดปุ่มนี้เพื่อแสดงข้อมูลรายการปัจจุบัน
RETURN	กลับไปยังเมนูหรือช่องก่อนหน้า
EXIT	ออกจากเมนู OSD หรือแอปพลิเคชัน
A (red) B (green) C (yellow) D (blue)	ใช้ปุ่มเหล่านี้ตามคำแนะนำที่ปรากฏบนหน้าจอ
SETTINGS	แสดงเมนู "การตั้งค่าทั้งหมด"
INFO	แสดงข้อมูลเกี่ยวกับรายการหรือเนื้อหาปัจจุบัน
AD/SUBT.	แสดงเมนู "ทางลัดการช่วยเหลือการเข้าถึง"
■	หยุดการทำงานในโหมดมัลติมีเดีย
◀◀ (⏮)	– ถอยหลังอย่างเร็วในโหมดมัลติมีเดีย – กดค้างเพื่อเล่นไฟล์ก่อนหน้า
▶ (play)	เล่นไฟล์มัลติมีเดีย
❚❚	หยุดการเล่นมัลติมีเดียชั่วคราว
▶▶ (⏭)	– เดินหน้าอย่างเร็วในโหมดมัลติมีเดีย – กดค้างเพื่อเล่นไฟล์ถัดไป

หมายเหตุ: รูปลักษณ์ของรีโมตคอนโทรลจริงอาจแตกต่างจากที่กล่าวถึงในเอกสารนี้ กรุณายึดตามผลิตภัณฑ์จริงเป็นมาตรฐาน

การใช้งานเบื้องต้น

หมายเหตุ

1. การใช้งานปุ่มในที่นี้อ้างอิงจากการใช้งานรีโมตคอนโทรล ส่วนการใช้งานปุ่มควบคุมบนแผงเครื่อง กรุณาดูที่หัวข้อ " ปุ่มควบคุม "
2. ปุ่ม [▶]หมายถึงปุ่มทิศทาง และปุ่ม[▶] (เล่น) หมายถึงปุ่มฟังก์ชันเล่น
3. ก่อนเปิดเครื่อง กรุณาตรวจสอบให้แน่ใจว่าแหล่งจ่ายไฟมีความเสถียร
4. ซอฟต์แวร์ของแต่ละประเทศอาจแตกต่างกัน การใช้งานซอฟต์แวร์ที่ระบุให้ยึดตามสภาพจริง
5. เนื่องจากผลิตภัณฑ์มีการอัปเดตอยู่เสมอ ซอฟต์แวร์อาจได้รับการอัปเกรดได้ทุกเมื่อ หากการใช้งานซอฟต์แวร์แตกต่างจากที่อธิบายไว้ กรุณายึดตามผลิตภัณฑ์จริง

การเปิดเครื่อง/สแตนด์บาย

เสียบสายไฟเข้ากับเต้าเสียบไฟฟ้า จากนั้นกดปุ่ม [⏻] เพื่อเปิดเครื่อง เมื่อเปิดเครื่องครั้งแรก หน้าจอตั้งค่าเริ่มต้นจะปรากฏขึ้น กรุณาตั้งค่าตามต้องการ ในสถานะเปิดเครื่อง กดปุ่ม[⏻]เพื่อสลับไปยังโหมดสแตนด์บาย

การเลือกสัญญาณเข้า

กดปุ่ม**[SOURCE]** เมนูแหล่งสัญญาณจะปรากฏบนหน้าจอ กดปุ่ม [◀]/[▶] เพื่อเลือกสัญญาณเข้า แล้วกดปุ่ม [↵] เพื่อยืนยัน

หมายเหตุ *เปิดอุปกรณ์ก่อนที่จะเลือกเป็นแหล่งสัญญาณภายนอก*

คำอธิบายการใช้งานเมนู

กดปุ่ม **[SETTINGS]** เพื่อแสดงเมนูหลักบนหน้าจอ

1. กดปุ่ม **[▲]/[▼]**เพื่อเลือกเมนูจาก ภาพ, เสียง, การเชื่อมต่อ, การออกอากาศ, ทั่วไปและความเป็นส่วนตัว, การสนับสนุน
2. กดปุ่ม **[▶]** เพื่อเข้าสู่เมนูย่อย
3. กดปุ่ม**[▲]/[▼]** เพื่อเลือกรายการในเมนู
4. กดปุ่ม **[↵]** เพื่อยืนยัน
5. กดปุ่ม**[▲]/[▼]/[◀]/[▶]** เพื่อปรับค่าหรือการตั้งค่า
6. กดปุ่ม[↩]เพื่อกลับไปยังเมนูก่อนหน้าเมื่อผลิตภัณฑ์แสดงเมนูย่อย
7. ระหว่างการใช้งานเมนู ไอคอนของตัวเลือกที่ใช้งานไม่ได้จะเปลี่ยนเป็นสีเทา

การตั้งค่าภาษา OSD

กดปุ่ม**[SETTINGS]**เลือก **ทั่วไปและความเป็นส่วนตัว > ตัวจัดการระบบ > ภาษา** แล้วกดปุ่ม[↵]เพื่อเข้า กดปุ่ม [▲]/[▼] เพื่อเลือกภาษาที่ต้องการ แล้วกดปุ่ม[↵]

การค้นหาช่องสัญญาณ

ก่อนการค้นหาช่อง กรุณาตรวจสอบให้แน่ใจว่าเชื่อมต่อสายอากาศเรียบร้อยแล้ว หลังจากเลือกแหล่งสัญญาณ TV ให้กดปุ่ม**[SETTINGS]**เลือก **การออกอากาศ** แล้วกดปุ่ม [↵] เพื่อเข้า จากนั้นดำเนินการตามต้องการ

การตั้งค่าเครือข่าย

กดปุ่ม**[SETTINGS]** แล้วเลือก **การเชื่อมต่อ > เครือข่าย > เปิดการตั้งค่าเครือข่าย > ไร้สาย / มีสาย** แล้วกดปุ่ม [↵] เพื่อเข้า และตั้งค่าตามต้องการ

หมายเหตุ *ก่อนใช้งานเครือข่ายแบบมีสาย ให้เชื่อมต่อปลายด้านหนึ่งของสายแลนเข้ากับช่องเครือข่ายภายในเครื่อง และปลายอีกด้านเข้ากับเราเตอร์*

เปิดเครื่องด้วยมือถือ (Power On with Mobile)

ฟังก์ชันนี้ช่วยให้ระบบรีโมตสามารถปลุกผลิตภัณฑ์ที่อยู่ในโหมดพักได้ โดยการส่งข้อมูลรูปแบบเฉพาะที่ตัวเครื่องรอรับ (ใช้งานได้เมื่อเชื่อมต่อเครือข่ายแล้ว) กดปุ่ม**[SETTINGS]** แล้วเลือก **การเชื่อมต่อ > เครือข่าย > การตั้งค่าขั้นสูง > เปิดเครื่องด้วยมือถือ** จากนั้นกดปุ่ม [↵] เพื่อตั้งค่าเปิดหรือปิด

ตัวเล่นมัลติมีเดีย

ก่อนเล่นไฟล์ในดิสก์ภายนอก ให้เสียบอุปกรณ์จัดเก็บข้อมูลชนิด USB เข้ากับช่อง USB กดปุ่ม**[SOURCE]**แล้วเลือกแหล่งสัญญาณ USB และกดปุ่ม[↵] เพื่อเข้า เลือกไฟล์เป้าหมายแล้วกดปุ่ม**[▶]** (เล่น) เพื่อเล่นไฟล์ กดปุ่ม[↩] เพื่อกลับไปหน้าก่อนหน้า

ข้อควรระวัง:

อุปกรณ์ USB ที่ไม่ได้มาตรฐานอาจไม่สามารถตรวจพบได้อย่างถูกต้อง ในกรณีนี้ กรุณาเปลี่ยนไปใช้อุปกรณ์ USB ที่ได้ตามมาตรฐาน

2. ระบบสตรีมมีเดียมีข้อจำกัดเกี่ยวกับรูปแบบไฟล์ หากไฟล์อยู่นอกเหนือข้อจำกัดของระบบ การเล่นไฟล์อาจผิดปกติ

3. ห้ามถอดอุปกรณ์ USB ขณะกำลังเล่นไฟล์ มิฉะนั้นระบบหรืออุปกรณ์อาจเกิดปัญหา ก่อนเปลี่ยนอุปกรณ์ USB กรุณาปิดเครื่องก่อน

4. ระบบรองรับอุปกรณ์มาตรฐาน USB1.1 และ USB2.0 เช่น อุปกรณ์จัดเก็บข้อมูลชนิด USB และฮาร์ดดิสก์แบบถอดได้

5. กระแสไฟฟ้าขาออกสูงสุดของช่อง USB ของเครื่องนี้คือ 500mA ระบบป้องกันตัวเองจะทำงานหากเกินขีดจำกัดนี้ กรุณาใช้แหล่งจ่ายไฟภายนอกหากอุปกรณ์ภายนอกต้องการกระแสไฟฟ้าสูงกว่านี้

6. ระบบมีความซับซ้อน เมื่อกำลังอ่านหรือเล่นไฟล์ หน้าจออาจค้างหรือบางฟังก์ชันอาจใช้งานไม่ได้เนื่องจากความเข้ากันได้และเสถียรภาพของอุปกรณ์ USB ในกรณีนี้ กรุณาปิดเครื่องและเริ่มต้นระบบใหม่

ขณะเล่นไฟล์ กดปุ่ม [⏎] เพื่อแสดงหรือซ่อนแถบเครื่องมือ กดปุ่ม [◀◀(⏮)]/[▶▶(⏭)]/[▶]/[❚❚]/[■] บนรีโมตคอนโทรลเพื่อใช้งานฟังก์ชันลัด

คู่มือผู้ใช้

สำหรับการใช้งานที่ละเอียดยิ่งขึ้น กรุณาดูที่ **คู่มือผู้ใช้** กดปุ่ม[**SETTINGS**] แล้วเลือก **การสนับสนุน > เปิดคู่มือผู้ใช้ > คำแนะนำ / การแก้ไขปัญหา / หัวข้อที่ดูล่าสุด / คู่มือผู้ใช้** แล้วกดปุ่ม [⏎] เพื่อเข้า

ข้อความสำคัญเกี่ยวกับบริการเครือข่าย

เนื้อหาและบริการทั้งหมดที่ได้รับจากผลิตภัณฑ์นี้เป็นของบุคคลที่สาม และได้รับการคุ้มครองตามกฎหมายลิขสิทธิ์ สิทธิบัตร เครื่องหมายการค้า หรือทรัพย์สินทางปัญญาอื่น ๆ เนื้อหาและบริการดังกล่าวมีไว้สำหรับการใช้งานส่วนบุคคลที่ไม่ใช่เชิงพาณิชย์เท่านั้น ห้ามใช้เนื้อหาหรือบริการใด ๆ โดยไม่ได้รับอนุญาตจากเจ้าของเนื้อหาหรือผู้ให้บริการ

บริษัทของเราจะไม่รับผิดชอบต่อความเสียหายทั้งทางตรง ทางอ้อม หรือโดยบังเอิญ ที่เกิดจากการเข้าถึงเนื้อหาหรือบริการใด ๆ หรือข้อมูล หรือซอฟต์แวร์ของบุคคลที่สามผ่านเครื่องนี้ ไม่ว่าจะเป็นของท่านหรือของบุคคลที่สาม

บริการของบุคคลที่สามอาจมีการเปลี่ยนแปลง ลบ หรือหยุดให้บริการได้โดยไม่ต้องแจ้งล่วงหน้า บริษัทของเราไม่รับประกันหรือรับรองความพร้อมใช้งานอย่างต่อเนื่องของบริการหรือเนื้อหาใด ๆ ในช่วงเวลาใดเวลาหนึ่ง

บริษัทของเราไม่รับผิดชอบต่อบริการและเนื้อหาที่เกี่ยวข้องดังกล่าว นอกจากนี้เราจะไม่รับผิดชอบใด ๆ ต่อบริการลูกค้าที่เกี่ยวข้อง กรุณาติดต่อผู้ให้บริการเนื้อหาและบริการที่เกี่ยวข้องโดยตรง หากท่านมีปัญหาหรือคำร้องขอบริการเกี่ยวกับเนื้อหาหรือบริการดังกล่าว

การแก้ไขปัญหาเบื้องต้น

■ **มีจุดหิมะรบกวนบนภาพและมีเสียงรบกวนร่วมด้วย**

1. ตรวจสอบว่าปลั๊กสายอากาศหลวมหรือสายชำรุดหรือไม่
2. ตรวจสอบชนิดของสายอากาศ (VHF/UHF)
3. ปรับทิศทางและตำแหน่งของสายอากาศ
4. ลองใช้เครื่องขยายสัญญาณ

■ **ไม่มีภาพและเสียงบนหน้าจอ ไฟแสดงสถานะไม่ติด**

ตรวจสอบว่าเชื่อมต่อสายไฟเรียบร้อยหรือไม่

■ **มีเส้นประหรือแถบรบกวนบนภาพ**

ห้ามใช้ไดร์เป่าผมไฟฟ้าใกล้กับผลิตภัณฑ์ และปรับทิศทางสายอากาศเพื่อลดสัญญาณรบกวน

■ **ภาพซ้อนปรากฏบนหน้าจอ**

1. ใช้สายอากาศแบบมีทิศทาง
2. ปรับทิศทางของสายอากาศ

■ **ไม่มีเสียง**

1. ปรับระดับเสียงให้เหมาะสม
2. กดปุ่ม[🔇]บนรีโมตเพื่อยกเลิกโหมดปิดเสียง

■ **ไม่มีสัญญาณเข้า หน้าจอเครื่องไม่แสดงภาพ**

ไฟแสดงสถานะกะพริบ

1. ตรวจสอบว่าสายสัญญาณหลวมหรือหลุดหรือไม่ ให้เชื่อมต่อใหม่
2. เครื่องอาจอยู่ในโหมดสแตนด์บาย กรุณารีสตาร์ทเครื่อง

■ **ระยะการควบคุมของรีโมตสั้นหรือควบคุมไม่ได้**

1. นำวัตถุที่กีดขวางช่องรับสัญญาณรีโมตออก
2. เปลี่ยนถ่านรีโมต

■ **เบราว์เซอร์ไม่สามารถเข้าถึงลิงก์ใด ๆ ได้**

1. สอบถามผู้ดูแลระบบเครือข่ายเพื่อขอหมายเลข IP และค่าอื่น ๆ ที่ใช้งานได้
2. ตรวจสอบว่าสายเชื่อมต่อเครือข่ายเชื่อมต่ออย่างปกติหรือไม่
3. ปรึกษาผู้ให้บริการเครือข่าย

■ **การเล่นวิดีโอออนไลน์ช้ามาก**


1. กรุณาอัปเกรดความเร็วอินเทอร์เน็ตของท่านให้สูงขึ้น
2. กรุณาลองเปลี่ยนไปใช้ที่อยู่อื่นเพื่อรับข้อมูลที่ดีขึ้น

■ **เครื่องทำงานช้า ระบบค้าง ไม่สามารถใช้งานเครื่องได้**

ให้ถอดปลั๊กไฟก่อน แล้วเสียบปลั๊กไฟใหม่หลังจากผ่านไปประมาณ 1-2 นาที จากนั้นเปิดเครื่องอีกครั้ง

คำแนะนำการติดตั้งขาตั้ง

วางเครื่องในแนวราบก่อน แยกขาตั้งซ้ายและขวา และทิศทางหน้า-หลังของขาตั้งให้ถูกต้อง จากนั้นติดตั้งขาตั้งเข้ากับฝาหลังของเครื่องตามทิศทางลูกศรในภาพ จัดตำแหน่งรูสกรูให้ตรงกัน แล้วขันสกรูให้แน่น (โปรดสังเกตว่าโมดูลขาตั้งต้องปรับให้ตรงตามสถานะในภาพ มิฉะนั้นจะไม่สามารถติดตั้งได้)

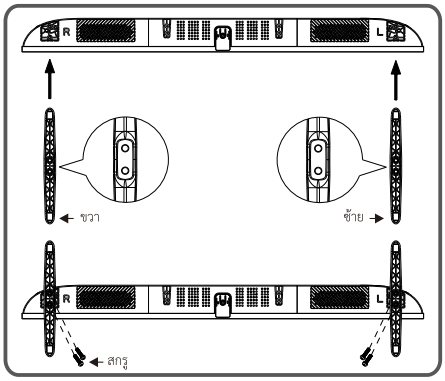


หมายเหตุ รูปลักษณ์ของขาตั้งและตัวเครื่องจริงอาจแตกต่างจากภาพประกอบ กรุณายึดตามอุปกรณ์จริงเป็นมาตรฐาน

การใช้ขาแขวนผนัง

⚠ คำเตือน

- กรุณาเลือกซื้อขาแขวนผนังที่เหมาะสมสำหรับผลิตภัณฑ์เมื่อจะติดตั้งบนผนัง
- ตรวจสอบให้แน่ใจว่าความสามารถในการรับน้ำหนักของผนังไม่น้อยกว่า 4 เท่าของน้ำหนักรวมของผลิตภัณฑ์และขาแขวนผนัง เพื่อป้องกันการหล่นตก
- กรุณาปฏิบัติตามคำแนะนำที่ให้มาพร้อมผลิตภัณฑ์และขาแขวนผนังในการติดตั้ง
- ตรวจสอบให้แน่ใจว่าไม่มีสายไฟหรือท่อร้อยสายอยู่ในบริเวณผนังที่จะติดตั้งขาแขวน
- กรุณามอบหมายให้ช่างผู้ชำนาญเป็นผู้ดำเนินการติดตั้ง บริษัทจะไม่รับผิดชอบต่ออุบัติเหตุ การบาดเจ็บ หรือความเสียหายที่เกิดจากการติดตั้งที่ไม่ถูกต้อง
- เมื่อใช้รุ่นแบบไร้ขอบ (frameless) ต้องวางบนพื้นผิวแนวราบหรือยึดติดกับผนังแนวตั้งอย่างมั่นคง หลีกเลี่ยงการวางหน้าจอในมุมเอียงไปข้างหน้าเมื่อเทียบกับแนวราบ หากเครื่องมีลักษณะเอียงไปข้างหน้า มุมเอียงสูงสุดต้องไม่เกิน 5 องศา

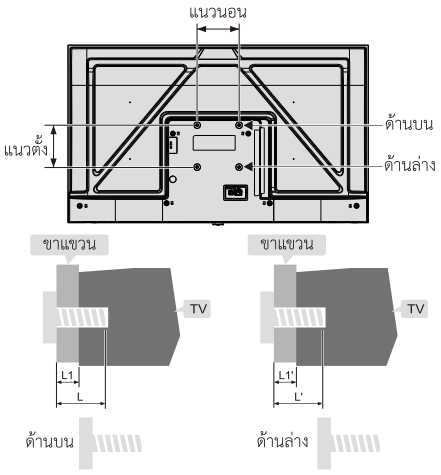

L1: *ความหนาของขาแขวน* L1': *ความหนาของขาแขวน*

ระยะห่างรูบนผนัง (HxV) (มม.)	สกรูที่ต้องใช้ (มม.)
32"/43": 100×100	Up:2×M4 (6+L1≤L≤9.5+L1), *สกรูแบบเกรียวละเอียด* Bottom:2×M4 (6+L1'≤L'≤9.5+L1'), *สกรูแบบเกรียวละเอียด*

หมายเหตุ:
หากพบสกรูอยู่ในรูสกรูสำหรับขาแขวนผนังด้านหลังผลิตภัณฑ์ก่อนติดตั้งขาแขวนผนัง ให้ถอดสกรูออกและเก็บไว้ใช้งานในภายหลัง
กรุณาซื้อสกรูยึดผนังตามสภาพการใช้งานจริง

Contents

Safety Warning and Notice……1
Packing List……3
Connecting Peripheral Equipment……3
Panel Control Key……4
Remote Control……4
Basic Operations……6
Turning On/Standby……6
Signal Source Selection……6
Menu Operation Description……6
OSD Language Setting……6
Channel Scanning……6
Network Settings……6
Power On with Mobile……6
Multimedia Player……6
User Guide……7
Important Statement on Network Services……7
Troubleshooting……8
Base Installation Instructions……8
Use of Wall Mount……9

Safety Warning and Notice

The design of this product has given consideration to factors affecting personal safety, and the product has been strictly tested prior to delivery. However, improper operation may result in electric shock and fire disaster. To ensure safety, prolong the service life of this product, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.

⚠ **Warning**	May result in casualties
⚠ **Attention**	May result in personal injury or property losses
⊘	Indicate the behaviors that must be prohibited
●	Indicate the operations that must be performed

- If coal gas or other flammable gases leak, do not unplug the power cord of the product or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.
- Power Under following conditions, please pull out the power plug and promptly contact the authorized professional personnel to repair.
  – Power failure or unstable voltage
  – Abnormal sound or smell from the device.
  – Power cord is damaged.
  – The product is damaged due to falling off, knock or impact.
  – Any liquid or foreign matters enter into the product.

⚠ Warning

- Only use 100-240 V~, 50/60 Hz power supply.
- Completely insert the power plug into power outlet, if it is loose, it may cause spark or even fire.
- Pull out the power cord plug of this product to cut off the power.
- All cables can be connected or pulled out only after power supply is turned off.
- Keep the outdoor antenna away from high voltage mains electricity wires to avoid electric shock.
- Do not fix the product in an unstable position, or else it may fall down, cause casualty or even fire. Many injuries, especially to children, can be avoided by taking simple precautions, such as:
  – Always use the furniture or brackets or installation methods recommended by the manufacturer of the product.
  – Only use the furniture that can safely support the television set.
  – Ensuring the product is not overhanging the edge of the supporting furniture.
  – Do not place the product on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the product to a suitable support.
  – Do not place the product on cloth or other materials that may be located between the product and supporting furniture.
  – Educating children about the dangers of climbing on furniture to reach the product or its controls.
  – Do not place objects which may tempt children into climbing, such as toys and remote control, on top of the product or on top of the furniture where the product is placed.
  – If the existing product needs to be relocated, the same factors as above should be considered.
- Do not place the product at any place susceptible to mechanical vibration.

Warning

- Do not put the product in the environment:
  - With direct sunshine, moisture, overheating, undercooling or heavy dust;
  - With flammable or explosive substance;
  - With flammable or corrosive gas;
  - In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
- Keep the power plug and socket free of dust and metal pieces.
- Do not damage the power cord:
  - It is prohibited to refit the power cord;
  - Do not put heavy object on the power cord;
  - Keep the power cord away from heat source;
  - Do not drag the power cord when unplugging.
- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame (e.g. lit candle) approach the product, or else it may cause electric shock or fire.
- Do not put the container filled with water on the product, to avoid electric shock or fire caused by water drop of splashing.
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
- The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place the product.
- For adequate ventilation, there should be at least a 30 cm gap or distance between the product and other objects. Insufficient ventilation space can cause overheating and may result in damage or even a fire.
- Do not put the product in limited space, e.g. bookcase or embedded closet, unless the product is properly ventilated.

Do not touch the plug with wet hands, or else it may cause electric shock.

Do not turn on the product in thunderstorm weather; instead, unplug the power plug and antenna connector to avoid lightning strike.

Do not disassemble the product privately, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.

Attention

- Keep the small accessories away from children's reach to avoid swallowing.
- Do not mount the product against air conditioner, or else the internal panel of the display may condense moisture and cause failure.
- Do not place the product at any place with strong magnetic field, or else it may be interfered with and damaged by electromagnetic wave.
- If the product won't be used for a long time, please turn off it and unplug the power cord.
- Before cleaning the product, unplug the power cord and wipe with soft cloth; do not use chemical reagents and avoid foreign substances entering into the product. The incorrect cleaning (such as cleaning fluid, water, etc) may lead to damage of product's appearance, erasing products printing information, even flow into the machine and damage components, cause no display of machine.
- To adjust the position or angle of the product, please disconnect all wires and move slowly to avoid falling down.
- Do not rub with hard object, knock at, bend or squeeze the LCD screen.
- Do not use the product immediately after transferring it to the places with high temperature from the place with low temperature, which will cause fogging inside and failures.
- If the LCD screen is broken and the liquid splashes on skin, please wash with clean water immediately for 15 minutes, and go to see your doctor.
- Do not put stress on the panel when carrying the product with hands.
- Displaying the same image for a long time or the active image with fixed words, icons will leave "image sticking" on screen which will not disappear after powering off for a long time. This defect is not covered by warranty.
- Watch in appropriate light; poor light or long time watching may hurt your eyes.
- Adjust the volume appropriately to avoid hurting your hearing.
- If a power plug or appliance coupler is used as disconnecting device, it should ensure easy operation.
- All the technical specifications in the user manual and on the package are subject to changes without prior notice. If there is slight deviation between the user manual and actual operation, the latter shall prevail.

Packing List

1. The TV set.
2. User Manual.
3. Remote control.
4. Power cord (or attached to the product).

Connecting Peripheral Equipment

Remark:

1. The type, location, arrangement and number of interfaces for different models vary. The interface of the specific model depends on the actual situation.
2. HDMI connector can realize DVI connector function with external HDMI/DVI commutator.
3. The peripheral equipment and cables described in this manual should be purchased separately.

Warning


When connecting outdoor antenna to signal port of the product, please turn off the main power switch of the product first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this product must be isolated from the protective grounding, or else it will cause fire or other hazards.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE


The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Dolby
AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

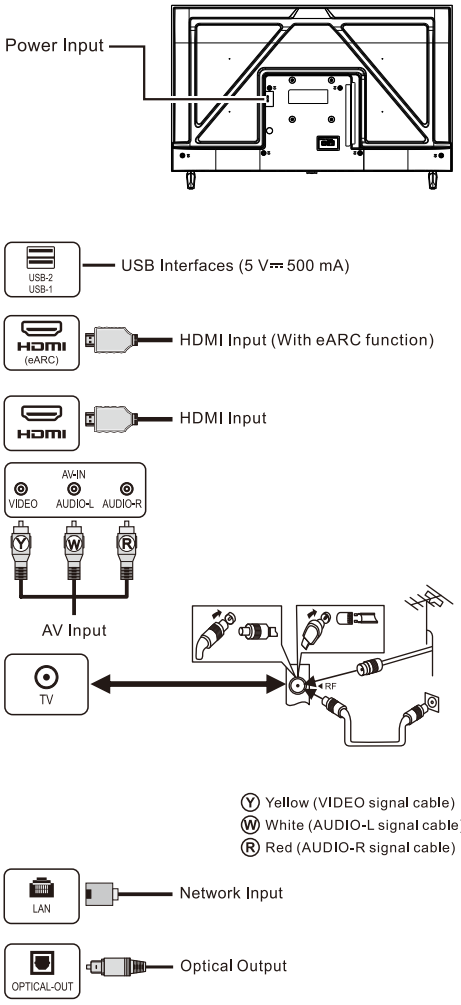

Panel Control Key

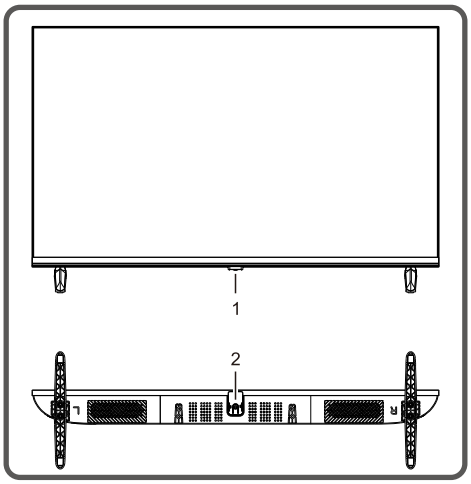

1. Power LED indicator and remote receiving window.
2. ⏻ key:
   ①. When insert the power cord plug into the electrical socket, you can press ⏻ key to turn on the product.
   ②. In the power-on state, press ⏻ key to display the function menu, and press ⏻ key to select the next item, then keep pressing ⏻ key to confirm.
   ③. In the function menu, press ⏻ key to select the icon ⏻, and keep pressing ⏻ key to turn off the product.

Remark:

①. *The appearance varies depending on the model, and the actual product shall prevail.*

②. *Please use the remote control for more operation.*

Remote Control


Method for Installation of Remote Control Battery

Remove the battery compartment cover and insert two AAA (No. 7, 1.5 V) batteries; make sure the polarity of the batteries is in compliance with the polarity mark "+" and "-" in the battery compartment of the remote control.

Precautions for Using Remote Control:

- Do not place objects between the remote control and the remote control sensor window.
- Strong lighting affects the remote control sensor window, please adjust the angle of lighting or the product, or operate the remote control near the remote control sensor window.
- Do not expose the battery to overheating environments such as sunlight or fire, or charge, heat or incinerate, mechanically crush or cut the battery, as this may cause an explosion.
- Do not place the battery in an environment with extremely high temperature or extremely low air pressure that may cause the battery to explode or leak flammable liquids or gases.
- If the remote control is not in use for a long time or the batteries are dead, please remove the batteries.
- Please do not use batteries of different types. It is not allowed to use old and new batteries together; the batteries should be replaced in pair.
- The waste batteries contaminate the environment, please dispose the waste batteries pursuant to relevant regulations on environmental protection.

Buttons of the Remote Control

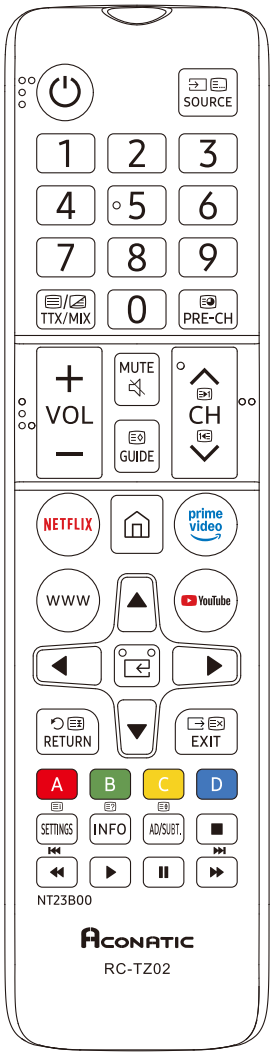

Buttons	Function
Power (⏻)	Switch between working and standby status.
SOURCE	Display and selects available video sources.
0~9	Select the channel or input numbers.
TTX/MIX	Alternately selects Teletext mode, Full TTX / Double TTX / Mix / Live TV.
PRE-CH	Return to the previous channel.
VOL +/–	Adjust the volume
MUTE	Turn the sound on/off.
GUIDE	Display the Guide screen.
CH /	Change program channel.
⌂	Display the home screen.
NETFLIX prime video YouTube	Open applications. • Available apps may differ depending on the geographical area or contents provider.
WWW	Click to open the browser.
▲,▼,◀,▶	Select items or adjust values.
↵	– Confirm the operation. – While watching a broadcast programme, press the button to display the specific programme information.
RETURN	Return to the previous menu or channel.
EXIT	Exit OSD menu or application.
A (red) B (green) C (yellow) D (blue)	Use these buttons according to the directions on the screen.
SETTINGS (☰)	Display **All Settings** menu.
INFO (?)	Display information about the current programme or content.
AD/SUBT.	Display the **Accessibility Shortcuts**.
■	Stop function in multimedia.
◀◀ (⏮)	– Fast backward function in multimedia. – Keep pressing the button to play the previous file in multimedia.
▶ (play)	Play function in multimedia.
❚❚	Pause function in multimedia.
▶▶ (⏭)	– Fast forward function in multimedia. – Keep pressing the button to play next file in multimedia..

***Note**: The appearance of the remote control may be different from this diagram; please refer to the real object as standard.*

Basic Operations

Remark:

1. The buttons operation here refers to remote control operation, as for panel control key operation, please refer to "**Panel Control Key**".
2. The [▶] button means direction button and the [▶](play) button means play function button.
3. Before powering on platform, please make sure that the power supply is stable.
4. The software of different countries is different. The specific software operation should be subject to the actual situation.
5. Because the product is constantly updated, the software is upgraded at any time, if the software operation is different from the actual operation, please refer to the actual product.

Turning On/Standby

Plug power cord into the electrical socket, then press [⏻] button to turn on the product. When it is the first time to turn on the product, the initialization settings interface appears, please set it as needed.

In power on state, press [⏻] button to switch to standby mode.

Signal Source Selection

Press [**SOURCE**] button, then menu of signal source will be displayed on the screen. Press [◀]/[▶] button to select the input signal, and press [⏎] button to confirm.

Note: Switch on the device before selecting it as an external signal source.

Menu Operation Description

Press [**SETTINGS**] button to show the main menu on the screen:

1. Press [▲]/[▼] button to select a menu from **Picture**, **Sound**, **Connection**, **Broadcasting**, **General & Privacy**, **Support.**
2. Press [▶] button to enter the submenu.
3. Press [▲]/[▼] button to select an item in the menu.
4. Press [⏎] button to confirm.
5. Press [▲]/[▼]/[◀]/[▶] button to adjust the value or setting.
6. Press [↩] button to return to previous menu when the product displays the submenu.
7. During menu operation, the icons of invalid options will change into grey.

OSD Language Setting

Press [**SETTINGS**] button, select **General & Privacy > System Manager > Language,** and press [⏎] button to enter. Press [▲]/[▼] button to select the desired language, and then press [⏎] button.

Channel Scanning

Before scanning, please make sure that the antenna has been connected properly.

After selecting **TV** source, press [**SETTINGS**] button, select **Broadcasting**, and press [⏎] button to enter. Then operate as needed.

Network Settings

Press [**SETTINGS**] button, and select **Connection > Network > Open Network Settings > Wireless** / **Wired**, and press [⏎] button to enter, then set as needed.

Note: Before using a wired network, connect one end of the network cable to the local network interface and the other end to the router.

Power On with Mobile

It allows remote systems to wake up the sleeping product by sending a frame of a specific format which the client anticipates. (It is available when network is connected.)

Press [**SETTINGS**] button, and select **Connection > Network > Expert Settings > Power On with Mobile**, then press [⏎] button to set it as on or off.

Multimedia Player

Before playing files in the local disk, insert the USB mass storage device into the USB interface.

Press [**SOURCE**] button, then select USB signal source and press [⏎] button to enter. Select the target file and press [▶](play) button to play it. Press [↩] button to return to previous page.

Attention:

1. Nonstandard USB devices can't be recognized probably; in this case, please replace a standard USB device;

2. The stream media system has certain restriction on the format of files; the playing will be abnormal if it is out of the system restriction;
3. Do not remove the USB device while playing, or else the system or device may have problem; Before replace the USB device, please turn off the machine's power supply;
4. The system supports standard USB1.1 and USB2.0 devices, such as USB mass storage devices and removable hard disks;
5. The maximum output current of the USB port of this device is 500mA, and the self-protection will be enabled if it is beyond this limit; please use external power supply if an external device of higher current will be connected;
6. The system is complicated; when it is reading or playing files, the screen may be still or certain functions may be invalid due to the compatibility and stability of the USB device; in this case, please turn off the device and re-initialize the system.

While playing, press [⏎] button to display or hide the toolbar. Press [◀◀(⏮)]/[▶▶(⏭)]/[▶]/[❚❚]/[■] button on the remote control to perform shortcut operation.

User Guide

Ask for more detailed operations, please refer to the **User guide**.

Press [**SETTINGS**] button, and select **Support > Open User guide > Guide** / **Troubleshooting** / **Recently Viewed Topics** / **User guide,** then press [⏎] button to enter.

Important Statement on Network Services

All contents and services obtained from this product belong to the third party and are protected by laws on copyright, patent right, trademark right and/or other intellectual property right. The said contents and services are only for your non-commercial purposes. It is not allowed to use any content or service without the authorization of the content owner or the service provider.

Our company will undertake no liability for any direct, indirect and accidental losses or damages caused by your or a third party's access to any content or service or any information or any third party software through this set under any circumstances.

Third party service may be changed, deleted or stopped without prior notice. Our company neither implies nor guarantees the continuous availability of some service or content within any period of time.


Our company is not held responsible for services related to the said service and content. Besides, we will not bear any liability for client service. Please directly contact relevant content and service providers if you have any problem and service request concerning relevant service or content.

Troubleshooting

- **Snowflake spots occur in the product images and there is noise in accompanying sound.**
  1. Check if the antenna plug is loose or the cable is in good condition.
  2. Check the antenna type (VHF/UHF).
  3. Adjust the direction and position of the antenna.
  4. Try to use signal enhancer.
- **There is neither display nor sound on the screen. The indication light is not on.**
  Check if the power line is connected.
- **Dotted line or strip disturbance occurs in product images.**
  Do not use electric hair dryer aside the product and adjust the antenna direction to reduce disturbance.
- **Double images occur on the product screen.**
  1. Use high oriented antenna.
  2. Adjust the direction of the antenna.
- **The product has no accompanying sound.**
  1. Adjust the volume to a proper degree.
  2. Press [🔇] button on the remote control to cancel mute mode.
- **No signal input images show on the machine screen. The indicator light is blinking.**
  1. Check if the signal connecting cable is loose or falls off. Reconnect it.
  2. The machine may be in standby mode, please reboot.
- **The remote control distance is short or out of control.**
  1. Remove the object to avoid blocking the remote control receiving window.
  2. Replace the battery.
- **The browser cannot access any link.**
  1. Ask the network administrator to obtain available IP address and other parameters.
  2. Check if the network connecting cable is normally connected.
  3. Consult the network service provider.
- **Online video play is very slow.**
  1. Please upgrade your network bandwidth to a higher one.
  2. Please try to replace with other addresses to obtain better resources.
- **Machine is slow, system crash, can't operate the machine.**
  Disconnect the power supply first, and connect the power supply after about 1-2 minutes, then turn on the product again.

Base Installation Instructions

Put the machine flat first, distinguish left and right base and base installation front and back direction, then install the bases in the bottom of the machine back cover as arrow direction in figure. Align screw holes, then fasten screws (notice that base module has to be adjusted at figure status, otherwise it cannot be installed in.)

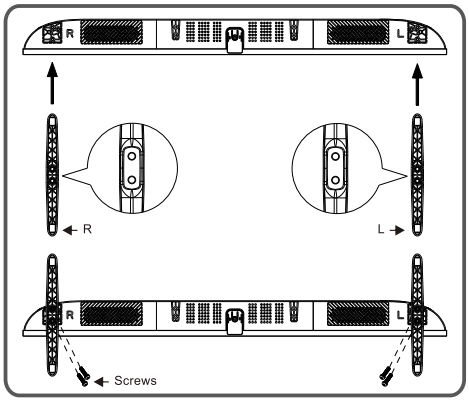


Remark: *The actual base and machine appearance may be different from pictures; please refer to the actual device.*

Use of Wall Mount

⚠ Warning

- Please purchase a suitable product wall mount when mounting your product on the wall.
- Ensure that the bearing capacity of the wall for mount installation is no less than 4 times the weight of the product and the wall mount so as to avoid falling.
- Please refer to the instructions provided with the product and wall mount for installation.
- Make sure there is no cable or conduit in the wall section where a wall mount will be installed.
- Please entrust a professional technician to complete installation. The company shall not be liable for accidents, personal injury or damage caused by improper installation of product.
- When using a frameless model, it must be placed on a horizontal surface or securely mounted on a vertical wall. Avoid positioning the screen at a forward-leaning angle relative to the horizontal plane. If the device exhibits forward-leaning, the maximum forward-leaning angle should not exceed 5°.

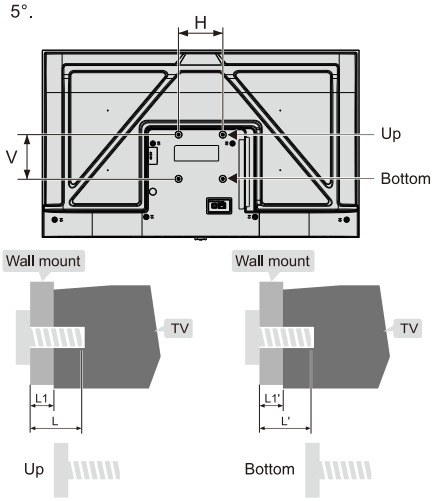

L1: Thickness of wall mount

L1': Thickness of wall mount

Distance between holes on the wall(H×V)(mm)	Required screws (recommended bolt length)(mm)
32"/43": 100×100	Up:2×M4 (6+L1≤L≤9.5+L1), Machine screws Bottom:2×M4 (6+L1'≤L'≤9.5+L1'), Machine screws

Note:

- If any screws are found in the screw hole for wall mount behind the product before installing the wall mount, the screws shall be removed and put in place for later use.
- Please buy the wall screws according to the actual situation.

ACONATIC

ลงทะเบียนรับประกันสินค้า

SCAN QR CODE

เพื่อรับสิทธิประโยชน์สูงสุด!

ง่าย / เร็ว / ปลอดภัย

ลงทะเบียนรับประกันออนไลน์ผ่าน QR หรือ Website

www.aconatic.com/register_warranty

เงื่อนไขการรับประกัน WARRANTY CONDITION		
สินค้าทุกประเภทมีระยะรับประกัน 1 ปี ยกเว้นที่ระบุในตารางเงื่อนไขการรับประกันพิเศษ 1 YEAR WARRANTY PERIOD IS GIVEN TO ALL PRODUCT CATEGORIES UNLESS STATED OTHERWISE IN THE FOLLOWING TABLE		
เงื่อนไขการรับประกันพิเศษ SPECIAL WARRANTY ★เฉพาะชิ้นส่วนที่รับประกันเท่านั้น ONLY THE WARRANTY PART★		
ประเภทสินค้า PRODUCT	**ชิ้นส่วนที่รับประกัน WARRANTY PART**	**ระยะประกัน WARRANTY PERIOD**
Digital TV SMART TV 32"up	หน้าจอ	1 ปี (YRS) 3 ปี (YRS)
Mini Bar & Beverage cooler	ตัวเครื่อง คอมเพรสเซอร์	1 ปี (YRS) 3 ปี (YRS)
ตู้เย็น 5Q up และ รุ่นพิเศษ AN-FR112	ตัวเครื่อง คอมเพรสเซอร์	3 ปี (YRS) 10 ปี (YRS)
แอร์เคลื่อนที่ Portable Air	คอมเพรสเซอร์ COMPRESSOR	3 ปี (YRS)
พัดลมไอเย็น Air cooler	มอเตอร์ MOTOR	2 ปี (YRS)
เครื่องฟอกอากาศ	1 ปี (YRS)	
Small APPLIANCE	1 ปี (YRS)	
AUDIO,RADIO DVD, STB	1 ปี (YRS)	
Wall mount & TV Stand wall mount	1 ปี (YRS)	

May 2025

รับประกันสินค้าผ่าน QR Code

1 สแกน
สแกน QR code




2 กดลงทะเบียน
กดลงทะเบียนรับประกัน
เพื่อกรอกข้อมูล



3 รับประกัน "สินค้า"



ขาตั้งทีวีแบบเคลื่อนที่
คู่มือการติดตั้งขาแขวน รุ่น AN-3243M

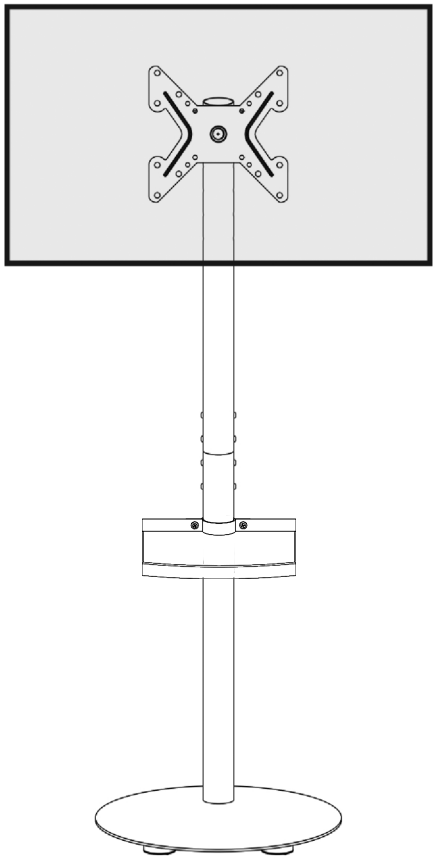

ก่อนติดตั้ง กรุณาตรวจสอบว่ารูยึด ขนาด และน้ำหนักของขาตั้งทีวีของตรงตามข้อกำหนดและมาตรฐานหรือไม่ หากมีข้อสงสัยเกี่ยวกับคำแนะนำหรือคำเตือน กรุณาติดต่อศูนย์เพื่อขอความช่วยเหลือ


⚠ ข้อควรระวัง

1. เมื่อติดตั้งขาตั้ง ให้ช่างผู้ชำนาญเป็นผู้ติดตั้งโดยใช้อุปกรณ์และเครื่องมือที่เหมาะสม และปฏิบัติตามข้อกำหนดในคู่มือ การติดตั้งที่ไม่ถูกต้องอาจทำให้ทีวีตกหล่นและเกิดการบาดเจ็บรุนแรง
2. ก่อนติดตั้ง ตรวจสอบว่าพื้นผิวรองรับสามารถรับน้ำหนักของอุปกรณ์และส่วนประกอบทั้งหมดได้อย่างปลอดภัย
3. ห้ามใช้เกินพิกัดน้ำหนักที่กำหนด เพราะอาจทำให้เกิดการบาดเจ็บรุนแรงหรือทรัพย์สินเสียหาย
4. ผลิตภัณฑ์นี้มีชิ้นส่วนขนาดเล็กซึ่งอาจทำให้สำลักได้หากกลืนเข้าไป เก็บให้พ้นมือเด็ก
5. ผลิตภัณฑ์นี้สำหรับใช้ภายในอาคารเท่านั้น การใช้งานภายนอกอาคารอาจทำให้ผลิตภัณฑ์เสียหายหรือเกิดอันตราย


⚠ การบำรุงรักษา

ตรวจสอบจุดเชื่อมต่อระหว่างขาตั้งกับทีวีด้วยตนเองเป็นระยะ เพื่อให้แน่ใจว่ายังมีความแข็งแรงอยู่ และสังเกตร่องรอยการหลวมหรือหลุดของสกรูจากการใช้งานเป็นเวลานาน
(ตรวจสอบอย่างน้อยทุก 3 เดือน) หากพบความเสี่ยงด้านความปลอดภัย ให้เปลี่ยนชิ้นส่วนหรือเสริมความแข็งแรงของการติดตั้งทันที

รายการชิ้นส่วนขาตั้ง

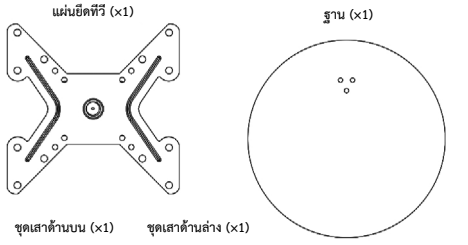


รายการอุปกรณ์ชิ้นส่วน (เพิ่มเติม)

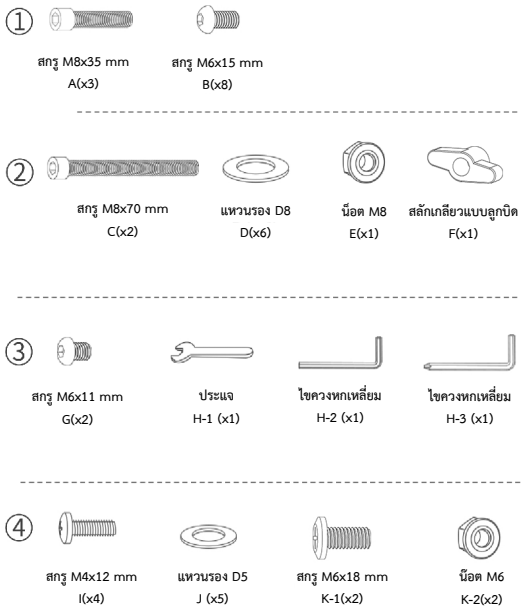


หมายเหตุ: เลือกใช้สกรูและน็อตตามขนิดข้างต้นให้เหมาะสมกับการใช้งานจริงของท่าน


ขั้นตอนที่ 1

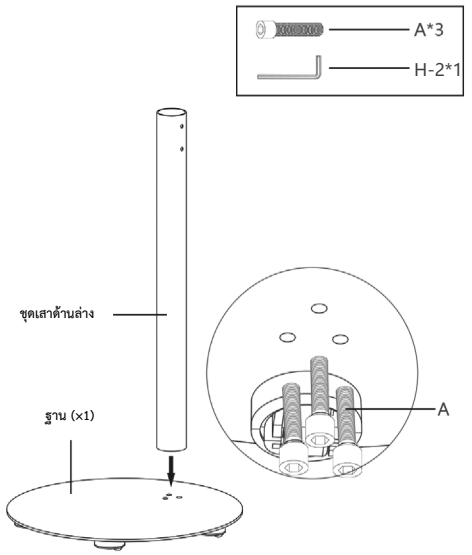


ขั้นตอนที่ 2

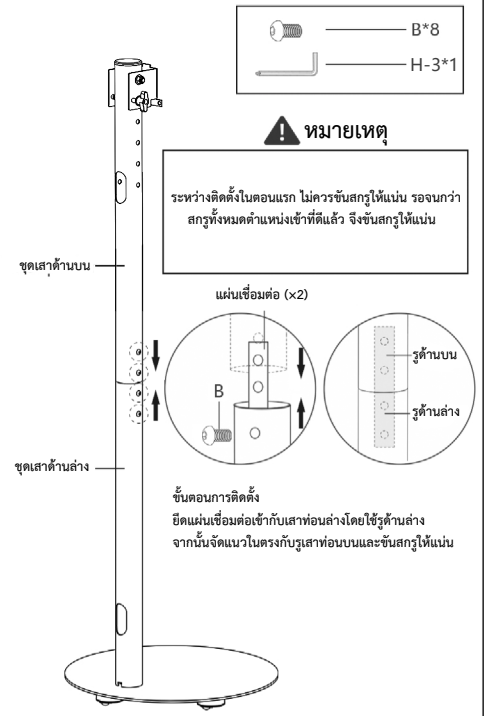

ขั้นตอนที่ 3

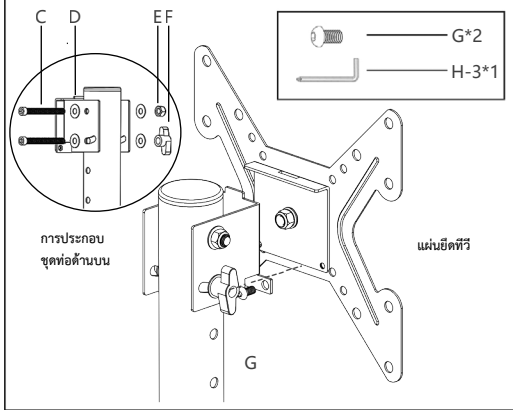


ขั้นตอนที่ 4

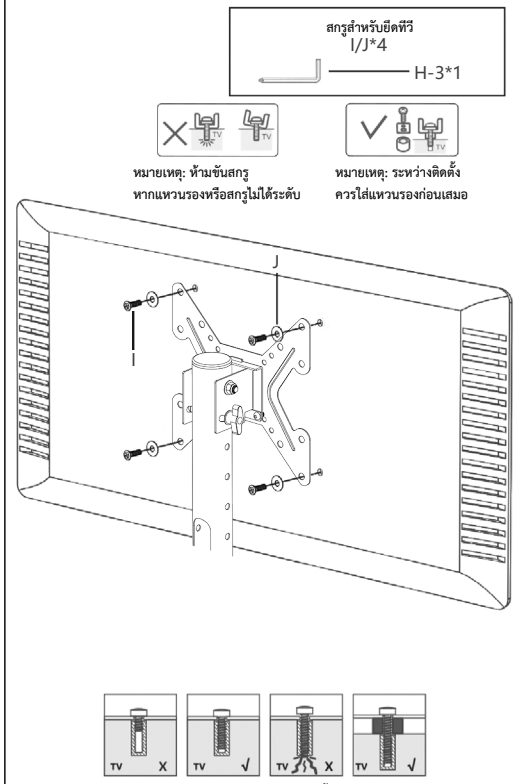



หมายเหตุ: ตรวจสอบให้แน่ใจว่าสกรูไม่สั้นหรือยาวจนเกินไป

ควรเลือกสกรูให้เหมาะสมกับการติดตั้งจริง และเลือกแหวนรองให้ตรงกับขนาดของสกรูที่ใช้ ทั้งนี้ต้องตรวจสอบว่าสกรูมีความยาวเหมาะสม ไม่สั้นหรือยาวเกินไป หากสกรูยาวเกินไปให้เพิ่มแหวนรองระหว่างขายึดและตัวเครื่องทีวีเพื่อให้ติดตั้งได้อย่างถูกต้อง

ขั้นตอนที่ 5

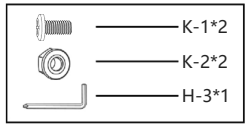


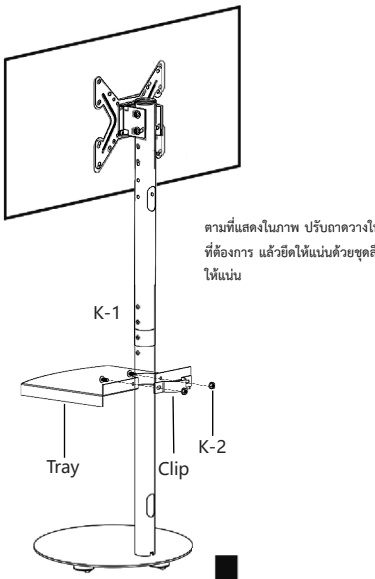

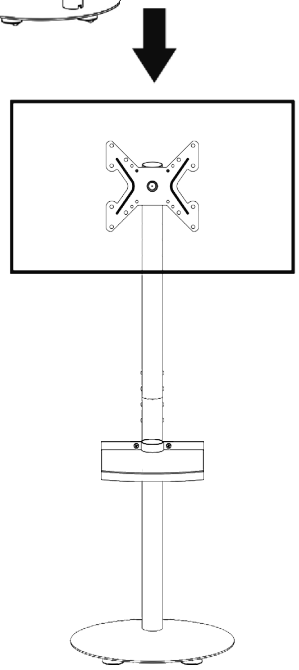

การปรับทิศทางแนวตั้ง

หากต้องการปรับจอเป็นแนวตั้ง คุณสามารถหมุน ทวน หรือ ตามเข็มนาฬิกา ดังรูป

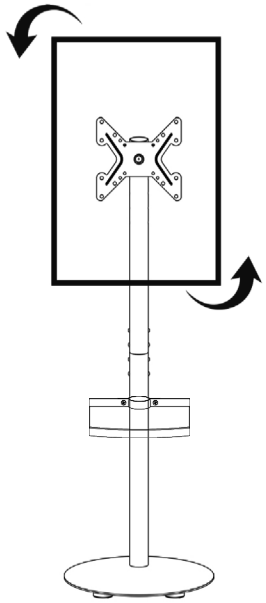

การปรับระดับความสูง

